

Ethernet Touch Call Station (ETCS)

GB Operation Instruction

798685.GB0
03.2020

Intended purpose

This products may only be used for the applications outlined in the catalogue and in the technical description, and only in conjunction with the recommended and approved external devices and components.

This documentation contains registered and unregistered trademarks. All trademarks are the property of the respective owners. The use of this documentation does not grant you a licence or any other right to use the name, logo and/or the label.

This documentation is subject to the copyright of Honeywell. The content must not be copied, published, modified, distributed, transmitted, sold or changed without the express prior written permission of Honeywell.

The information contained in this documentation is provided without warranty.

Safety-related user information

This manual includes all information required for the proper use of the products described.

In order to ensure correct and safe operation of the product, all guidelines concerning its transport, storage, installation, and mounting must be observed. This includes the necessary care in operating the product.

The term 'qualified personnel' in the context of the safety information included in this manual or on the product itself designates:

- project engineers who are familiar with the safety guidelines concerning fire alarm and extinguishing systems.
- trained service engineers who are familiar with the components of fire alarm and extinguishing systems and the information on their operation as included in this manual.
- trained installation or service personnel with the necessary qualification for carrying out repairs on fire alarm and extinguishing systems or who are authorised to operate, ground and label electrical circuits and/or safety equipment/systems.

Symbols

The following information is given in the interest of personal safety and to prevent damage to the product described in this manual and all equipment connected to it.

Safety information and warnings for the prevention of dangers putting at risk the life and health of user and maintenance personnel as well as causing damage to the equipment itself are marked by the following pictograms.

Within the context of this manual, these pictograms have the following meanings:



Warning - Designates risks for man and/or machine. Non-compliance will create risks to man and/or machine. The level of risk is indicated by the word of warning.



Note - Important information on a topic or a procedure and other important information!



Standards and guidelines - Observe configuration and commissioning information in accordance to the national and local requirements.

Hazard warnings on the system components



Warning – risk source.



Warning – dangerous electrical voltage.

Dismantling



In accordance with Directive 2012/19/EU (WEEE), after being dismantled, electrical and electronic equipment is taken back by the manufacturer for proper disposal.

© Honeywell International Inc./technical changes reserved!

This documentation is subject to copyright law and, as per Sections 16 and 17 of the German Copyright Act (UrhG), is neither permitted to be copied nor disseminated in any other way. Any infringement as per Section 106 of the UrhG may result in legal action.

Table of contents

1	General /Application	4
1.1	Related Documents	4
1.2	Target group	4
1.3	Disclaimer	4
2	Digital call station ETCS - Operation	5
3	Operation via touch screen	7
3.1	Unlock / login	8
3.2	Start page	9
3.3	Manual calls	12
3.4	"Schedule" page	26
3.5	"Drop-down" page	28
3.6	Advanced operations	31
4	Appendix	40
4.1	System limits	40
4.2	Error list	40
4.3	Configuration error	41
4.4	Disk Space	41
5	Installation	41
6	Inbetriebnahme	42
7	System overview	42
8	Requirements	42
9	Safety instructions	43
9.1	Isolation von externen Netzwerken	43
9.2	Protection against physical attacks	44
9.3	Protection against USB surge	44
9.4	Firmware updates	44
9.5	Changing passwords	44

1 General /Application

The ETCS (Ethernet Touch Call Station) digital remote call station forms part of a sound system for emergency purposes or voice alarm and public address system (VA/PA System) and, in Austria, a sound system for emergency purposes. It must be ensured that these components interact together in a manner appropriate to the function. Devices for use in demanding ambient conditions, such as cold stores, galvanising plants or corrosive atmospheres, must be suitable for this particular application or must be adapted using suitable protective measures.

1.1 Related Documents

These installation instructions are intended for qualified technicians or trained installers and contain all of the important information needed for assembling and installing VARIODYN® systems. Additional information on assembly, operation, commissioning, and configuration can be found in the following documents:

Part No.	Name
798662.GB0	Operating Instructions for the VARIODYN® D1 System
798663.GB0	Installation Instructions for the VARIODYN® D1 System
798664.GB0	Commissioning Instructions for the VARIODYN® D1 System and VARIODYN® D1 Comprio
798683.GB0	Installation Instruction VARIODYN® D1 devices and accessories



Additional and current information

The described features, specifications and product related information in this manual correspond to the date of issue (refer to date on the front page) and may differ due to modifications and/or amended Standards and Regulations of the System design, Installation and Commissioning.

Updated information and declaration of conformity are available for comparison on the www.variodyn-d1.com bzw. www.hls-austria.com homepage.

VARIODYN® D1-Systems are registered trademarks in Germany.

1.2 Target group

These instructions are intended for Ethernet call station operators and trained installers; they are responsible for transferring audio files to the network devices. These instructions provide information for operators and trained installers on the necessary measures for the secure operation of the ETCS.

These instructions describe the security procedures implemented, and those recommended by Honeywell, for using the Ethernet Touch Call Station. Please also refer to the security advice in Chapter 13.

1.3 Disclaimer

Honeywell International Inc. (HII) reserves the right to change without warning the technical data and other information contained in this document. The user should always contact HII to inquire if any such changes have been made. The information in this document does not in any way constitute a commitment on the part of HII. HII assumes no liability for any technical or editorial errors contained herein, nor for direct, concrete, incidental or consequential damages arising in connection with the provision, supply or use of these materials. HII excludes any liability for the suitability of the selected software and/or hardware for achieving the user's desired outcomes. To the extent permitted by law, Honeywell excludes any written or oral guarantee, including the warranty implied by fair marketable quality and suitability for a given purpose. This document contains proprietary information protected by copyright. All rights reserved. This document, or extracts from it, may not be copied, reproduced or translated into another language without written permission from HII.

2 Digital call station ETCS - Operation

ETCS offers a 7" / 17,78 cm touch screen for display and operation which provides a user-friendly interface. The LED are used for status indications which include microphone fault, system fault and connection states of two redundant cables. A red button with cover can be configured for emergency announcement. The gooseneck microphone is replaceable and monitored by ETCS. The loudspeaker can be used for pre-listening audio files locally and intercom between the call stations.

The ETCS is designed for a redundant cable connection to an Ethernet network and possesses an external audio input and output for the connection of audio devices such as CD players etc. Up to three DKM plus digital key modules can be connected.

The ETCS broadcasts audio files to various network users via Ethernet connections. Recorded audio files can be transmitted to selected zones or network devices by means of the touch screen. This allows time-critical messages to be delivered to selected message groups.

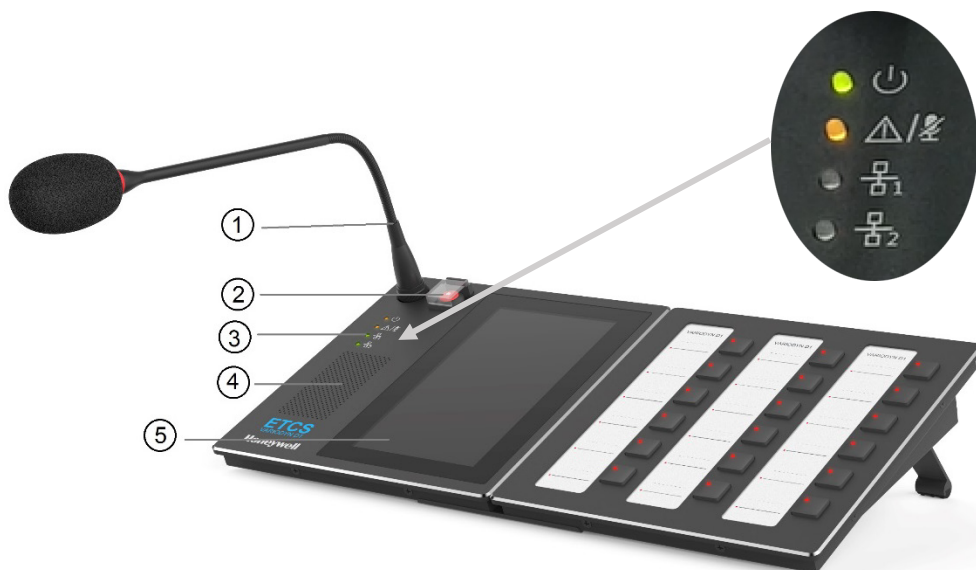


Fig. 1: Digital call station (ETCS) with optional DKM plus key module for redundant call stations

①

Microphone

The gooseneck microphone is constantly evaluated acoustically for proper function. To ensure vocal clarity, maintain a speaking distance of approx. 10 cm from microphone.

②

Alarm key with cover

A Freely programmable button with a VA messages (broadcast) function. Before using the key, you are required to log in to the device and the "VA broadcast interface" (see Chap. 3.6.5).

The alarm button is provided with a cover to protect against unintentional operation. To activate the manual alarm mode, lift the protective cover and then press the button.

Functions of the integrated LED:



Off: Function inactive



Permanently lit red → function active (e.g. running an announcement)



Flashing quickly (0,2 sec. on and 0,2 sec. off) → Function not possible (occupied)

Flashing slowly (0,6 sec. on and 0,6 sec. off) → Partially connected

Different long flashes (on and off) → Pre-signal mode



If a DKM plus is connected to the ETCS, the DKM plus can only be used after logging into the device (see above).
















LED lits



LED flashes



LED off

③	Status indicators Four LED indicate device status: <ul style="list-style-type: none"> Power supply status (3.1) System/microphone error (3.2) Main connection status (3.3) Backup connection status (3.4)
3.1	 Off: no operating voltage  Green permanently lit: Operating voltage available, device active
3.2	 Off: The microphone is good for use and no error displays  Yellow permanently lit: The ETCS has errors other than a microphone error or a Network device (DOM / Comprio) has an error. The common fault LED of DOM is yellow/flashing yellow. Detailed fault information can be called up via the display.  Yellow flashing: There is a microphone error. Microphone is not ready for operation! or the CPU is overloaded and the display "CPU overload" appears (displayed prior to a system error). By deleting some active announcements from the "queue" in the display, the CPU overload message is usually cancelled. If this fault message continues to be displayed, the performance of ETCS may be affected.
3.3	 Off Missing connection cables and working in standalone mode
3.4	 Off
3.3	 Off The device is ready for use.
3.4	 Green permanently lit (The MAIN output is active without a BACKUP connection cable.)
3.3	 Green permanently lit The device is ready for use.
3.4	 Off (The BACKUP output is active without a MAIN connection cable.)
3.3	 Green permanently lit The device is ready for use.
3.4	 Green permanently lit (MAIN output is active, and BACKUP output deactivates in stand by.)
④	Loudspeakers e.g. for listening to stored messages or intercom conversations (two-way intercom)
⑤	Display as 7" / 17,78 cm-touchscreen


3 Operation via touch screen

The ETCS offers a user-friendly touch screen with the following operating options:

- start manual and predefined calls as well as scheduled announcements.
- Check the “Error”/ “Queue”/ “Recent” list and other system information.
- Adjust the audio input/output volume.
- Additional functions can also be controlled via the touch screen.

Touching on ‘<’ or ‘>’ in the menu allows navigation to the previous or following step.

Example: Go back to previous step –
< Group

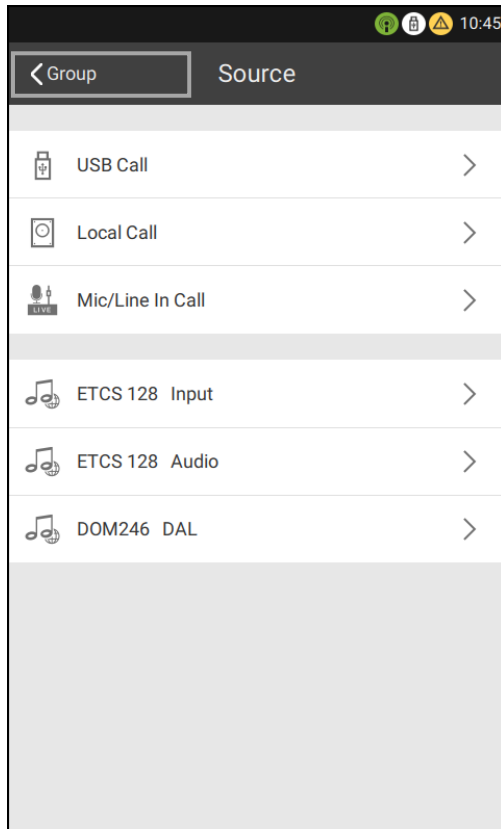

Example: Go to next step >

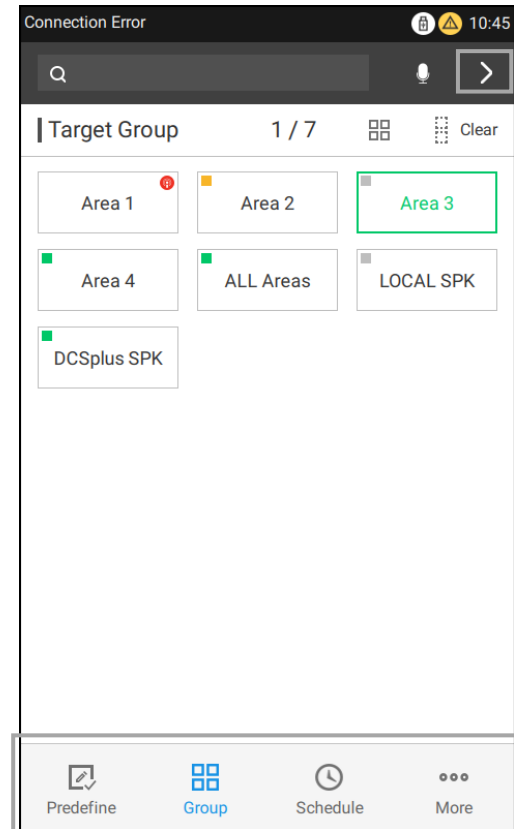


Fig. 2: Operating options

There are four main function views on the menu of the ETCS ①:

Function	Operation
Predefine	<ul style="list-style-type: none"> • Start, pre-listen, and send a predefined call. • Add a new schedule call based on this predefined call.
Group	<ul style="list-style-type: none"> • Show group status. Start, pre-listen, and send a USB/Local/Live/Network call. • Change the call properties • Add a predefined call and add schedule call
Schedule	<ul style="list-style-type: none"> • Turn on / off the schedule call • Edit and delete the schedule call
More	<ul style="list-style-type: none"> • Device settings (user name, IP, date and time, language, storage, version, etc.) • Hardware test (Self-test and network test) • Recordings • Volume control of the local and network devices • Start the VA Broadcast • Log Export

3.1 Unlock / login

When the screen is locked, just pull up as indicated to unlock it, which will then open a login page.

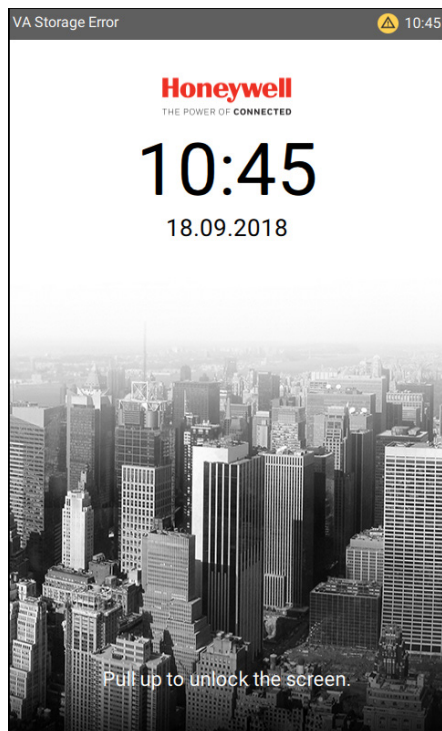


Fig. 3: Locked screen of ETCS

Use the default user name ("admin") and password ("123456") to log onto the device.

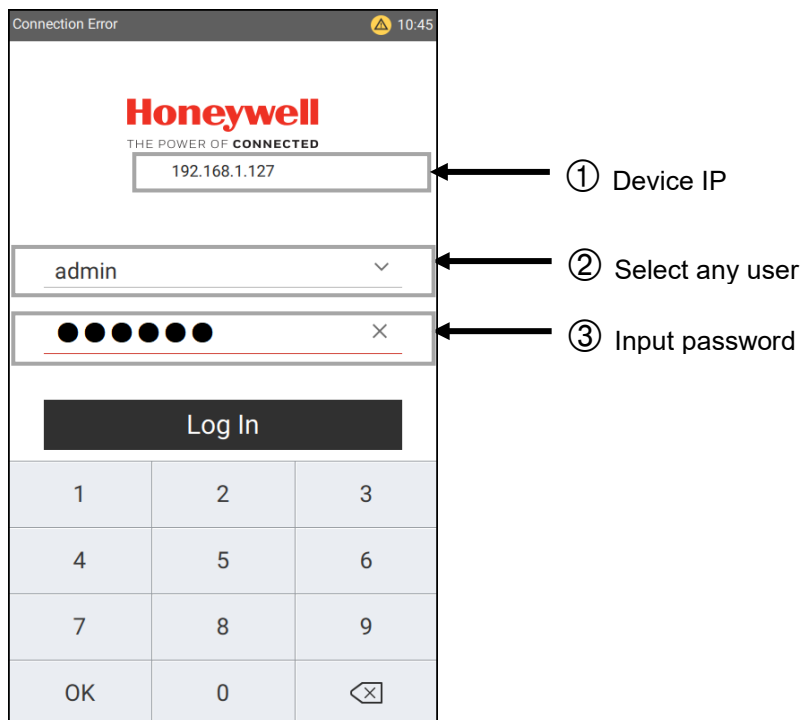


Fig. 4: Login page of ETCS

3.2 Start page

After successfully logging in, the “Predefine” page is shown by default.









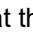

Fig. 5: Homepage of ETCS (“Predefine” page)

- | | |
|---|---|
| ① | Status bar
Time, system notifications, connected USB drive, system errors and active announcements are displayed. For example: |
| |  Error: An ETCS or device error detected in the D1 system. |
| |  Call playing: A call is playing in the queue |
| |  USB connection: An external USB drive is connected to the device |
| ② | Toolbar
Contains a search bar and edit button. The search bar helps users find required predefined calls quickly. Touch “Edit” to change to the “Edit” mode where only predefined calls made on the ETCS can be edited.
 Only the root and poweruser can edit predefined calls. |
| ③ | “Predefine” displayed
Green background means that predefined calls are being broadcasted as shown on the interface. In case of presignal audio on the broadcast, the “Predefine” indicator will flash green. |
| ④ | Predefine Call list
Displays all predefined calls belonging to the current user. The □□□ button at the end of each predefined call allows users to check detailed information about the predefined call.
 Symbol to the left of the predefined call: the call has encountered an error and cannot be broadcasted. Touch this icon to view error details (see section “4.3 Configuration Error” for more information). |
| ⑤ | Function view
Easily access and switch between the most commonly used functions (“Predefine”, “Group”, “Schedule”, and “More”). |

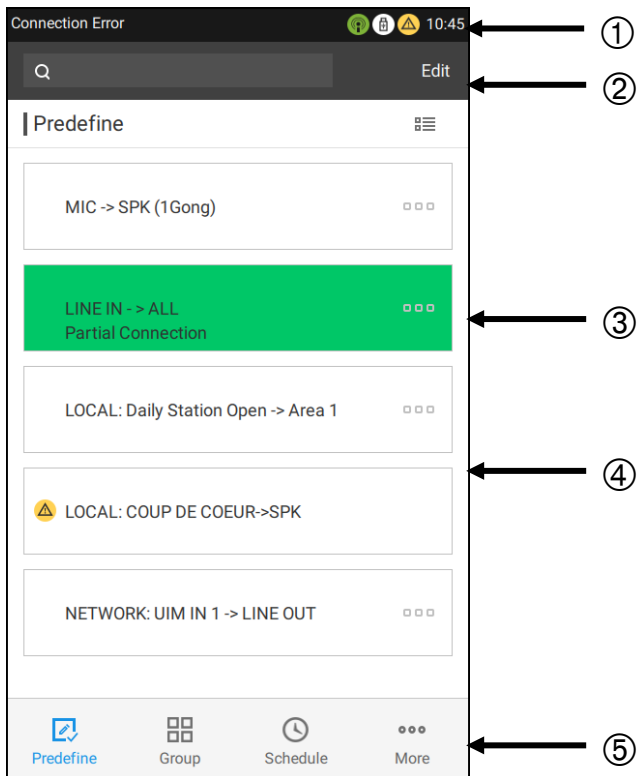Start / stop a predefined call:

- Touch the predefined call on the “Predefine” page to initiate broadcasting. Touch it again to stop broadcasting.

Or

- Touch the  button at the end of each predefined call to enter the “Details” page.
- Touch  to start a call and touch it again to stop the call.
- After touching the start button, the button will change to one of the following:




Call waiting for playback target or the source may be occupied.



Call playing with presignal.



Call playing and fully connected.

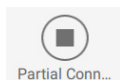

Call playing but partially connected.



The start buttons on all pages share the same status indicators.

Check details about a predefined call:

- Touch the  button at the end of each predefined call, and then the “Details” page will be shown.

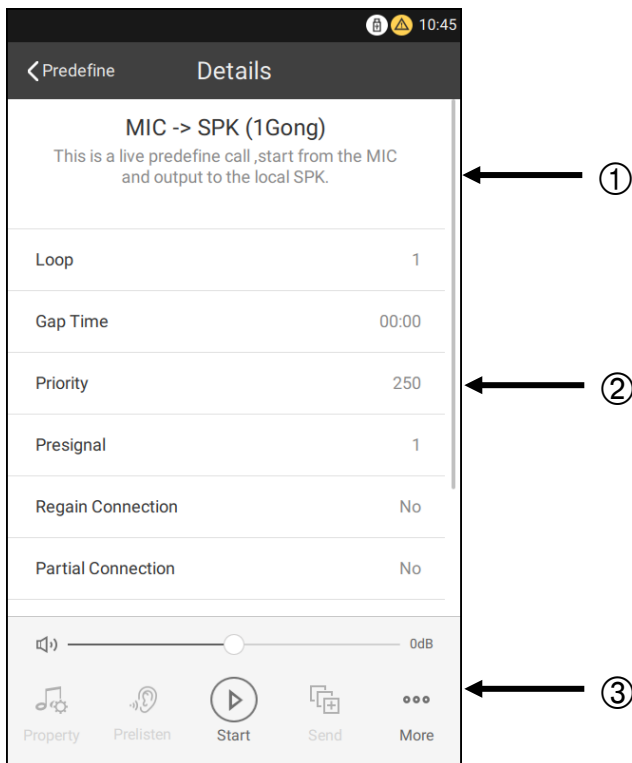


Fig. 6: “Details” page

① Predefined call name and description

- ② Details include the following:
- Number of repetitions:** The repetitions number of the call, ranging from “1” to “250” or “Forever”.
 - Time between repetitions:** Time until the next repetition begins.
 - Priority:** The priority of this predefined call.
 - Presignal:** The gong can sound 1 x, 2 x or 3 x as a presignal.
 - Continue connection and partially connected:** Display Conflict for this call.
 - Volume:** The volume is relative to the base volume of the respective source (microphone, audio file, or line in) and is applied during calls.
 - Source:** The configured sources assigned to this call.
 - Group:** The single/multiple group(s) assigned to this call.

③ Operation area

“Prelisten”, “Start”, or “Send”, as well as perform some advanced operations in “More” for a predefined call. “Prelisten” and “Send” are not available for live predefined call (source assigned to microphone or line in), and their properties cannot be changed. Under “More”, “Add Schedule Call” copies the current predefined call to the list of schedules. The volume bar can only be used to adjust the source volume of predefined calls activated by the “Start” button.



- Only the volume of local audio sources being broadcasted may be adjusted, not network audio sources.
- Prelisten has the highest priority and takes place via the local loudspeaker. If other announcements are being made at the same time over the local loudspeaker, these may be interrupted or mixed with other announcements.
Pre-selected audio files for listening via the local loudspeaker are stored in the active playlist.

3.3 Manual calls

Navigate to the “Group” page to start a manual call.

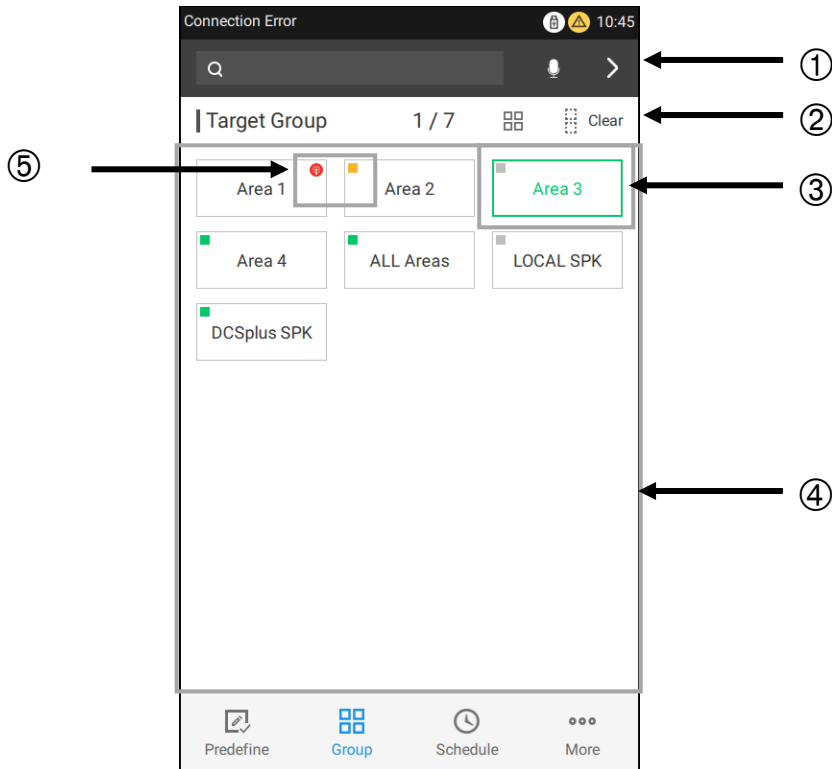


Fig. 7: “Group” page

①	Toolbar Contains a search bar, a quick MIC announcement button, and a button „>“ (next). If one of the target groups is selected, a “next” button will be shown. Touch it to navigate to the “Source” page. The quick MIC announcement button allows users to start a MIC announcement on the current page without navigating to another page, which is helpful for starting an emergency call.
②	1 / 7 Selected group number / Total group number List view Touch to change the view of the list. It is possible to switch between the list view and the button view. Button “Clear” / “select all” Touch to clear all selections or select all target groups.
③	Selected status The border and text will turn green when the target group is selected.
④	Target Group list Display all the groups belonging to the current user.
⑤	Target group status <ul style="list-style-type: none"> Red speaker: Busy → The group is an announcement. Gray square: Offline → The group is unavailable. Yellow square: Error → The group may not be working properly. Green square: Available → The group is ready.

Touch “>” to show the “Source” page.

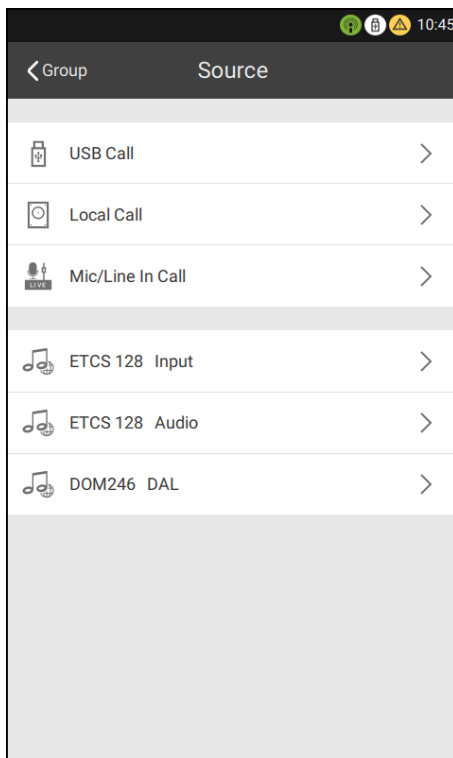


Fig. 8: “Source” page

The ETCS provide two types of sources for the user to play back: local sources and network sources.

- Local sources - such as USB, microphone and locally stored announcements.
- Network audio source - such as DOM / Comprio DAL input, ETCS audio input, and ETCS local audio files.

USB Call	An external USB drive as the source
Local Call	Audio files stored on this device as the source, which may be locally recorded files or audio files uploaded on the device
Mic/Line in Call	A microphone or line in of the ETCS as the source
XXX Input	The audio input (microphone and line in) of the ETCS XXX as the source
XXX DAL	The DAL input (microphone and line in) of the DOM / Comprio XXX as the source
XXX Audio	Local audio files of the ETCS XXX as the source

XXX indicates the device name.

3.3.1 “USB Call” page

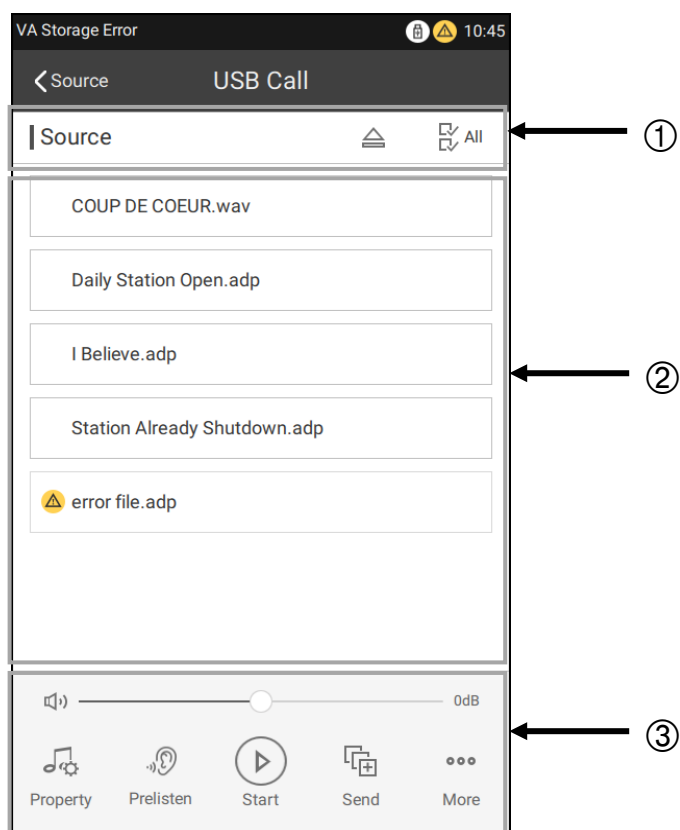


Fig. 9: “USB” page

① Touch  to eject the USB drive. Touch  All to select all audio files or clear selected files.

② **Source list**
Displays recorded source files stored on the USB drive. It is possible to display and play back *.adp and *.wav files on the “USB” page.



Audio files to be broadcasted must be put in a root directory of the USB drive; otherwise, the device cannot identify the audio files there.

③ **Operation area**
Change “Property”, “Prelisten”, “Start”, or “Send” here, and perform some advanced operations under “More” for manual announcements. “Prelisten” and “Send” are not available for live announcements. Under “More”, “Add Predefine Call” and “Add Schedule Call” are provided for copying the current manual call to the “Predefine” list or “Schedule” list. The volume bar can only be used to adjust the source volume of calls activated by the “Start” button.



- Only the volume of local audio sources being broadcasted may be adjusted, not network audio sources.
- Prelisten has the highest priority and takes place via the local loudspeaker. If other announcements are being made at the same time over the local loudspeaker, these may be interrupted or mixed with other announcements.
Pre-selected audio files for listening via the local loudspeaker are stored in the active playlist.

Touch “Property” on the “USB Call” page to open the “Call settings” page.

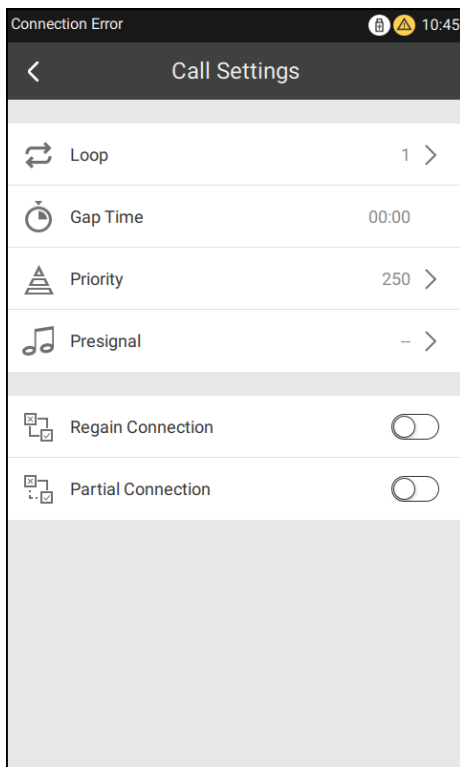


Fig. 10: “Call settings” page

Available call properties:

- Number of repeats
- Time between Loop
- Gap Time
- Priority
- Presignal
- Regain Connection
- Partial Connection

If the number of repeat cycles is set at one, the option to set the ‘time between repeats’ is deactivated.



The source volume can be adjusted in real time. The other parameter settings come into effect with the next announcement.



The ‘number of repeats’ and ‘time between repeats’ options are not available during live or network announcements.

Touch “More” on the USB page to display the following:

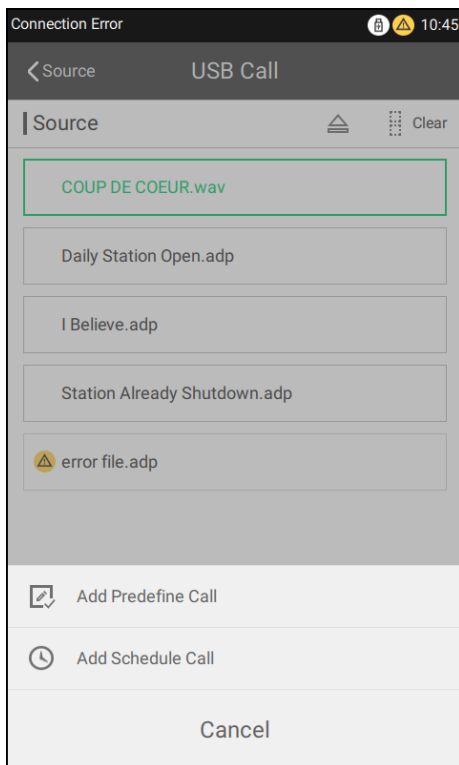


Fig. 11: “More” page for calls

In the case of a manual message, it is possible to create a new predefined calls or scheduled calls by touching on the "More" button.

After touching “Add Predefine Call”, the name of the predefined call may be entered. Touch “OK” on the top right. Add the current setting broadcast to the predefined call list.

After touching “Add Schedule Call”, the scheduled call interface will appear. Enter the time, name, and repeat, loop, and gap time of the scheduled call. Then, add it to the schedule call list by touching “OK” on the top right.



Only the root and power user can achieve these actions. One ETCS supports manual adding or configurations of 100 predefined calls and 50 scheduled calls.

3.3.2 “Local Call” page

Text phrases stored in the device or on a device on the network can be played back. Text phrases are organized into message groups, which are then read from the audio database by quantity, name, and content. The database can either be local (uploaded by D1 Designer) or on the network (loaded onto the device from a remote ETCS).



Fig. 12: “Local Call” page

- | | |
|---|---|
| ① | Playback text phrases
List that displays text phrases selected to playback. Select and play back phrases from different message groups (if necessary). Example see Fig. above: select the audio “this is a test audio” on the group “test” and “20190128_111725” on the group “Recording”. The playlist is then labeled as this is a “test” audio 20190128_111725”. |
| ② | Message group
Displays all message groups. Recording message groups are automatically generated after local recordings, and do not need to be uploaded with the D1 Designer software. |
| ③ | Selected group content
Displays text phrases belonging to the selected group. |

3.3.3 “Mic/Line In Call” page

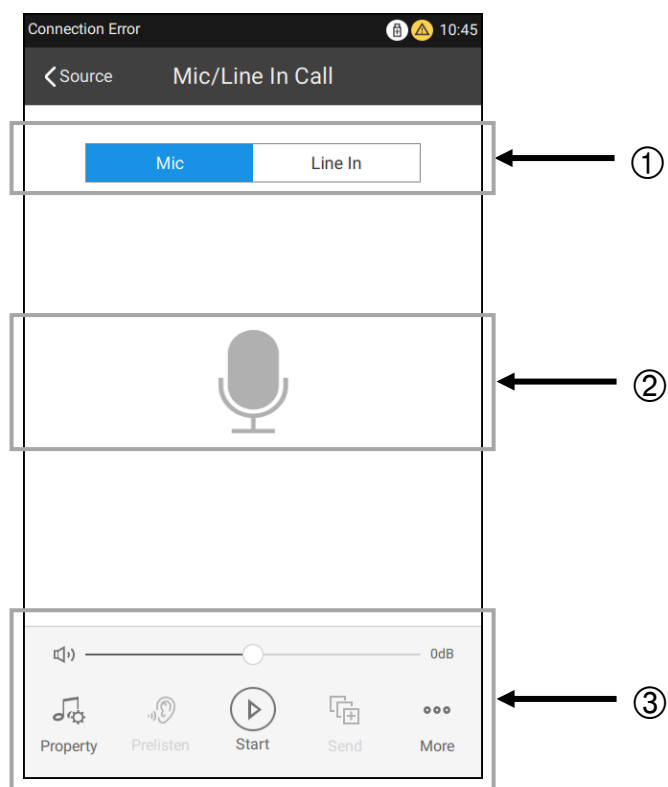


Fig. 13: “Mic/Line In Call” page

①	“Mic” and “Line In” tab Touch to switch the source between “Mic” and “Line In”. The audio source will be highlighted in blue when selected.
②	Source icon Indicates the current source in use (“Mic” or “Line In”).
③	Operation region “Prelisten” and “Send” are not available for live announcements.

3.3.4 “Network Call” page

The “Network Call” page delivers audio from the VARIODYN® network, which can be “Mic” / “Line In” or the audio source of the network-connected ETCS or the DAL input of the network-connected DOM.

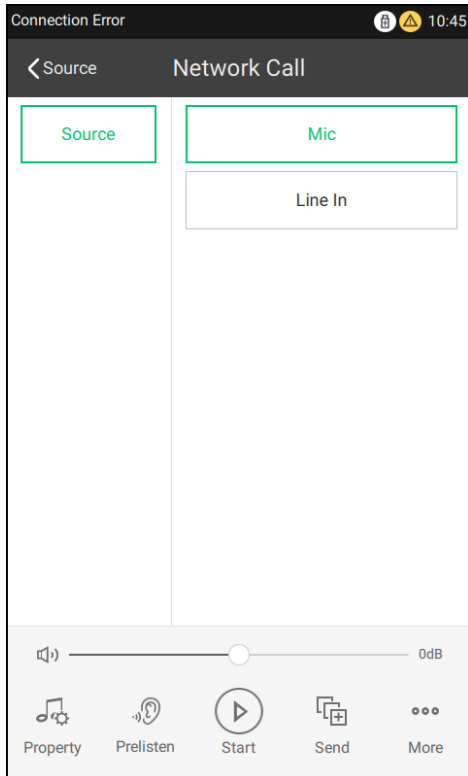


Fig. 14: “Network Call” page (e.g. ETCS input)



All the network calls will use the same call property.

3.3.5 Start Manual calls

Start a USB Call:

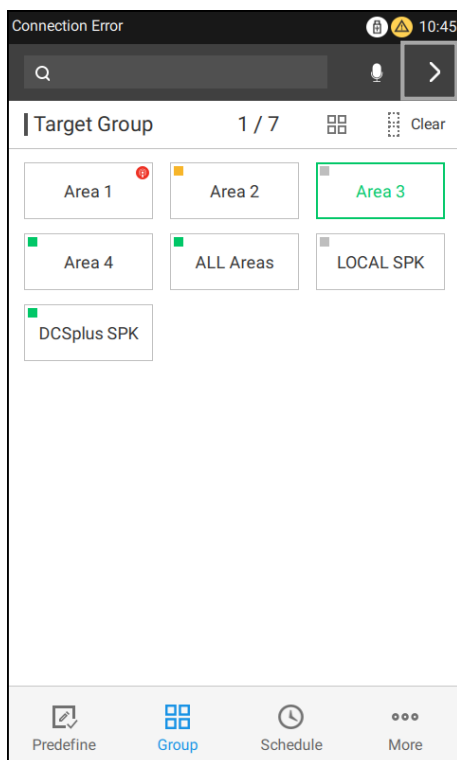


Fig. 15: "Group" page

1. Navigate to the "Group" page and select one or more of the required groups.
2. Touch ">" to enter the "Source" page.

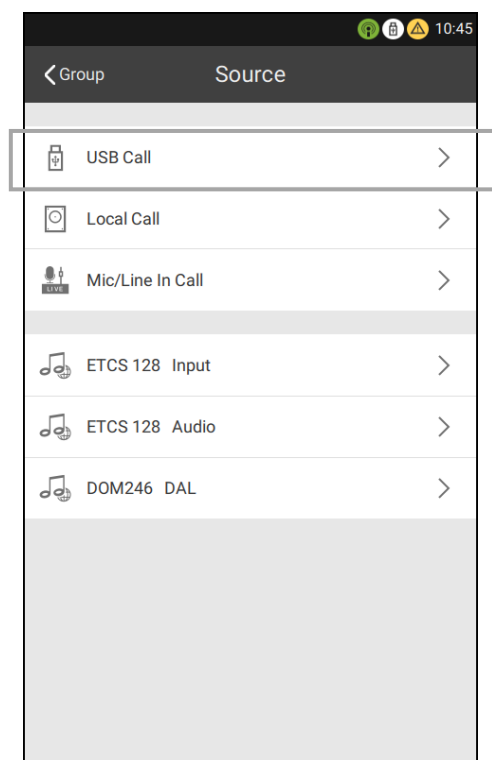


Fig. 16: "Source" page

3. Select the source type as "USB Call" on the "Source" page.
4. Select one or more sources from the source list on the "USB Call" page.

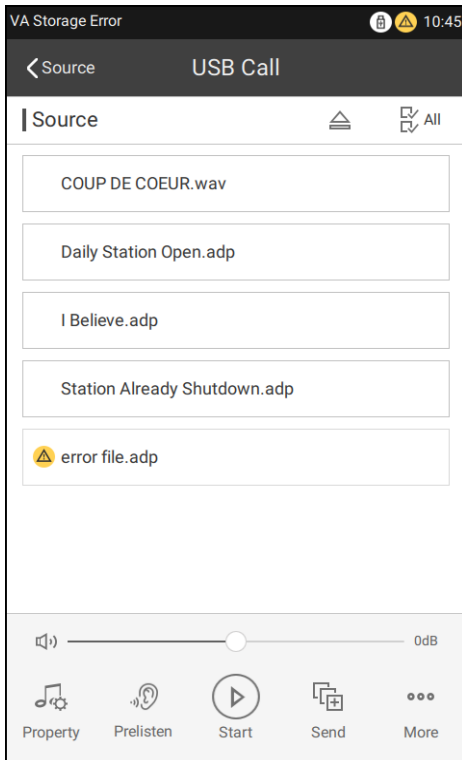







Fig. 17: "USB Call" page


5. Touch  to configure the call parameters (Optional).


6. Touch  to prelisten to the selected source on the local speaker and touch it again to stop it (Optional).


7. Touch  to start the call and touch it again to stop it.
After touching this start button, it will change to one of the following:

 : Call waiting for playback (target or the source may be occupied).

 : Call playing with presignal.

 : Call playing and fully connected.

 : Call playing but partially connected.

8. Touch  to send the call to the queue (Optional).
When being sent, a message prompt will appear on top of the page. The call sent to the queue can only be stopped via the "Drop-down" page.

Start a Local/Network call:

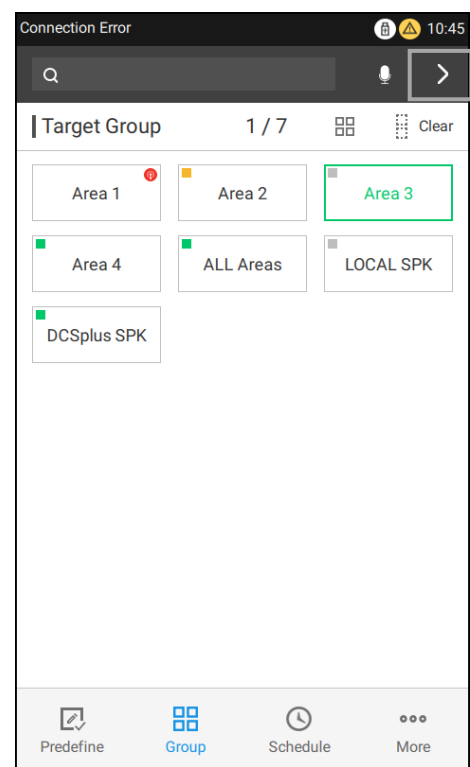


Fig. 18: “Group” page

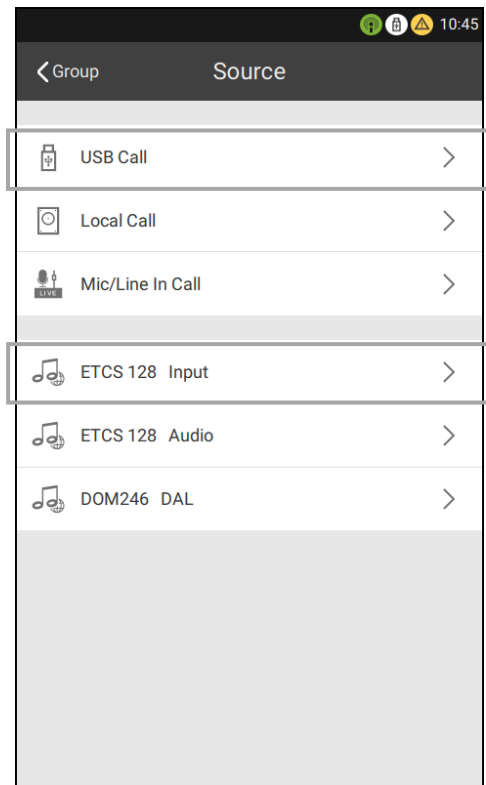


Fig. 19: “Source” page

1. Navigate to the “Group” page. Then, select one or more of the required groups.
2. Touch “>” to enter the “Source” page.

3. Select the required source type (local /network audio) on the “Source” page.
4. Select one message group and the corresponding text phrases. The audio name will be added onto the playlist.
5. Select another message group and the corresponding text phrases (Optional). The audio name will be added onto the playlist.

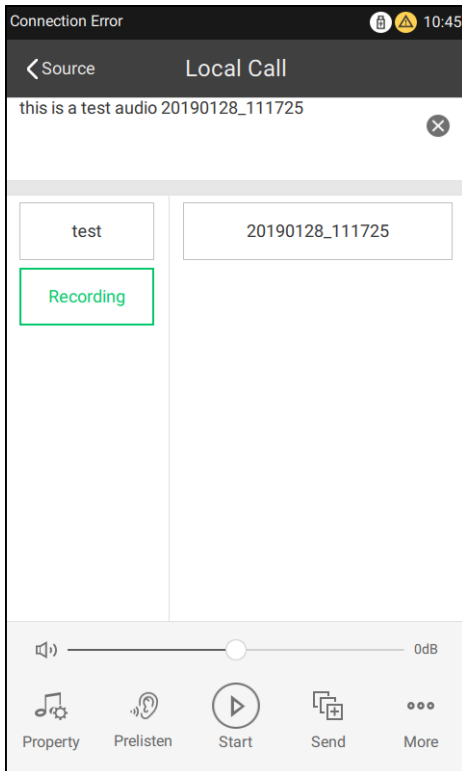
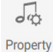
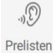
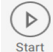



Fig. 20: Configure the call parameters

6. Touch  to configure the call parameters (Optional).

7. Touch  to prelisten to the selected source on the local speaker. Touch it again to stop it (Optional).

8. Touch  to start the call and touch it again to stop it.

9. Touch  to send the call to the queue (Optional).

Start a live call:

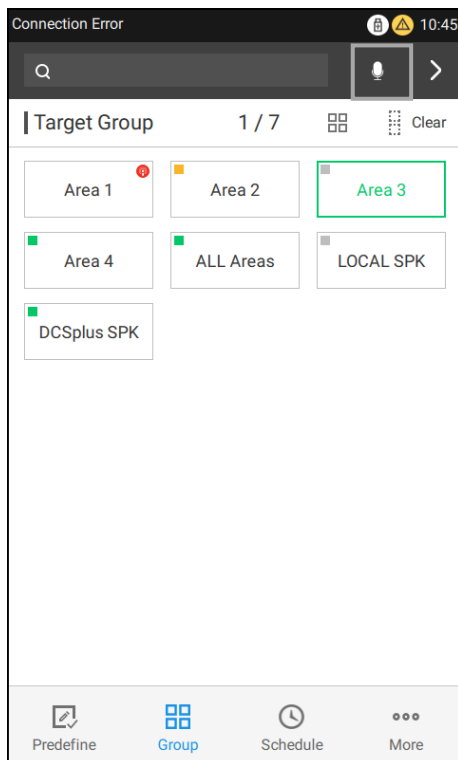


Fig. 21: “Group” page

OR

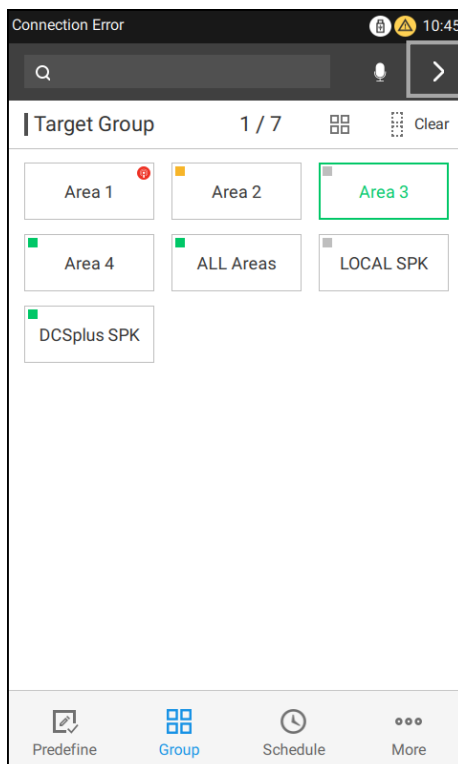
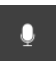


Fig. 22: Navigate to “Source” page

1. Navigate to the “Group” page and select one or more of the required groups.
2. Touch  to quickly start a MIC announcement. The connection parameters used for the quick announcement are those set on the “Mic/Line In Call” page.
3. Touch “>” to enter the “Source” page.

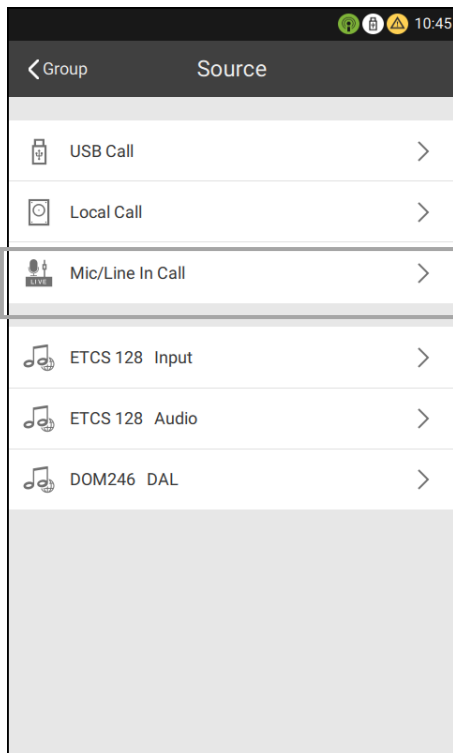


Fig. 23: "Source" page

4. Select "Mic/Line In Call" on the "Source" page.

5. Choose the required source by touching the "Mic" or "Line In" tab.



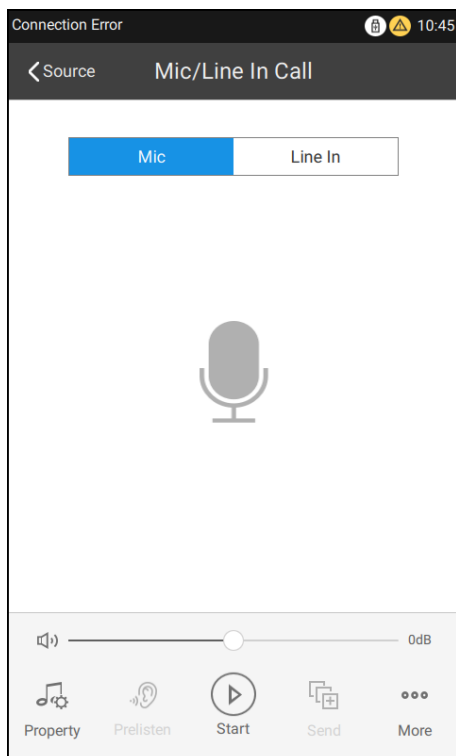


Fig. 24: "Mic/Line IN Call" page

6. Touch  to configure the call parameters (Optional).

7. Touch  to start the call and touch it again to stop it.

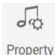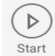

When playing from "Line In", connect the external audio input device (e.g. mobile phone or PC) to the ETCS and touch the play button on the "Mic/Line In Call" page and the input device.

3.4 “Schedule” page

Available parameters of scheduled calls:

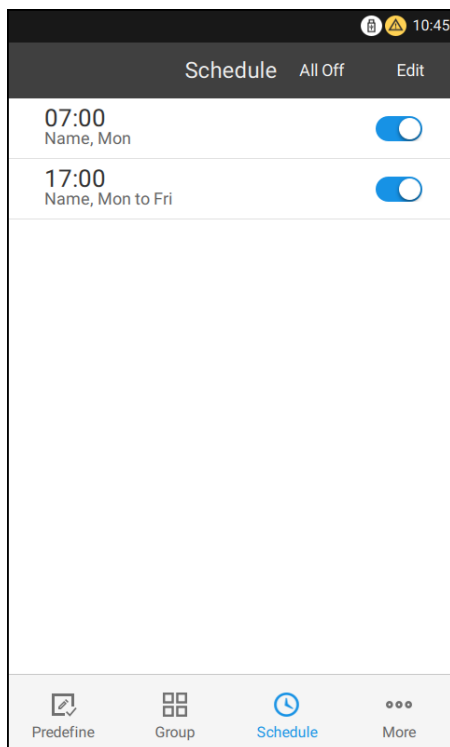


Fig. 25: “Schedule” page

For specific broadcasts within a specified timeframe, simply configure the scheduled calls via D1 Designer or directly on the ETCS interface. The “Schedule” page will display the broadcasts of current user. Touch “All On”/ “All Off” on the interface to turn on or close all preset scheduled calls.

Touch “Edit” to change to the editing mode. Then, you can modify the scheduled call settings or delete the call. Only scheduled calls configured on the ETCS interface can be modified and deleted, while those configured on D1 Designer cannot.

Time: the start time of scheduled calls.

Name: the name of the scheduled call.

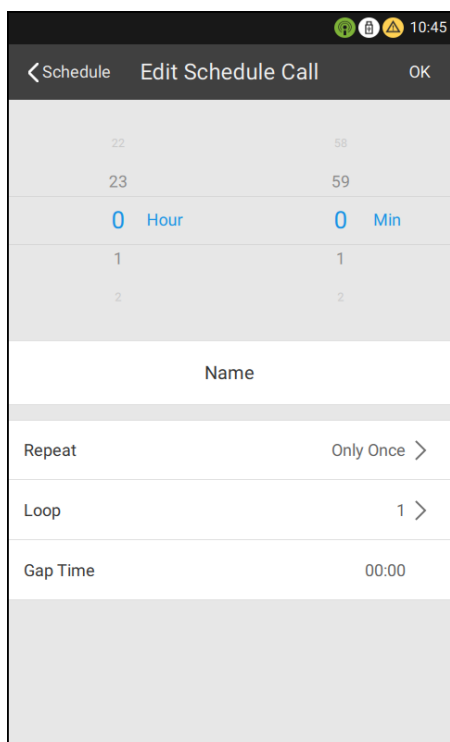


Fig. 26: “Edit Schedule Call” page

- **Repeat:** the scheduled calls activated for any weekday. Without any weekday selected, the call is activated “Only once”.
- **Loop:** the loop number of calls, ranging from “1” to “250” or “Forever”.
- **Gap Time:** a gap between the completion of the current calls and the start of the next looped calls.

Add a scheduled call (from a predefined call):

1. Navigate to the "Predefine" page.
2. Select the predefined call and then touch □□□ at the end of it to enter the "Details" page.
3. Touch "More" in the operation region and then select "Add Schedule Call".
4. Set the parameters for the scheduled call.
5. Touch "OK" to copy it to the schedule.
6. Navigate to the "Schedule" page to find the newly added item. The newly scheduled call will automatically turn on.

Add a scheduled call (from a manual call):

1. Navigate to the "Group" page.
2. Select the required "Group" and then touch ">".
3. Select the source type from the source list.
4. Select the required audio.
5. Touch "More" in the operation region and select "Add Schedule Call".
6. Set the parameters for the scheduled call.
7. Touch "OK" to copy it to the schedule.
8. Navigate to the "Schedule" page to find the newly add item. The newly scheduled call will automatically turn on.



Begin with step "a" whenever you want to add a scheduled call. An ETCS can schedule up to 50 calls.

3.5 “Drop-down” page

As on a touchscreen phone, drop down the ETCS to display an interface with a playback “Queue” and a “Error” list, as well as a “Recent” list. If there is an active call or an error has occurred on the system / device, it will appear on this page.

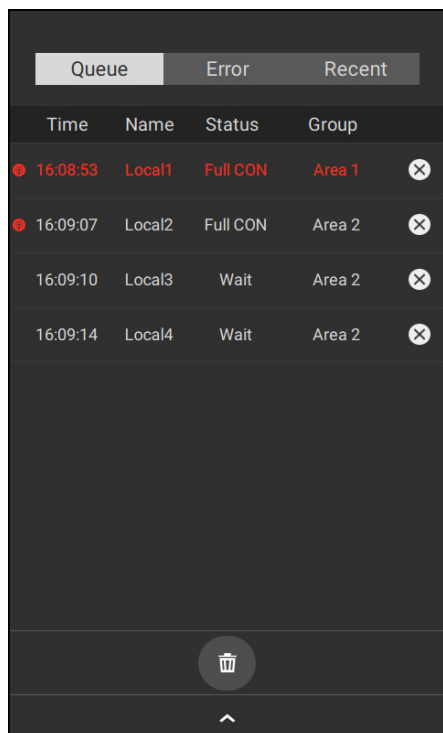


Fig. 27: Page “Drop-down” page (playback queue).



Indicates a call is playing.




Stops a call from broadcasting and removes it from the playback queue.



Clears the playback queue.

Alarm calls with a priority level from 1 to 20 on the playback queue are highlighted in red and appear at the top of the queue. To access details about the broadcast on the playback queue just touch the relevant broadcast connection to view it.


The “Details” page of the broadcast:

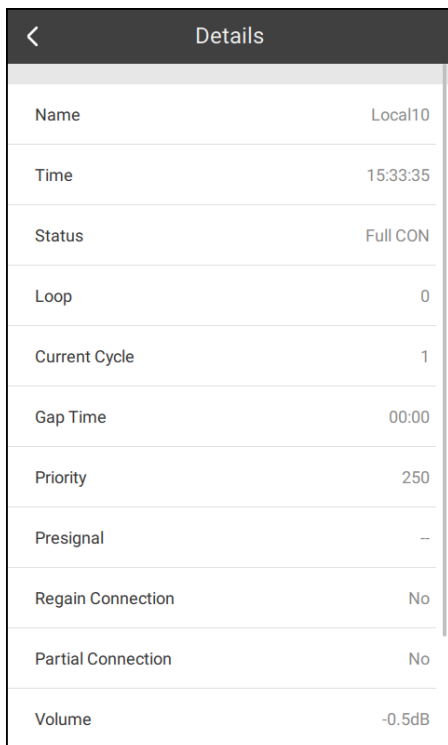

Details	
Name	Local10
Time	15:33:35
Status	Full CON
Loop	0
Current Cycle	1
Gap Time	00:00
Priority	250
Presignal	--
Regain Connection	No
Partial Connection	No
Volume	-0.5dB

Fig. 28: “Details” page

The error type shown on the “Error” list appears based on the configuration file, which may be configured to display local errors of the device and errors of the network-connected equipment, or just local errors of the device. “Acknowledge” at the bottom of the “Error” list can stop an error alert.

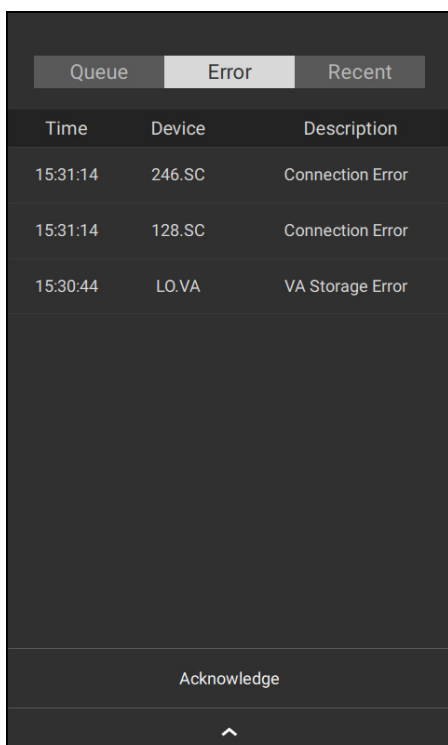

Queue Error Recent		
Time	Device	Description
15:31:14	246.SC	Connection Error
15:31:14	128.SC	Connection Error
15:30:44	LQ.VA	VA Storage Error
Acknowledge		

Fig. 29: “Drop-down” page (“Error” list)

All broadcasts activated by the user on the device (whether played or waited) are appearing on the “Recent” list, except for emergency calls (with a priority level from 1 to 20). This list only shows broadcasts activated by current user and excludes broadcasts activated by other users.



quickly moves each broadcast on the list back to the playback queue. Mic/Line In calls on the “Recent” list is not available for playback.

Queue Error Recent		
Time	Source	Group
15:52:23 08.03.2019	Line In	ALL Areas
15:52:22 08.03.2019	Mic	Loudspeaker
15:52:21 08.03.2019	Mic	Loudspeaker
15:52:06 08.03.2019	this is a test audio	Area 1;Area 2;Area 3
15:52:05 08.03.2019	this is a test audio	Area 1;Area 2;Area 3
15:52:05 08.03.2019	this is a test audio	Area 1;Area 2;Area 3
15:52:01 08.03.2019	this is a test audio	Area 1;Area 2;Area 3
15:51:56 08.03.2019	channel43-title0	Line Out
15:51:54 08.03.2019	this is a test audio	Area 1

Fig. 30: “Drop-down” page (“Recent” list)

3.6 Advanced operations

Besides starting a predefined call, manual call, and scheduled call, the ETCS also provides other advanced operations via the “More” page.

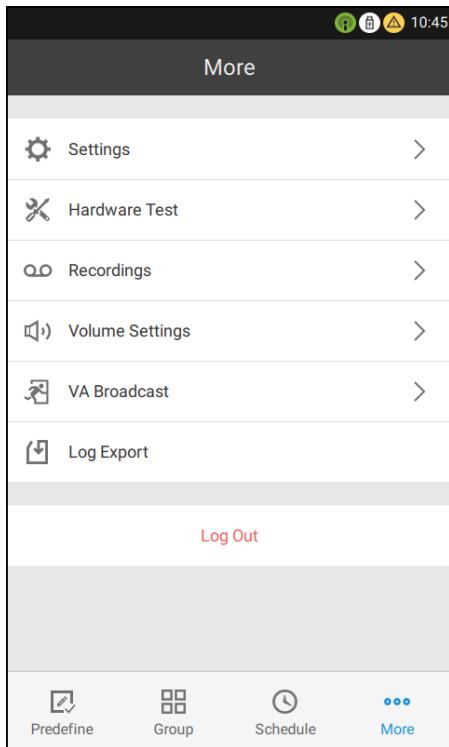



Fig. 31: “More” page

3.6.1 Settings

The “Settings” page displays relevant information about the system. Items with  to the right of them on this page can be modified or have further information.

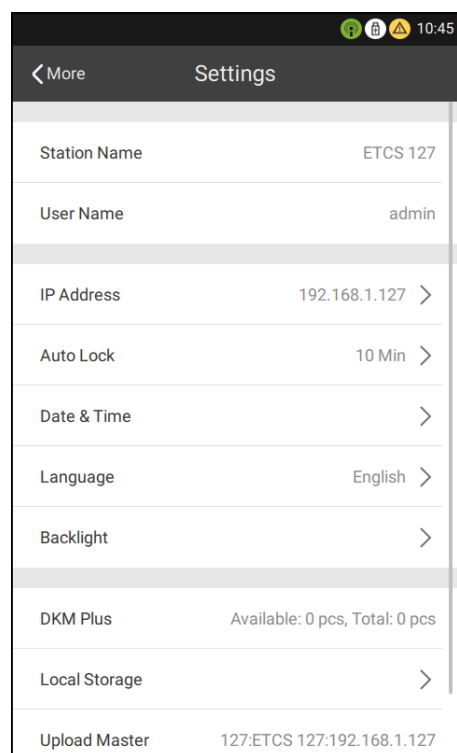


Fig. 32: “Settings” page

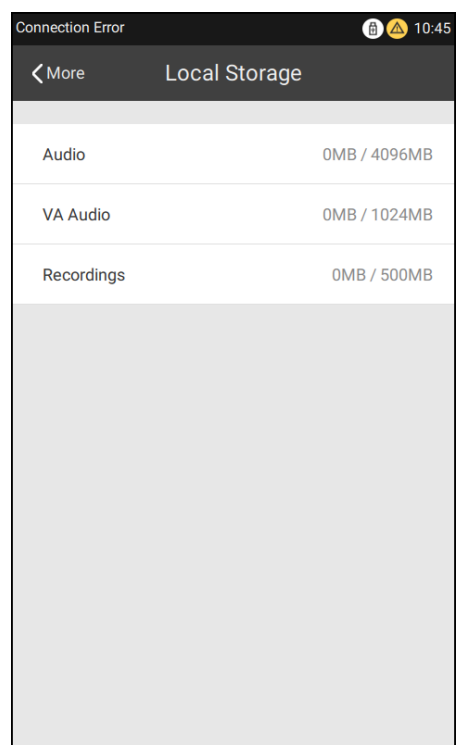


Fig. 33: “Local Storage” page

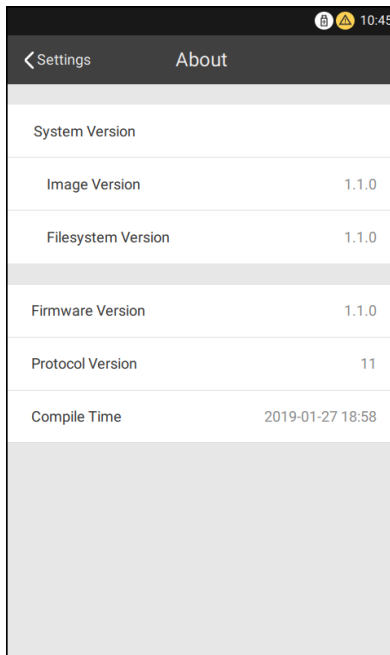


Fig. 34: "About" page

Station Name:	Name of ETCS			
User Name:	Currently logged in user			
System number:	The ETCS Node ID – this ID should be unique on the network.			
IP Address:	The IP address, subnet mask, and gateway of the device. The IP and the gateway should be in the same range. If you want to change the IP address to another range, first set the gateway in the new range and then change the IP address. Example: if you want to change the IP address to “192.168.100.23”, first change the gateway to “192.168.100.1”.			
VLAN	The VLAN configuration contains ID, priority, IP address and subnet mask data. The standard ID is three and must match that of the DOM or SCU. The IP address should NOT conflict with others and can be set to the same IP address as the device.			
Auto Lock:	The time of the device automatically lock the screen and close the backlight. It is possible to setting the time to 1 min, 2 min, 5 min, 10 min, 30 min, 1 hour or OFF.			
Date and Time:	The date and the time of the device. Settings are lost if the internal battery fails or is removed.			
Language:	The device’s language settings can be altered at any time. The following languages are supported:			
	English	German	French	Dutch
	Danish	Swedish	Norwegian	Polish
	Romanian	Turkish	Russian	Ukrainian
	simplified Chinese			
Backlight:	The screen brightness of the device			
DKM plus:	The number of the DKM plus available and the total number of the DKM plus configured.			
Local Storage:	The used and total space each for Audio, VA Audio and Recording			
Upload Master:	The device where the D1 Designer configuration file is stored. Displayed as follows: Device system number: Device’s name: Device’s IP			
MAC address:	The device’s physical address.			
About:	The version information of the device.			

IP Address, Auto Lock time for the screen, Date & Time for the device, Language and Backlight can be changed on the Settings page. All changes will take effect immediately.



- Only the root and poweruser can change the "IP Address", "Date & Time", "Language", and "Region" of the device.
- The screen lock of the ETCS can be set individually for each user e.g. can set its own time span until the screen lock occurs.
- The default IP address for the ETCS is 192.168.1.127.

3.6.2 Hardware test

Hardware testing includes self-tests and network port tests.



Only the root and poweruser may access this.

Touch “Self test” to initiate self-testing procedures. During the self-test, the screen will alternate between white, red, green, blue, and black with alarm alert.

All button LED and MIC LED light red.

The four status LED simultaneously display two colors: green and yellow, yellow and red, green and yellow as well as green and yellow.

This test will automatically and end after 30 seconds or can be end early by touching the screen.

Then the "Hardware Test" page appears again.

Touch “Start Test” to start the test for the main network and backup network port. The ETCS starts testing the main network port and then the backup network port. Testing may last up to 70 seconds.

Upon completion, the normal icon or the error icon (due to network disconnection or communication error) that corresponds with the network interface will appear.

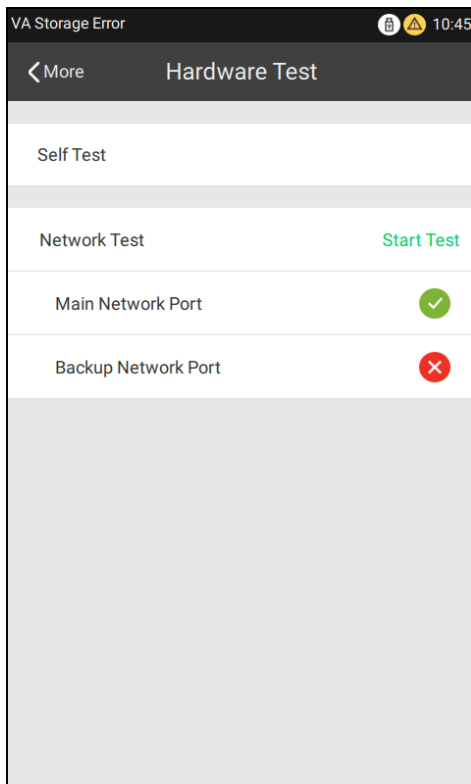


Fig. 35: “Hardware Test” page

3.6.3 Recordings

Self-spoken text phrases up to 30 minutes can be recorded onto the device with a local microphone. To prelisten to the recording, just touch “Prelisten” then the text phrase will be played on a local speaker. Touch “OK” to finish the recording.

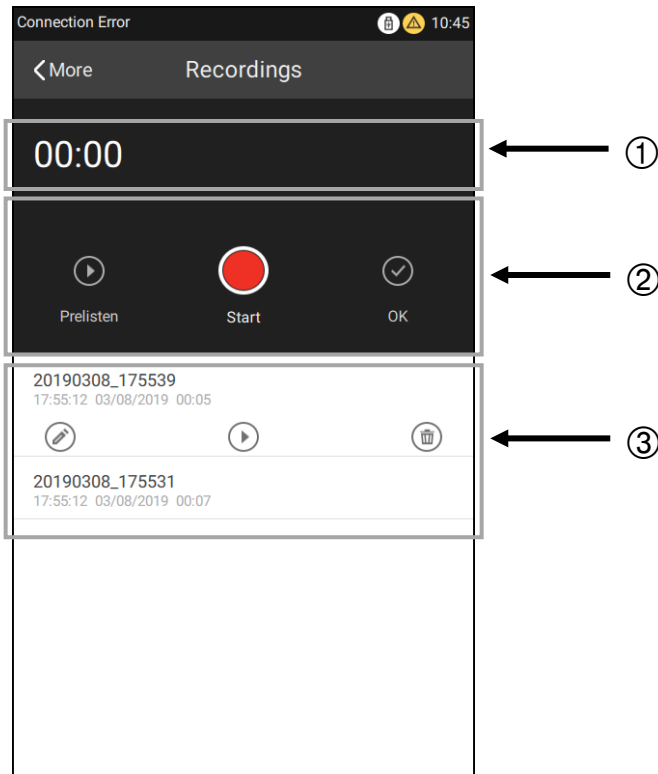


Fig. 36: “Recording” page

①	Time Displays the time of the currently active recording.
②	Operation buttons Includes start / pause, prelisten, or save for the currently active recording.
③	Recording list Displays all the recordings. Touch the recorded audio files to show all action buttons for this recording: edit, prelisten or delete. The recorded audio file <u>cannot</u> be activated during a recording!

Start a recording:

1. Navigate to the “More” page then select “Recordings”.
2. Touch the start button to start a recording, and a pause button will appear. Touch it again to pause the recording. To resume recording, touch the start button again.
3. Touch “Prelisten” (optional).
4. Touch “OK” to save the recording and name it (A file name must not contain any of the following marks: V:*?<>||) . When completed, the current recorded file will appear at the top of the recording list.



- One ETCS can add up to 217 recordings. To successfully start a recording, the volume of the microphone needs to be set accordingly high enough.
- The microphone is used for recording. If the microphone is in use for any other purposes, these are interrupted when a recording is activated.
- The recorded audio can be played back by a manual call (see “Start a Local/Network Call”).

3.6.4 Volume Settings

The volume of a local device and network device can be adjusted in the ETCS. Tap “Volume Settings” on the “More” page and the “Node” page will appear as shown below.



This operating function is only visible to the relevant user. This operation is only visible for the root and poweruser.

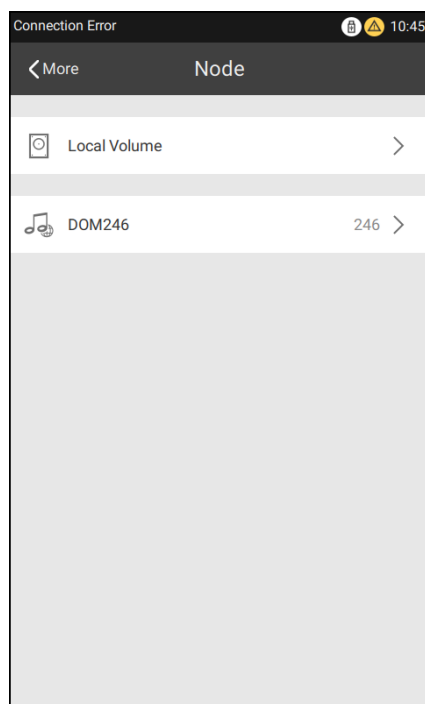


Fig. 37: “Node” page → Local Volume

Under “Local Volume”, the volume levels of “Input”, “Output”, and “Miscellaneous” can be adjusted.


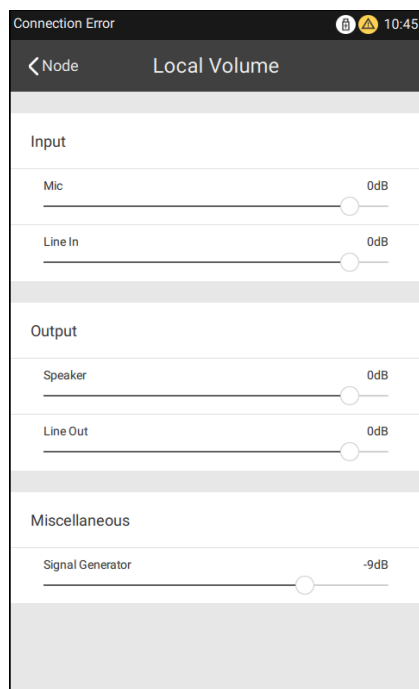


Fig. 38: “Local volume” page for volume adjustment

For a network devices (DOM), the volume levels of configured DAL input and output, configured amplifiers, miscellaneous, and AVC input can be adjusted.

3.6.5 VA-Broadcast

Besides PA broadcasts, VA broadcasts on the ETCS are also supported. Corresponding user authentication is required for VA broadcasts. The user name and password are the same as that used for PA broadcasts.

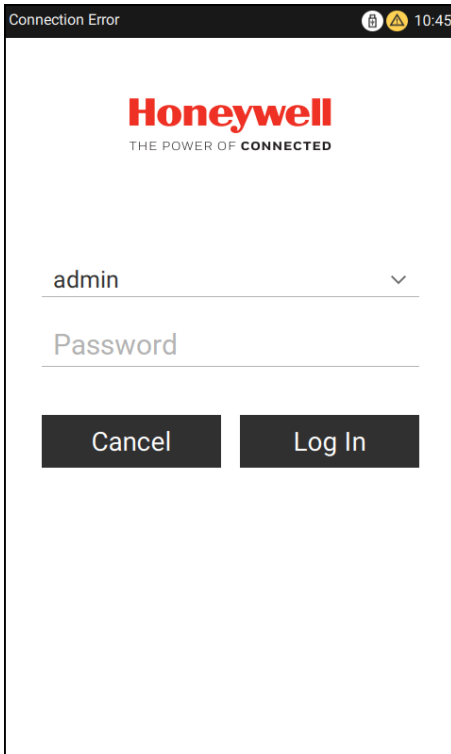

Werkseitiges Passwort: "123456"

Fig. 39: "VA Login" page

After successfully logging in, a VA interface will appear. The following announcements may be selected on this page: live announcement, EVAC announcement and warning announcement. The signal source for the EVAC announcement and warning announcement must be set up in advance in the D1 Designer software.

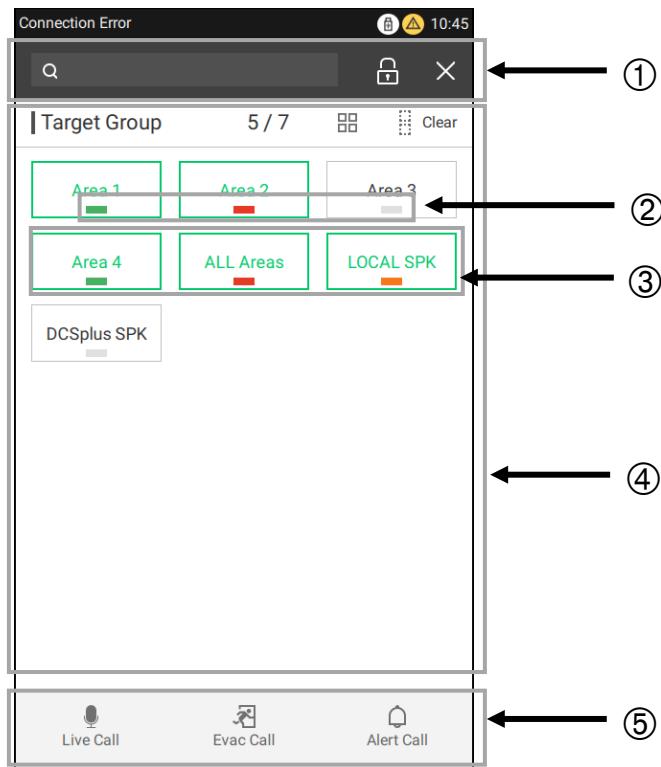


Fig. 40: Page-VA (with protocol 11)

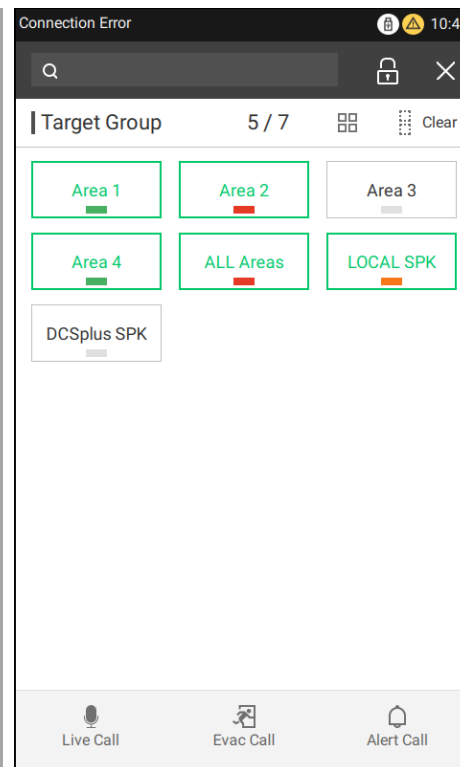


Fig. 41: VA interface (with protocol 10)

① Toolbar

Includes a search bar (allowing users to find the required group quickly), a lock screen button, and an exit button. Clicking the lock screen button will redisplay the “VA Login” page, and a password is required to log in again.

The exit button will close the VA interface and redisplay the “More” page.

② Group status

Protocol 11 uses colours to show they type of VA announcement being played in a zone.

Red: An evacuation announcement is being played.

Orange: A warning announcement is being played.

Grey: No VA announcement is being played.

When two different calls are being played in one area, the area displays the higher of the two statuses.

If an area is configured for several areas, its area status is set according to the following priorities: Live > Evac > Alarm.

Example: Area 1 is configured with areas 2 and 3. If area 1 has the same priority as the live call from area 2, and area 2 the same priority as Evac call from area 3, then the area 1 status will be green.

Protocol 10 shows a small red loudspeaker symbol in the top right-hand corner when an announcement is being played.



The VA area status relates to the VA announcement priority. If, for example, a manual announcement, such as a USB announcement, is activated in area 1 and has the same priority as a live call, area 1 shows as green even if it is not activated in the interface.

③	Selected status When the border and text is green, it means that the target group is selected.
④	Group list The VA groups list belongs to the current user, which is the same as the PA groups on the “Group” page.
⑤	Operation region In this area a Live call, Evac call, and Alert call can be started. A Live call means that the source of the call is the microphone of the device. The source of the other two calls need be configured via D1 Designer.

Start / stop a “Live” call (example with protocol 11):

- Navigate to “More” page then select “VA Broadcast”.
- Input the username and password to login VA.
- Select one or more groups from the “Group” list.
- Touch “Live Call” to start a call, and the button will appear active. The status is displayed in green.
- Touch “Live Call” again to stop the call or navigate to the “Queue” list to end and delete the call. The status is displayed in grey.

Start / stop an “Evac” or “Alert” call:

- Navigate to “More” page then select “VA Broadcast”.
- Input the username and password to login VA.
- Select one or more groups from the “Group” list.
- Touch “Evac” or “Alert” to send a call, and the call will be sent to the “Queue” list. The status is displayed in red or orange.
- Navigate to the queue list to end and delete the call. The status is displayed in grey.

3.6.6 Log Export

The log and the configuration files of the ETCS can be exported to an external USB stick. Plug a USB stick to the USB port of the ETCS and touch the button “Log Export” on the “More” page. A successfully message will appear if the export is completed.



Only visible to the root and poweruser, and do not eject the USB stick until a message appears on the screen stating the export is successful.

3.6.7 Log Out

Touch “Log Out” on the “More” page to lock the screen or switch to another user, and a login page will be displayed

4 Appendix

4.1 System limits

Max. number of	Protocol 10	Protocol 11
connections for simultaneous broadcasts of permitted local / live audio	3	3
Entries in the "Recent" list (activations)	50	50
network audio sources (e.g. voice memory DOM)	9	99
local audio sources (ETCS fixed memory)	99	99
USB audio sources	99	99
recordings	217	217

4.2 Error list

With the exception of the errors marked with *, the following errors are automatically hidden following a reset. Once these errors have been hidden, they may be removed from the list. After this a network test should be carried out as a manual re-check on the network status.

ETCS errors	Device	Description
	XXX.SC	Microphone short circuit
	XXX.SC	Microphone open circuit
	XXX.SC	DKM Plus connection error
	XXX.SC	Main Ethernet failure
	XXX.SC	Main Ethernet cannot detect network device*
	XXX.SC	Backup Ethernet failure
	XXX.SC	Backup Ethernet cannot detect network device*
	XXX.SC	VA Storage error
	XXX.SC	CPU overloaded
Network errors	XXX.SC	Connection Error
	XXX.DS.Y	Connection Error
	XXX.AC	Main Power Supply failure
	XXX.DC	Aux Power Supply failure
	XXX.PA.1	PA1/2 Power Supply failure
	XXX.PA.2	PA3/4 Power Supply failure
	XXX.LR.C. T	High impedance
	XXX.LR.C. T	Low impedance
	XXX.LR.C. T	Short circuit
	XXX.LR.C. T	Open circuit
	XXX.LR.C. T	Earth fault
	XXX.LP. Z	High impedance
	XXX.LP. Z	Low impedance
	XXX.LP. Z	Short circuit
	XXX.LP. Z	Open circuit
	XXX.LP. Z	Earth fault
	XXX.LP. Z	Power up with error (LP)
	XXX.LP. Z	Loop down

XXX: Device system number, "LO" or network system number.

Y: The number of the DAL. The value is 1 to 4.


C.T: The channel and title of the speaker line, e.g. LR. 1. 1 → channel 1 and relay 1

Z: The number of the loop, the value is 1 to 4.



The SCU error message cannot be synchronised. If the ETCS cannot receive error or error reset information from the SCU due to disconnection from the network or its power supply, the error will not be shown and will remain in the error list. To resolve the problem, reload the system configuration or restart the ETCS.

4.3 Configuration error

If there are configuration errors on the ETCS,  will appear on the UI. Touch this icon to show more details about the error.

Error	Description and Resolution
Local config error.	ETCS configuration error. Upload the configuration again.
Local audio config file error.	Local audio database error. The audio configuration cannot be found in the database. Reconfigure the audio. Import the audio database from the ETCS and reassign the slot then upload the configuration file again.
Local audio file not found.	The local audio cannot be found on the ETCS. Upload the audio file again.
Local audio file format error.	Local audio file format cannot be recognized by the ETCS. Upload the audio file again.

4.4 Disk Space

Speicherinhalte	Space	Remark
Audio	4 GB	approx. 21 hours
VA Audio	1 GB	approx. 5 hours
Recording	500 MB	approx. 2,5 hours
VA Recording	500 MB	approx. 2,5 hours
Logs	400 MB	Info (200 MB) & debug (200 MB)

5 Installation

The ETCS should be installed in a room with a suitable climate as a table/console installation, or alternatively in an upright cabinet (19"). In critical areas (e.g. due to moisture, cold, mechanical load), suitable measures must be taken to protect the remote call stations. If necessary, an alternative installation site may be required.



- For further information on assembly and installation refer to Installation Instruction VARIODYN® D1 devices and accessories (Part No. 798683.GB0).
- Please follow the security advice in Chapter 13 to ensure the secure operation of the ETCS.

6 Inbetriebnahme

These instructions contain important information for configuring the ETCS (Ethernet Touch Call Station) digital remote call station, which, as a component of the VARIODYN® D1 system, is programmed using the Designer programming software.

They also describe the security procedures implemented, and those recommended by Honeywell, for using the ETCS.



- For further information refer to Commissioning Instruction VARIODYN® D1 System and VARIODYN® D1 Comprio (Part No. 798664.GB0).
- Please follow the security advice in Chapter 13 to ensure the secure operation of the ETCS.

7 System overview

Illustrated below is a network diagram for the ETCS.

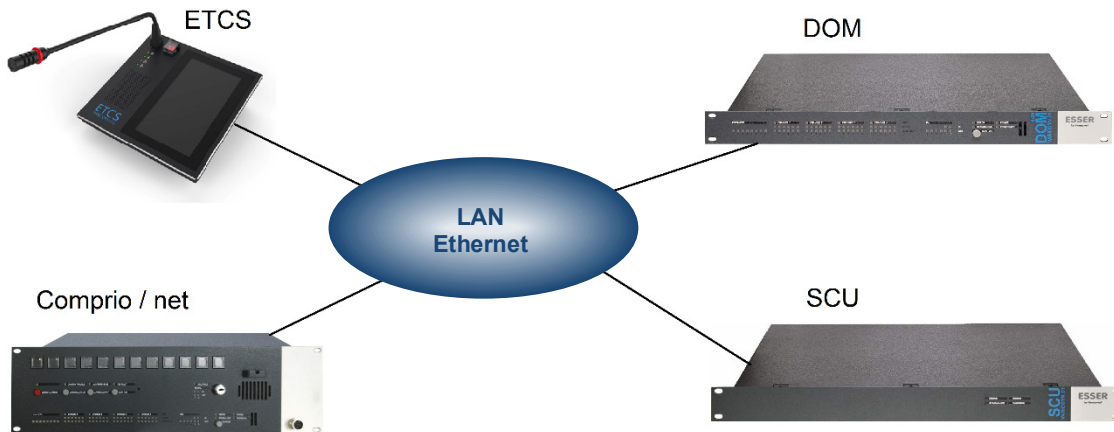


Fig. 42: System overview



The ETCS uses addresses from the same address range as the DOM and the SCU for detection. This limits the maximum number of DOM and SCU units in a system to one device per ETCS. At present an ETCS cannot be managed over Protocol 10 and it is therefore not compatible with SCU.

8 Requirements

The following technical requirements must be met to be able to run VARIODYN® D1 Design and configure to a VARIODYN® D1 system.

- Intel Pentium III 1.8 GHz or similar processor with OpenGL 3D hardware acceleration
- 1024 x 768 pixel monitor resolution (recommended)
- Minimum of 1024 MB RAM (2048 MB recommended)
- At least 100 MB of free hard drive space
- 100 Mbit network card with RJ45 connection
- Microsoft Windows 7 or 10
- 3-button mouse with scroll wheel

9 Safety instructions

9.1 Isolation von externen Netzwerken

The illustration below shows an example of the network topology for an Ethernet ETCS. It should be used in an **isolated environment which is not externally connected via the internet**. For this reason, no devices are connected to the internet. The devices communicate solely via a cable connection to the Ethernet network.

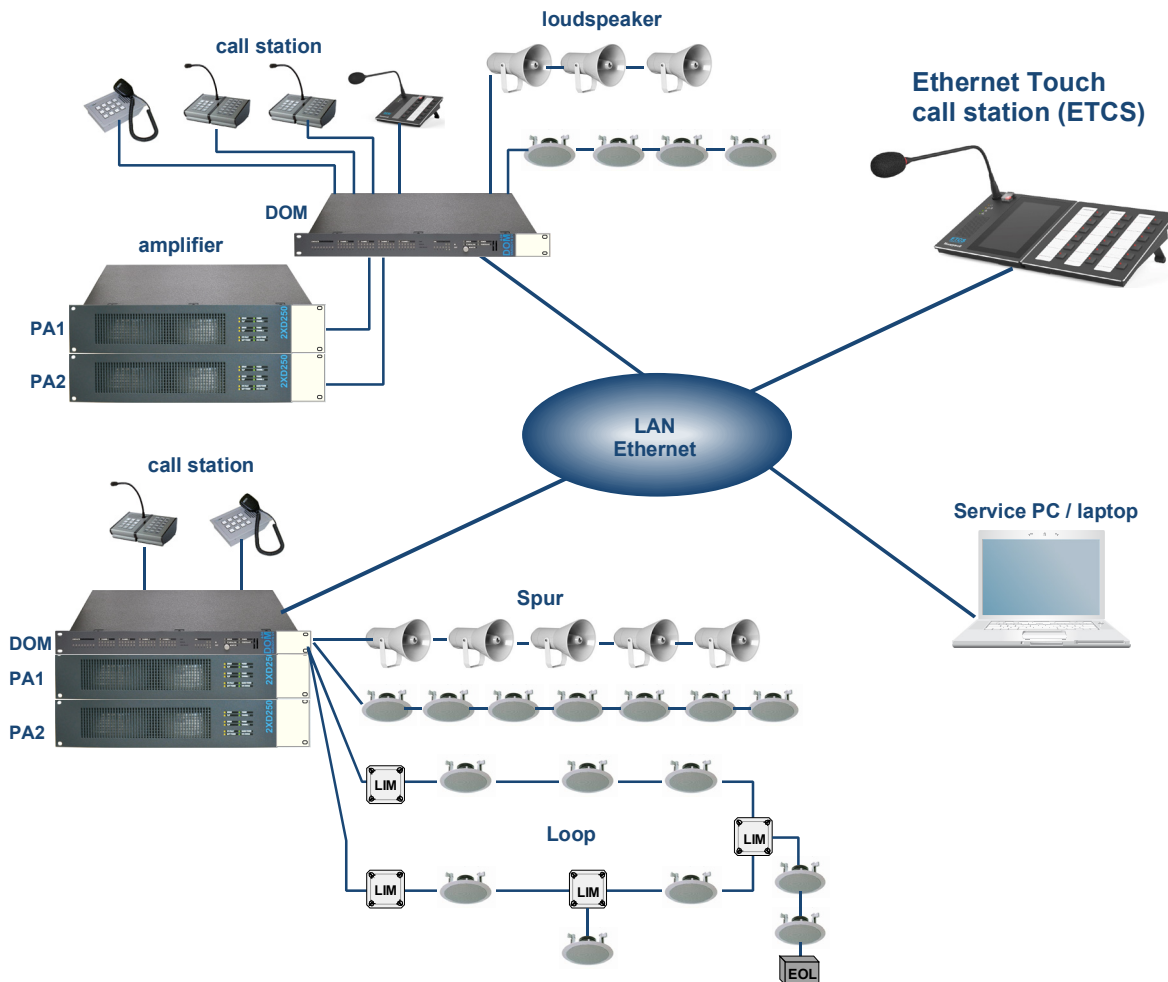


Fig. 43: Overview of the network topology

Operators are strongly advised to check the following points concerning ETCS devices:

1. Ensure no router is connected to an external network. When connecting a new device to the network, ensure that the devices communicate solely via a known, validated router on the local network (LAN).
2. Only connect a laptop when necessary, such as to update firmware or change configuration settings. Ensure that, with the exception of the laptop, no device on the list is able to initiate external communications.
3. For security-critical applications, we strongly advise protecting the LAN by setting up firewalls around the LAN so that surge and load relief filters are in place. This protects against any attempt to gain access to the local network.

9.2 Protection against physical attacks

If an intruder gains physical access to the internal network, it is possible they may find means of maliciously tampering with a client's device router and play the audio files at a later date. The intruder may also maliciously install a router which initiates unauthorised communication with an external network. To protect against risks of this type, operators are strongly advised to put the following measures in place:

1. Ensure that only authorised personnel have access to the areas where the network is located. The minimum recommendation is to put in place physical access control systems which only grant access to badge holders or holders of other credentials.
2. Check communication across the entire network on a regular basis. Cases of failed announcements and new IP addresses not known to the operator should be checked immediately.
3. The ETCS is delivered with a tamper-proof seal affixed in the factory. Unauthorised attempts to open the device will destroy the seal (see Fig.). If the original seal is damaged or removed, the device should be taken out of service.



Fig. 44: Damaged original ETCS seal

9.3 Protection against USB surge

If USB sticks are used for audio files, ensure that only trustworthy USB sticks are used. Unknown or untrustworthy USB sticks can be used to damage the network or the ETCS through a USB surge. Even known USB sticks can be used to tamper with the ETCS or the network in this way and cause permanent damage.

For this reason, only USB sticks which have been checked for reliability should be used.

9.4 Firmware updates

Honeywell will issue a technical bulletin via its regional service centres when a new firmware version becomes available.

Operators are strongly advised to update their firmware on receiving this information (see Chapter 'Updating the ETCS firmware').

9.5 Changing passwords

Every operator is advised to change their passwords regularly, at least every 90 days.

How to change a password:

1. Open the D1 project file.
2. Open the 'ETCS user management' dialogue box.
3. Change the ETCS configuration password.
4. Select the corresponding usernames and change the passwords.
5. Click 'OK' to save changes and close the dialogue box.
6. Upload the new configuration to the ETCS (see Chapter 'Uploading a configuration').
7. Save the D1 project file.

Notes

This image shows a full page of blank graph paper. The grid consists of thin, light gray horizontal and vertical lines that intersect to form small squares across the entire surface. There are no margins, text, or other markings on the paper.

Notes

This image shows a full page of blank graph paper. The grid consists of thin, light gray horizontal and vertical lines that intersect to form small squares across the entire surface. There are no margins, text, or other markings on the paper.

Notes

This image shows a full page of blank graph paper. The grid consists of thin, light gray horizontal and vertical lines that intersect to form small squares across the entire surface. There are no margins, text, or other markings on the paper.



Honeywell Life Safety Austria GmbH

Technologiestraße 5, Gebäude F, 3. OG

1120 Wien, Austria

Telefon: +43 1 6006030

Telefax: +43 1 6006030-900

Internet: www.hls-austria.com

Novar GmbH a Honeywell Company

Forumstraße 30

41468 Neuss, Germany

Telefon: +49 2131 40615-600

Telefax: +49 2131 40615-606

Internet: www.variodyn-d1.com

Technical changes reserved!

© 2020 Honeywell International Inc.