

# **6 MP/12 MP (4K ULTRA HD) FISHEYE CAMERA**

HFD6GR1

HFD8GR1




## **USER GUIDE**



# **User Guide**



## Cautions and Warnings

	<p><b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN</p>		<p>THIS SYMBOL INDICATES THAT DANGEROUS VOLTAGE CONSTITUTING A RISK OF ELECTRIC SHOCK IS PRESENT WITHIN THE UNIT.</p>
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>			<p>THIS SYMBOL INDICATES THAT IMPORTANT OPERATING AND MAINTENANCE INSTRUCTIONS ACCOMPANY THIS UNIT.</p>

**CAUTION** To ensure compliance with electrical safety standards, CSA Certified/UL Listed LPS or Class 2 power adapters are required. Power over Ethernet (PoE) shall be provided by listed information technology equipment meeting the IEEE 802.3af PoE standard. The PoE is not intended to be connected to exposed (outside plant) networks.

**CAUTION** To comply with EN50130-4 requirements, a UPS should be employed when powering on the camera from 24 V AC.

**CAUTION** Installation and servicing should be performed only by qualified and experienced technicians to conform to all local codes and to maintain your warranty.

## Regulatory Statements

### FCC Compliance Statement

**Information to the User:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

---

**Note** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

---

### Canadian Compliance Statement

This Class A digital apparatus complies with Canadian ICES-003.  
Cet appareil numérique de la Classe A est conforme à la norme NMB-003 du Canada.

## Manufacturer's Declaration of Conformity

### North America

The equipment supplied with this guide conforms to UL 60950-1 and CSA C22.2 No. 60950-1.

### Europe

The manufacturer declares that the equipment supplied is compliant with the European Parliament and Council Directive on the Restrictions of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (2011/65/EU), General Product Safety Directive (2001/95/EC), and the essential requirements the EMC directive 2004/108/EC, conforming to the requirements of standards EN 55032 for emissions, EN 50130-4 for immunity, and EN 60950-1 for electrical equipment safety.

## Waste Electrical and Electronic Equipment (WEEE)



**Correct Disposal of this Product** (applicable in the European Union and other European countries with separate collection systems).

This product should be disposed of, at the end of its useful life, as per applicable local laws, regulations, and procedures.

## Safety Instructions

**Before installing or operating the unit, read and follow all instructions. After installation, retain the safety and operating instructions for future reference.**

1. **HEED WARNINGS** - Adhere to all warnings on the unit and in the operating instructions.
2. **INSTALLATION**
  - Install in accordance with the manufacturer's instructions.
  - Installation and servicing should be performed only by qualified and experienced technicians to conform to all local codes and to maintain your warranty.
  - Do not install the unit in an extremely hot or humid location, or in a place subject to dust or mechanical vibration. The unit is not designed to be waterproof. Exposure to rain or water may damage the unit.
  - Any wall or ceiling mounting of the product should follow the manufacturer's instructions and use a mounting kit approved or recommended by the manufacturer.
3. **POWER SOURCES** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your facility, consult your product dealer or local power company.
4. **HEAT** - Situate away from items that produce heat or are heat sources such as radiators, heat registers, stoves, or other products (including amplifiers).
5. **WATER AND MOISTURE** - (*Indoor models only*) Do not use this unit near water or in an unprotected outdoor installation, or any area classified as a wet location.
6. **MOUNTING SYSTEM** - Use only with a mounting system recommended by the manufacturer, or sold with the product.

7. **ATTACHMENTS** - Do not use attachments not recommended by the product manufacturer as they may result in the risk of fire, electric shock, or injury to persons.
8. **ACCESSORIES** - Only use accessories specified by the manufacturer.
9. **CLEANING** - Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
10. **SERVICING** - Do not attempt to service this unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
11. **REPLACEMENT PARTS** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards. Using replacement parts or accessories other than the original manufacturers may invalidate the warranty.
12. **DAMAGE REQUIRING SERVICE** - Unplug the unit from the outlet and refer servicing to qualified service personnel under the following conditions:
  - When the power supply cord or plug is damaged.
  - If liquid has been spilled, or objects have fallen into the unit.
  - If the unit has been exposed to rain or water.
  - If the unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the unit to its normal operation.
  - If the unit has been dropped or the enclosure has been damaged.
  - When the unit exhibits a distinct change in performance - this indicates a need for service.
13. **SAFETY CHECK** - Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the unit is in proper operating condition.

## Warranty and Service




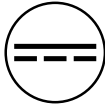





Subject to the terms and conditions listed on the Product warranty, during the warranty period Honeywell will repair or replace, at its sole option, free of charge, any defective products returned prepaid.

In the event you have a problem with any Honeywell product, please call Customer Service at 1.800.323.4576 for assistance or to request a **Return Merchandise Authorization (RMA)** number. Be sure to have the model number, serial number, and the nature of the problem available for the technical service representative.

Prior authorization must be obtained for all returns, exchanges, or credits. **Items shipped to Honeywell without a clearly identified Return Merchandise Authorization (RMA) number may be refused.**

## List of Symbols

The following table contains a list of symbols that may appear on the camera:

Symbol	Explanation
	<p>The WEEE symbol.</p> <p>This symbol indicates that when the end-user wishes to discard this product, it must be sent to separate collection facilities for recovery and recycling. By separating this product from other household-type waste, the volume of waste sent to incinerators or landfills will be reduced, and thus natural resources will be conserved.</p>
	<p>The UL compliance logo.</p> <p>This logo indicates that the product has been tested and is listed by UL (formerly Underwriters Laboratories).</p>
	<p>The FCC compliance logo.</p> <p>This logo indicates that the product conforms to Federal Communications Commission compliance standards.</p>
	<p>The direct current symbol.</p> <p>This symbol indicates that the power input/output for the product is direct current.</p>
	<p>The alternating current symbol.</p> <p>This symbol indicates that the power input/output for the product is alternating current.</p>
	<p>The RCM compliance logo.</p> <p>This logo indicates that the product conforms with Australian RCM guidelines.</p>
	<p>The CE compliance logo.</p> <p>This logo indicates that the product conforms to the relevant guidelines/standards for the European Union harmonization legislation.</p>
	<p>The caution symbol.</p> <p>This symbol indicates important information.</p>
	<p>The protective earth (ground) symbol.</p> <p>This symbol indicates that the marked terminal is intended for connection to the protective earth/grounding conductor.</p>



# Contents

<b>About This Document</b> . . . . .	<b>11</b>
Overview of Contents . . . . .	11
Related Documents . . . . .	12
<b>1 Accessing the Camera</b> . . . . .	<b>13</b>
Installing the IPC Tool Utility . . . . .	13
Discovering Your Camera on the Network . . . . .	13
Assigning a New IP Address to Your Camera . . . . .	14
Upgrading the Camera's Firmware . . . . .	14
Accessing the Camera from a Web Browser . . . . .	15
<b>2 Logging In and Viewing Live Video</b> . . . . .	<b>17</b>
Logging In to the Web Client . . . . .	17
Overview of the Live Interface . . . . .	18
Configuring the Live Interface . . . . .	19
Working in the Live Interface . . . . .	20
Setting Up Live Video Streaming . . . . .	21
Logging Out of the Web Client . . . . .	21
<b>3 Playing Back Recorded Video</b> . . . . .	<b>23</b>
Overview of the Playback Interface . . . . .	23
Playing Back Recorded Video . . . . .	25
Downloading Recorded Video . . . . .	26
Viewing Snapshots . . . . .	27
<b>4 Configuring Video and Audio Settings</b> . . . . .	<b>29</b>
Configuring Video Settings . . . . .	29
Configuring Audio Settings . . . . .	39
<b>5 Configuring Network Settings</b> . . . . .	<b>41</b>
Configuring TCP/IP . . . . .	42
Configuring Network Connections . . . . .	44
Configuring ONVIF . . . . .	45
Configuring PPPoE Settings . . . . .	45
Configuring DDNS Settings . . . . .	46
Filtering IP/MAC Addresses . . . . .	47
Configuring Email Settings . . . . .	49
Configuring UPnP Port Mapping . . . . .	50
Configuring SNMP Settings . . . . .	51
Configuring Bonjour . . . . .	52
Configuring Multicast Settings . . . . .	52
Configuring 802.1X Settings . . . . .	53
Configuring QoS Settings . . . . .	53
Working with Certificates . . . . .	54
<b>6 Configuring Event Settings</b> . . . . .	<b>55</b>
Configuring Alarm Events . . . . .	55
Configuring System Events . . . . .	57

	Configuring Motion Detection Events . . . . .	59
	Configuring Camera Tampering Events . . . . .	61
	Configuring Scene Change Events . . . . .	62
	Configuring Audio Events . . . . .	63
	Accessing Extensional Video Analytics . . . . .	64
<b>7</b>	<b>Configuring Recording Settings. . . . .</b>	<b>67</b>
	Configuring Recording Schedules . . . . .	67
	Configuring Storage Settings . . . . .	68
	Configuring Recording Settings . . . . .	71
<b>8</b>	<b>Configuring System Settings. . . . .</b>	<b>73</b>
	Configuring General System Settings . . . . .	73
	Configuring Date and Time Settings . . . . .	74
	Configuring Account Settings . . . . .	75
	Resetting the Camera . . . . .	80
	Backing Up/Restoring a Configuration . . . . .	80
	Configuring Maintenance Settings . . . . .	81
	Upgrading the Firmware . . . . .	81
	Viewing Version Information . . . . .	82
	Managing Logs . . . . .	82
	Viewing Online Users . . . . .	84
	<b>Appendix A Technical Specifications . . . . .</b>	<b>85</b>
	<b>Index . . . . .</b>	<b>91</b>

# About This Document

This manual is intended for system installers, administrators, and users of Honeywell's equiP® Series fisheye network cameras and contains instructions for accessing, configuring, and operating the cameras.

## Overview of Contents

This manual contains the following chapters and appendixes:

- [Chapter 1, Accessing the Camera](#), describes how to access the camera remotely from a web browser.
- [Chapter 2, Logging In and Viewing Live Video](#), describes how to log in to the camera and how to use the Live interface.
- [Chapter 3, Playing Back Recorded Video](#), describes how to play back and export recorded video and snapshots.
- [Chapter 4, Configuring Video and Audio Settings](#), describes how to set up video and audio streams.
- [Chapter 5, Configuring Network Settings](#), describes how to set up the camera on a network. (For advanced users only.)
- [Chapter 6, Configuring Event Settings](#), provides instructions for configuring alarm inputs/outputs, motion detection, audio detection, tampering detection, and system event settings.
- [Chapter 7, Configuring Recording Settings](#), describes how to set up a recording schedule and how to manage recording and storage settings.
- [Chapter 8, Configuring System Settings](#), provides instructions for configuring language and date and time options, managing user accounts and permissions, setting maintenance tasks, upgrading firmware, and resetting a camera to its factory defaults.
- [Appendix A, Technical Specifications](#), lists camera specifications.
- [Index](#), provides a searchable list of key terms used in the manual.

## Related Documents

For more information relating to equiP Series fisheye cameras, refer to the following documents:

<b>Document Title</b>	<b>Part Number</b>
<i>equiP Series Network Security Guide</i>	800-23224
<i>equiP Series Fisheye HFD6GR1/HFD8GR1 Quick Installation Guide</i>	800-22495

You can find these and other documents on the product webpage:

- <http://www.honeywellvideo.com/products/video-systems/video-redefined/equiP-family/1274474.html>

# 1


## Accessing the Camera

This chapter contains the following sections:



- [Installing the IPC Tool Utility, page 13](#)
- [Discovering Your Camera on the Network, page 13](#)
- [Assigning a New IP Address to Your Camera, page 14](#)
- [Upgrading the Camera's Firmware, page 14](#)
- [Accessing the Camera from a Web Browser, page 15](#)


## Installing the IPC Tool Utility

To install the IPC Tool utility and create a desktop shortcut:

1. Insert the included Software and Document disc into your PC's disc drive.
2. Install the IPC Tool utility to your PC. The shortcut  is added to the desktop.

## Discovering Your Camera on the Network

To discover your network camera(s), open the IPC Tool utility , enter your user name and password, and then click **Connect**. Cameras that are online have a green connected icon  next to them. Cameras that are offline have a gray X next to them. To refresh the list, click **Refresh**.

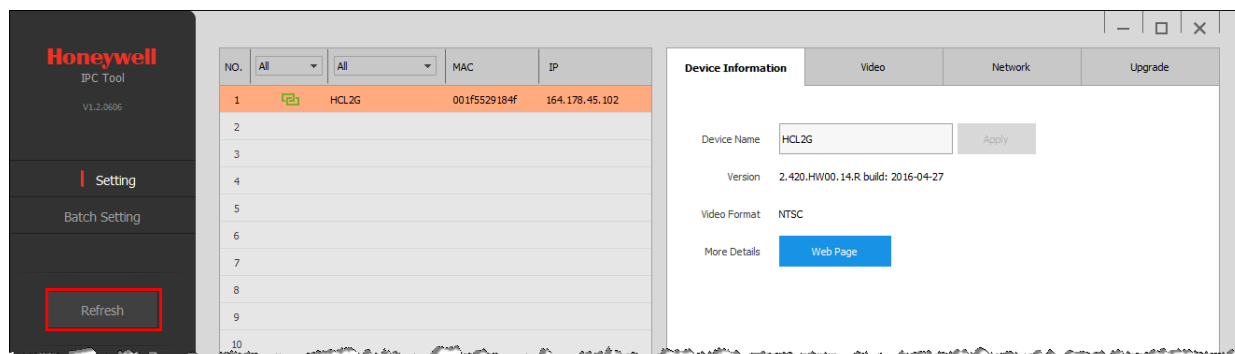

## Assigning a New IP Address to Your Camera

The current IP address of your camera appears in the **IP** column of the devices list. If you want, you can assign a new static IP address to the camera.

### To change the IP address of a single camera:

1. Select the camera that you want to configure from the devices list.
2. Click the **Network** tab.
3. Clear the **DHCP** check box.
4. Enter the new IP settings in the **IP Address**, **Subnet Mask**, and **Default Gateway** fields.
5. Click **Apply** to apply the settings.

### To change the IP addresses of multiple cameras at the same time:

1. In the left-most pane of the IPC Tool utility, click **Batch Setting**.
2. Select all of the cameras that you want to configure from the devices list.
3. Click the **Network** tab.
4. Do one of the following:
  - To assign dynamic IP addresses, select the **Set all to DHCP** check box, and then click **Apply**.
  - To assign static IP addresses, enter the settings in **IP Range**, **Subnet Mask**, and **Default Gateway** fields, and then click **Apply**.

## Upgrading the Camera's Firmware

Before you begin using your camera, make sure you have the latest firmware installed. You can upgrade a single camera or multiple cameras at the same time.

### To upgrade a single camera:


1. Select the camera that you want to upgrade from the devices list.
2. Click the **Upgrade** tab.
3. Click **Browse**, navigate to the directory that contains the firmware file (.bin), select the file, and then click **Open**. The firmware file appears in the **Target File** field.
4. Click **Upgrade**. When the upgrade is complete, the camera will reboot.

### To upgrade multiple cameras at the same time:

1. In the left-most pane of the IPC Tool utility, click **Batch Setting**.
2. Select all of the cameras that you want to upgrade from the devices list.
3. Click the **Upgrade** tab.
4. Click **Browse**, navigate to the directory that contains the firmware file (.bin), select the file, and then click **Open**. The firmware file appears in the **Target File** field.
5. Click **Upgrade**. When the upgrade is complete, the cameras will reboot.

## Accessing the Camera from a Web Browser

To access the camera from a web browser:

1. Select the camera that you want to access from the devices list. The camera must be online .
2. On the **Device Information** tab, click **Web Page**. The web client opens in your default browser.





# 2


## Logging In and Viewing Live Video

This chapter contains the following sections:

- [Logging In to the Web Client, page 17](#)
- [Overview of the Live Interface, page 18](#)
- [Configuring the Live Interface, page 19](#)
- [Working in the Live Interface, page 20](#)
- [Logging Out of the Web Client, page 21](#)

### Logging In to the Web Client

If this is your first time logging in to the web client, on the login page, enter the default user name (**admin**) and password (**1234**), and then click **Login**.

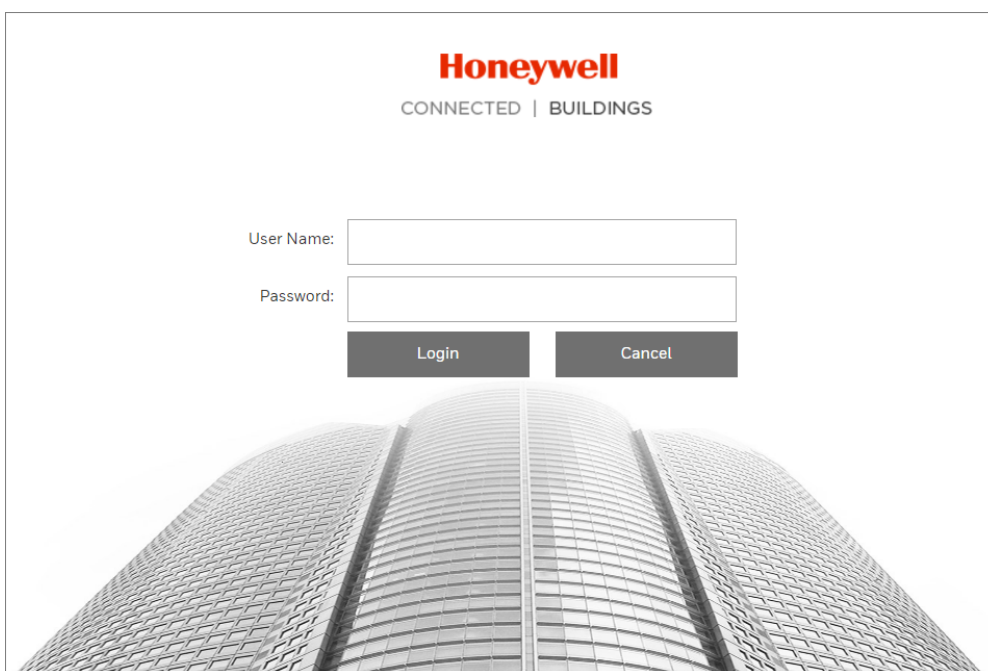

**Honeywell**  
CONNECTED | BUILDINGS

User Name:

Password:

Login Cancel

For security purposes, you are required to create a new secure password.

**Please change password.**

New Password

Weak Medium Strong

Confirm Password

Don't show this again.


OK Cancel

The password must be at least 8 characters long and contain at least one lowercase letter, one number, and one special character. The password cannot be blank.

## Overview of the Live Interface

Figure 2-1 shows the layout of the web client's Live interface.

Figure 2-1 Live Interface

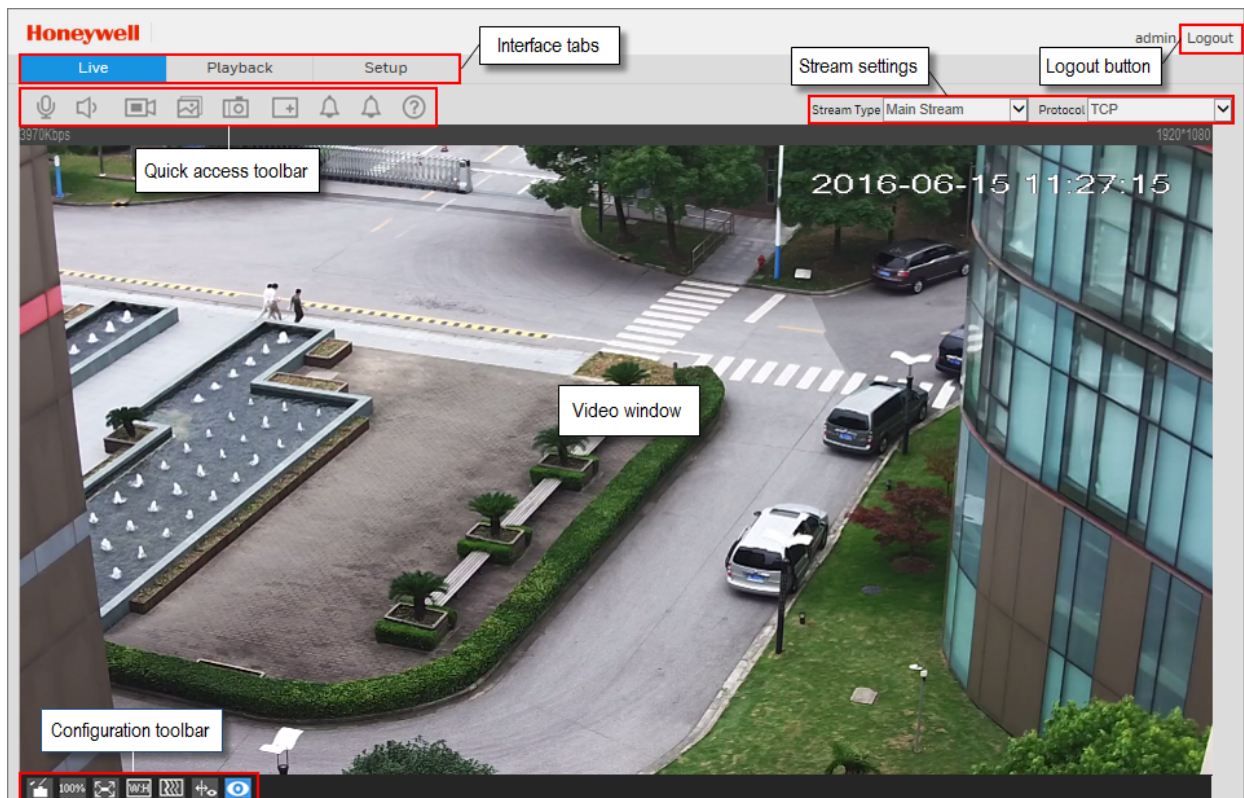

# Configuring the Live Interface

**Note** The first time you log in to the web client, follow the on-screen instructions to download and install the web browser plug-in.

You can configure the Live interface using the configuration controls located in the lower left corner of the screen, immediately below the video window (*Figure 2-2*).

**Figure 2-2 Live Configuration Toolbar**



**Table 2-1 Live Configuration Controls**

	<b>Image Adjustment</b>	<p>Opens the <b>Image Adjustment</b> panel.</p> <p>Move the sliders to adjust the image brightness, contrast, hue, or saturation. Click the – and + signs to make fine adjustments. To restore the settings to their default values (<b>64</b>), click <b>Reset</b>.</p>	
<p><b>Note</b> These settings only apply to the client end. To change the settings at the camera end, go to <b>Setup &gt; Camera Setup &gt; Properties &gt; Picture</b>.</p>		<b>Original Size</b>	Displays the video at actual size (the exact dimensions are determined by the stream resolution).
	<b>Full Screen</b>	Displays the video in full-screen mode. Double-click (or press Esc) to exit full-screen mode.	
	<b>Width:Height Ratio</b>	Displays the video in its original size ( <b>Original</b> ) or fitted to your screen ( <b>Adaptive</b> ).	
	<b>Fluency</b>	Sets the video fluency level ( <b>Realtime</b> , <b>Normal</b> , or <b>Fluency</b> ). Select a fluency level based on the capabilities of your network. For example, if your connection is slow, selecting <b>Fluency</b> will prioritize smoothness over image quality.	
	<b>Rules Info</b>	Tracks movement in the video window when intelligent video surveillance (IVS) is enabled.	
	<b>Fisheye</b>	<p>Opens the <b>Fisheye</b> display options panel.</p> <p>Select the <b>Installation Mode</b> (ceiling mount, wall mount, or ground mount). Next, select a <b>Display Mode</b>. The standard 360° view (without dewarping) is displayed by default but there are several panoramic and EPTZ (virtual PTZ) display modes to choose from.</p>	
<p><b>Note</b> These settings only apply to the client end. To change the settings at the camera end, go to <b>Setup &gt; Camera Setup &gt; Properties &gt; Fisheye</b>.</p>			









## Working in the Live Interface

The toolbar in the upper left corner of the screen, immediately above the video window, provides quick access to commonly used controls (*Figure 2-3*).

**Figure 2-3 Quick Access Toolbar**



**Table 2-2 Quick Access Controls**

	<b>Talk</b>	Click to enable or disable bidirectional talk (audio must also be enabled).
	<b>Audio</b>	Click to enable or disable the audio input stream.
	<b>Record</b>	Click to start or stop recording video. The icon appears red when video is being recorded, gray when video is not being recorded. The recorded video is saved to the location specified in <b>Setup &gt; Storage Setup &gt; Destination &gt; Path &gt; Live Record</b> .
	<b>Triple Snapshot</b>	Click to take three snapshots in quick succession (1 per second). The snapshots are saved to the location specified in <b>Setup &gt; Storage Setup &gt; Destination &gt; Path &gt; Live Snapshot</b> .
	<b>Snapshot</b>	Click to take a snapshot of the current video. The snapshot is saved to the location specified in <b>Setup &gt; Storage Setup &gt; Destination &gt; Path &gt; Live Snapshot</b> .
	<b>Digital Zoom</b>	When this function is enabled, you can drag over an area of the video to enlarge that area. Right-click to return to the previous magnification.
	<b>Alarm Output</b>	Click to generate or cancel an alarm output. The icon appears red when the alarm is active, gray when the alarm is inactive.
	<b>Help</b>	Displays online help for the <b>Live</b> interface.

## Setting Up Live Video Streaming

In the upper right corner of the screen, immediately above the video window, you can set the stream type and protocol for live video streaming.

### Setting the Stream Type

To set the stream type, in the **Stream Type** list, select **Main Stream**, **Sub Stream 1**, or **Sub Stream 2**.

<b>Main Stream</b>	Delivers high definition video for real-time monitoring, recording, and storage. Uses the most bandwidth.
<b>Sub Stream 1</b>	Delivers low/standard definition video, typically for remote monitoring in lower network bandwidth environments.
<b>Sub Stream 2</b>	Delivers low, standard, or high definition video.

The properties for each stream type are configured on the **Setup > Compression Setup > Video** page (see [Configuring Streaming Settings](#) on page 34).

### Setting the Stream Protocol

To set the stream protocol, in the **Protocol** list, select **TCP**, **UDP**, or **Multicast**.

<b>TCP</b>	Provides most reliable data transmission. Higher latency and bandwidth use than UDP.
<b>UDP</b>	Provides fastest data transmission. Lower latency and bandwidth use than TCP but allows some data loss (such as dropped frames).
<b>Multicast</b>	Provides the most efficient use of bandwidth if large numbers of clients are viewing the video simultaneously.

## Logging Out of the Web Client

To log out of the web client, in the upper right corner of the screen, click **Logout**.



# 3

## Playing Back Recorded Video


This chapter contains the following sections:

- [Overview of the Playback Interface, page 23](#)
- [Playing Back Recorded Video, page 25](#)
- [Downloading Recorded Video, page 26](#)
- [Viewing Snapshots, page 27](#)

## Overview of the Playback Interface

[Figure 3-1](#) shows the layout of the web client's Playback interface.

Figure 3-1 Playback Interface

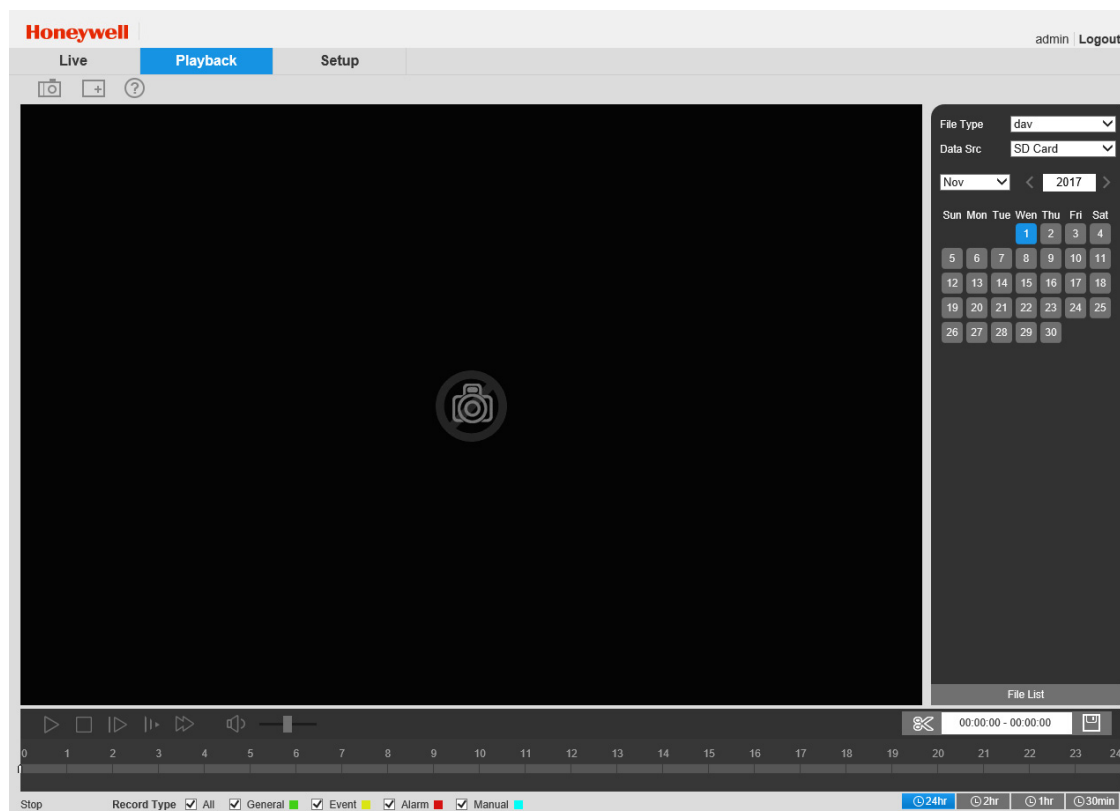










## Playback Controls

The playback controls are located in the lower left corner of the screen, immediately below the video window. For instructions on how to play back video, see [Playing Back Recorded Video](#) on page 25.

**Figure 3-2 Playback Toolbar**




**Table 3-1 Playback Controls**

	<b>Play/Pause</b>	Click to play recorded video.
	<b>Pause</b>	Click to pause playback.
	<b>Stop</b>	Click to stop playback.
	<b>Next Frame</b>	Click to advance to the next frame when playback is paused.
	<b>Slow Play</b>	Click to slow down playback.
	<b>Fast Play</b>	Click to speed up playback.
	<b>Volume</b>	Click to enable sound.
	<b>Mute</b>	Click to disable sound.
	<b>Volume Level</b>	Drag the slider to adjust the sound volume.



## Video Clip Controls

The video clip controls are located in the lower right corner of the screen, immediately below the file list button. For instructions on how to create and export a video clip, see [Downloading Recorded Video](#) on page 26.

**Figure 3-3 Video Clip Area**



**Table 3-2 Video Clip Controls**

	<b>Clip</b>	Click to start/stop clipping video.
	<b>Download</b>	Click to download the video clip that you have created to a local drive on your PC.



## Timeline

The timeline is located below the playback and video clip controls.

Figure 3-4 Timeline Area




Table 3-3 Timeline Controls


<b>Record Type</b>	<b>General</b>	Displays video saved during normally scheduled recording in the timeline.
	<b>Motion</b>	Displays video saved during a motion detection event in the timeline.
	<b>Alarm</b>	Displays video saved during an alarm event in the timeline.
	<b>Manual</b>	Displays video saved manually during live monitoring in the timeline.
	<b>24hr</b>	Displays 24 hours of video in the timeline.
	<b>2hr</b>	Displays 2 hours of video in the timeline.
	<b>1hr</b>	Displays 1 hour of video in the timeline.
	<b>30min</b>	Displays 30 minutes of video in the timeline.

## Playing Back Recorded Video

To play back recorded video:

- From the **File Type** list, select **dav**.
- From the **Data Src** list, select the location where the video files are stored.  
The storage location is configured in **Setup > Storage Setup > Destination** (see [Configuring Storage Settings](#) on page 68).
- Locate the file that you want to play back.
  - Above the calendar, select the month and year that you want to search.
  - On the calendar, click the date that you want to search. Recordings for the selected date appear in the timeline (color coded according to recording type).
  - Below the calendar, click the **File List** button to narrow your search by time period and/or by download format.

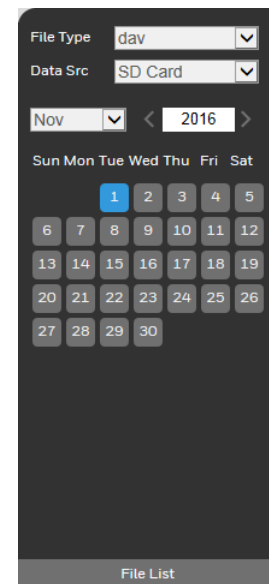

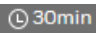
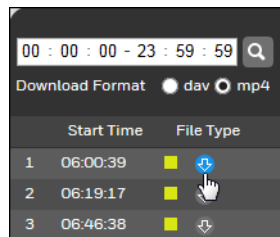
4. Play the file using one of the following methods:
  - In the file list, double-click the file that you want to play.
  - In the timeline, click a colored bar at the time that you want to start playing from (click  to zoom in on the timeline), and then click the **Play** button.

## Downloading Recorded Video

There are two ways to download recorded video: you can download a complete video file (the maximum length is specified in **Setup > Storage Setup > Record Control**) or you can create and export a video clip that you have created.




### To download a video file:

1. From the **File Type** list, select **dav**.
2. From the **Data Src** list, select the location where the video files are stored.
3. On the calendar, click the date that the video was recorded.
4. Click **File List** to display the list of video files for that date.
5. Set the **Download Format** to **dav** or **mp4**.
6. From the file list, click the download button  of the file that you want to download.



The button changes to  and the file is saved to the location specified in **Setup > Compression Setup > Path > Playback Download**.

### To create and export a video clip:

1. Open a video file in the playback window.
2. Pause the video at the time when you want to start the clip.
3. In the video clip area, click the **Select Start Time** button .
4. Resume playing the video.
5. Pause the video at the time when you want to stop the clip.
6. Click the **Select Stop Time** button .
7. Stop the video, and then click the **Download** button .

---

**Note** You cannot download the clip while the video file is still open in the web client.

---

The clip is saved to the location specified in **Setup > Compression Setup > Path > Video Clips**.

## Viewing Snapshots


You can take snapshots of video during playback by clicking the **Snapshot** button . The snapshot is saved to the location specified in **Setup > Compression Setup > Path > Playback Snapshot**.

To view a snapshot that you have saved manually during live monitoring, go the directory specified in **Setup > Compression Setup > Path > Live Snapshot** and double-click the file to open it.

To view a snapshot that you have saved manually during playback, go the directory specified in **Setup > Compression Setup > Path > Playback Snapshot** and double-click the file to open it.

If you have configured the system to take snapshots on a schedule, or during motion detection or alarm events, you can view and download them.

### To view or download a system-generated snapshot:

1. From the **File Type** list, select **jpg**.
2. From the **Data Src** list, select the location where the snapshot files are stored.
3. On the calendar, click the date that the snapshot was taken.
4. Click **File List** to display the list of snapshots for that date.
5. Double-click the snapshot file that you want to view. The file opens in the video window.
6. To download the file, click the download button . The file opens in a new browser window. Right-click the image and then click **Save picture as** or **Save image as** to save the snapshot to a local directory.



# 4

## Configuring Video and Audio Settings

This chapters contains the following sections:

- [Configuring Video Settings, page 29](#)
- [Configuring Audio Settings, page 39](#)

### Configuring Video Settings

This section describes how to configure camera properties (picture, exposure, lighting compensation, white balance, day and night, IR light, and defog) and video streaming properties (format, resolution, frame rate, bit rate, and I-frame interval).

### Configuring Camera Settings

You can configure camera properties on the **Setup > Camera Setup > Properties** page.

#### Profile


In the **Profile** box, select the camera profile that you want to configure settings for: **Normal**, **Day**, or **Night**.

#### Picture

In the **Picture** area, you can manually adjust the image brightness, contrast, saturation, sharpness, and gamma levels.

Drag the slider left or right to decrease or increase the value.

Click the – and + signs to make fine adjustments.

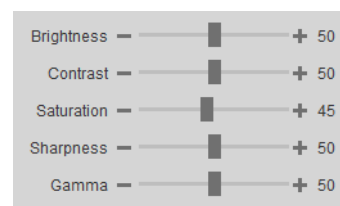


<b>Brightness</b>	Adjusts the black level of the image.
<b>Contrast</b>	Adjusts the white level of the image.
<b>Saturation</b>	Adjusts the intensity of the image colors.
<b>Sharpness</b>	Adjusts the edge sharpness of image elements. Keep in mind that increasing sharpness in a moving image will create more noise, resulting in a larger bit stream and saved file size.
<b>Gamma</b>	Adjusts the amount of gamma correction applied to the image. Use fine adjustments to accent darker areas of the image.

Click **Save** to apply the settings.

## Exposure

In the **Exposure** area, you can set the anti-flicker mode, exposure mode, auto iris, and digital noise reduction level.

Set **Anti-Flicker** to **Outdoor**, **50Hz**, or **60Hz**.

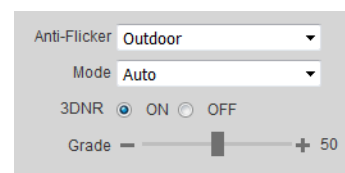

<b>Outdoor</b>	Minimizes flicker in outdoor applications. Works with auto, low noise, low motion blur, and manual exposure modes
<b>50Hz</b>	Minimizes flicker in indoor applications where the AC frequency is 50 Hz (generally PAL regions). Works with auto and manual exposure modes.
<b>60Hz</b>	Minimizes flicker in indoor applications where the AC frequency is 60 Hz (generally NTSC regions). Works with auto and manual exposure modes.

Set **Mode** to **Auto**, **Gain Priority**, **Shutter Priority**, or **Manual**.

<b>Auto</b>	Exposure settings change automatically with changes in the scene's lighting.
<b>Gain Priority</b>	The shutter speed is adjusted automatically for the specified gain value.
<b>Shutter Priority</b>	The gain is adjusted automatically for the specified shutter speed.
<b>Manual</b>	Maximum shutter speed and maximum gain for normal light conditions are set by the user.

**3DNR** (3D noise reduction) is enabled by default. Drag the **Grade** slider left or right to decrease or increase the level of digital noise reduction applied to the image. To disable 3D noise reduction, set **3DNR** to **OFF**.

Click **Save** to apply the settings.

## Lighting Compensation

In the **Lighting Compensation** area, you can apply backlight compensation (BLC), highlight compensation (HLC), or digital wide dynamic range (DWDR) adjustment to the image.

Set **Lighting Mode** to **OFF**, **BLC**, **HLC**, or **DWDR**.

<b>BLC</b>	Corrects the exposure of strongly backlit scenes. To apply BLC to the entire scene, click <b>Default</b> . To apply BLC to a specific area of the scene, click <b>Customized</b> . A yellow rectangle appears in the preview window. To move it, drag the center of the frame. To resize it, drag one of the corner handles.
<b>HLC</b>	Masks strong light sources in the scene. Drag the slider to adjust the HLC level. Click the – and + signs to make fine adjustments.
<b>DWDR</b>	Corrects the exposure of overexposed and underexposed areas of the scene. Drag the slider to adjust the DWDR level. Click the – and + signs to make fine adjustments.

Click **Save** to apply the settings.

## White Balance

White balance compensates for the different color temperatures of different light sources, ensuring consistent colors- in the image.

In the **White Balance** area, you can set the white balance mode to **Auto**, **Natural**, **Street Lamp**, **Outdoor**, **Manual** or **Customize Region**.

<b>Auto</b>	White balance is adjusted automatically.
<b>Natural</b>	White balance is optimized for natural lighting.
<b>Street Lamp</b>	White balance is optimized for yellow-tinted lighting.
<b>Outdoor</b>	White balance is optimized for outdoor environments.
<b>Manual</b>	Red gain and blue gain values are set by the user.
<b>Customize Region</b>	White balance is applied to a user-defined area within the scene.

Click **Save** to apply the settings.

## Day and Night

In the **D&N Mode** area, you can set the day and night mode, sensitivity, and delay time.

Mode: Auto  
Sensitivity: Medium  
Delay: 6s

By default, the camera automatically outputs color video or black-and-white video depending on the amount of light in the scene. To output *only* color video, set **Mode** to **Color**. To output *only* black-and-white video, set **Mode** to **Black & White**.

**Sensitivity** controls the sensitivity to lighting changes that cause the camera to switch between day (color) and night (black-and-white) mode. Select **Low**, **Medium**, or **High**.

**Delay** defines the delay time before switching between modes. Select a value between **2s** and **10s**.

Click **Save** to apply the settings.

## IR Light

In the **IR Light** area, you can set the infrared LED mode and other settings.

Set **Mode** to **Manual**, **Smart IR**, or **OFF**.

<b>Manual</b>	IR near and far distance brightness are set by the user.
<b>Smart IR</b>	IR settings are adjusted automatically to prevent overexposure or underexposure.

If **Mode** is set to **Manual**, drag the **Grade** slider left or right to decrease or increase the value. Click the – and + signs to make fine adjustments.

## Defog

To enable the defog function, set **Mode** to **OFF**, **Manual**, or **Auto**.

<b>Auto</b>	The defog function is enabled automatically when the scene is obscured by fog or haze.
<b>Manual</b>	The defog function is always enabled.

If **Mode** is set to **Manual**, do the following:

1. Set **Intensity** to **Low**, **Medium**, or **High**.
2. Set **Airlight Mode** to **Auto** or **Manual**.

Mode  ▼  
 Intensity  ▼  
 Airlight Mode  ▼

**Auto** The defog function is fine-tuned automatically (recommended).

**Manual** The defog function is fine-tuned by the user using the **Grade** slider.

Click **Save** to apply the settings.

## Fisheye

On fisheye cameras, in the **Fisheye** area, you can select your installation mode (ceiling, wall, or ground) and your desired display mode. There are 7 display modes to choose from.



**Original** 360° view without dewarping.



**Single Panorama** 360° view in a panoramic layout.



**Double Panorama** Two 180° views in a panoramic layout.



**1+3 EPTZ** Original 360° view plus three EPTZ (virtual PTZ) region images. All views support zoom and movement.



**Single Image** Displays a single view from within the 360° view.



**4 EPTZ** Four EPTZ (virtual PTZ) region images. All views support zoom and movement.



**Vertical Panorama** Two vertical panoramic views.




## Managing Profiles

After you have configured the camera properties for each profile (Normal, Day, Night), you can set the profile(s) that you want the system to use on the **Setup > Camera Setup > Profile Management** page.

Next to **Profile Management**, select **Normal**, **Full Time**, or **Schedule**. By default, the system has the **Day** profile always enabled.

- Normal**      The Normal profile is always enabled.
- Full Time**      The Day profile or Night profile is always enabled, depending on your selection.
- Schedule**      The system switches between the Day profile and Night profile. Drag the sliders on the left and right sides of the timeline to set the Night-to-Day and Day-to-Night switching times.



Click **Save** to apply the settings.

## Configuring Streaming Settings

You can configure video streaming properties on the **Setup > Compression Setup > Video** page.

The page is divided into two sections: **Main Stream** and **Sub Stream**. In the **Sub Stream** section, two sub streams are configurable: **Sub Stream 1** and **Sub Stream 2**. To enable a sub stream, select one of the sub streams, and then select the **Enable** check box.

The screenshot shows the 'Video' configuration page with two main sections: 'Main Stream' and 'Sub Stream'.

**Main Stream Settings:**

- Format: H.264H
- Resolution: 1920x1920 (1920x1920)
- Frame Rate (FPS): 30
- Bit Rate Type: VBR
- Quality: 4
- Reference Bit Rate: 3072-16384Kb/S
- Bit rate: Customized
- I-Frame Interval: 60 (1-150)
- Watermark Settings:  Watermark Settings
- Watermark Text: DigitalCCTV

**Sub Stream Settings:**

- Enable:  Enable
- Sub Stream: Sub Stream 1
- Format: H.264H
- Resolution: 640x640 (640x640)
- Frame Rate (FPS): 30
- Bit Rate Type: VBR
- Quality: 4
- Reference Bit Rate: 512-2816Kb/S
- Bit rate: 768
- I-Frame Interval: 60 (1-150)

At the bottom of the page, there are three buttons: 'Default', 'Refresh', and 'Save'.

For each record type (**General, Motion, Alarm**), you can configure the encoding format, resolution, frame rate, bit rate, and I-frame interval settings. You can also apply a custom watermark to the main stream.

### Format

In the **Format** box, select **H.264B**, **H.264**, **H.264H**, **MJPEG**, or **H.265**.

- H.264** Main Profile. Uses less bandwidth than Baseline Profile at the same quality.
- H.264B** Baseline Profile. Uses up to 50% less bandwidth than MPEG4 and up to 80% less than MJPEG. Higher compression and lower quality than H.264.
- H.264H** High Profile. Uses less bandwidth than Main Profile at the same quality. Lower compression and higher quality than H.264.
- MJPEG** Uses the most bandwidth but produces excellent image quality with access to every image in the stream.
- H.265** High Efficiency Video Coding. Supports 4K resolution. Twice as efficient as H.264.

### Resolution

In the **Resolution** box, select a resolution from the list. The available options differ between the main stream and sub streams.

## Frame Rate

In the **Frame Rate (FPS)** box, select a frame rate within the available range (1–30 fps for NTSC cameras; 1–25 fps for PAL cameras).

## Bit Rate

In the **Bit Rate Type** box, select **CBR** or **VBR**.

<b>CBR</b>	Constant bit rate. The bit rate remains constant (recommended for low-bandwidth environments). Required if MJPEG compression is used.
<b>VBR</b>	Variable bit rate. The bit rate changes according to the complexity of the scene. Select a <b>Quality</b> level between <b>1</b> (lowest quality) and <b>6</b> (highest quality).

In the **Bit Rate** box, select a bit rate from the list using the **Reference Bit Rate** as a guide.

## I-Frame Interval

In the **I-Frame Interval** box, enter a value between 1 and 150. The default I-frame interval is two times the frame rate. For example, if the frame rate is 30 fps, the I-frame interval will be 60.


## Watermark

To apply a custom watermark to the main stream, select the **Watermark Settings** check box. In the **Watermark Text** box, enter the watermark text. The text cannot have any spaces but underscores (\_), and hyphens (-) are acceptable.

Click **Save** to apply the settings.

## Configuring Snapshot Settings

You can configure snapshot properties on the **Setup > Compression Setup > Snapshot** page.

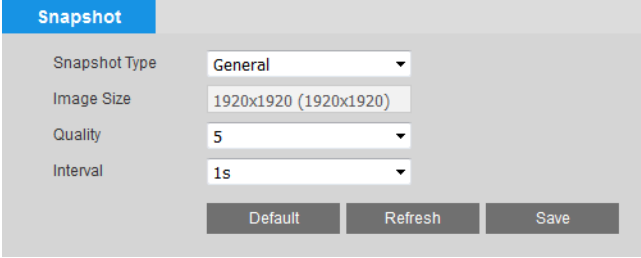

The screenshot shows a configuration panel titled "Snapshot" with the following settings:

- Snapshot Type:** General
- Image Size:** 1920x1920 (1920x1920)
- Quality:** 5
- Interval:** 1s

At the bottom of the panel are three buttons: "Default", "Refresh", and "Save".

### Snapshot Type

Set the **Snapshot Type** to **General** or **Event**.

<b>General</b>	Snapshots are taken according to a user-defined schedule.
<b>Event</b>	Snapshots are taken whenever an alarm, motion detection, camera tampering, or system event occurs.

### Image Size

The image size is determined by the main stream resolution setting. It is not configurable. (See [Resolution](#) on page 34).

## Quality

Set the **Quality** to a value between **1** (lowest) and **6** (highest).


## Interval

Select a snapshot frequency between 1 snapshot per second (**1s**) and 7 snapshots per second (**7s**), or click **Customized** to define a custom setting between 1 and 50,000 seconds.

Click **Save** to apply the settings.

## Configuring Privacy Masks

You can configure privacy mask properties on the **Setup > Compression Setup > Overlay > Privacy** page.

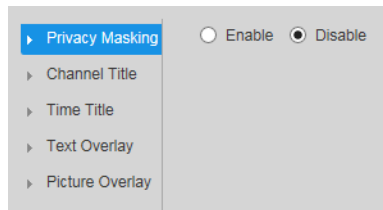

To enable privacy masking, click **Enable**. Four privacy masks appear in the preview window.



Delete any masks that you don't need. To delete a mask, right-click it or select it and then click **Delete**. To remove all the masks, click **Remove All**.

To move a mask, select it and drag the center of the mask.

To resize a mask, drag one of the corner handles. To draw a new mask, drag your mouse anywhere in the preview window.

Click **Save** to apply the settings.

## Configuring the Channel Title

You can configure the channel title properties on the **Setup > Compression Setup > Overlay > Channel Title** page.

To display the channel title, click **Enable**, and then click **Save**. By default, the channel title appears in the lower left corner of the video image.

To move the channel title, drag the yellow **Channel Title** box to the desired location in the preview window, and then click **Save**.

To modify the channel title, enter the new title in the **Input Channel Title** field, and then click **Save**.

To hide the channel title, click **Disable**, and then click **Save**.

Privacy Masking  Enable  Disabled

Channel Title

Input Channel Title:

IPC

Time Title

Text Overlay

Picture Overlay

## Configuring the Time Title

You can configure the time title properties on the **Setup > Compression Setup > Overlay > Time Title** page.

To display the channel title, click **Enable**, and then click **Save**. By default, the channel title appears in the upper right corner of the video image.

To display the day of the week, select the **Show Day of Week** check box, and then click **Save**.

To move the time title, drag the yellow **Time Title** box to the desired location in the preview window, and then click **Save**.

To hide the time title, click **Disable**, and then click **Save**.

Privacy Masking  Enable  Disable

Channel Title

Time Title

Text Overlay

Picture Overlay

Show Day of Week

## Configuring Customized Text Overlays

You can configure customized text overlays on the **Setup > Compression Setup > Overlay > Text Overlay** page.

To display the text overlay, click **Enable**, enter the desired text in the **Input Text** field, and then click **Save**. By default, the text overlay appears in the lower right corner of the video image.

Set **Text Alignment** to **Left** or **Right**.

To move the text overlay, drag the yellow **Text Overlay** box to the desired location in the preview window, and then click **Save**.

To hide the text overlay, click **Disable**, and then click **Save**.

Privacy Masking  Enable  Disable

Channel Title

Time Title

Text Overlay

Picture Overlay

Input Text:

Text Alignment

Right


## Configuring Picture Overlays

You can configure picture overlays on the **Setup > Compression Setup > Overlay > Picture Overlay** page.

To display a picture overlay, click **Enable**, click Upload Picture, upload the picture, and then click **Save**. The file must be in BMP format, less than 16 KB, and no more than 128×128 pixels.

To move the picture overlay, drag the yellow frame to the desired location in the preview window, and then click **Save**.

To hide the picture overlay, click **Disable**, and then click **Save**.

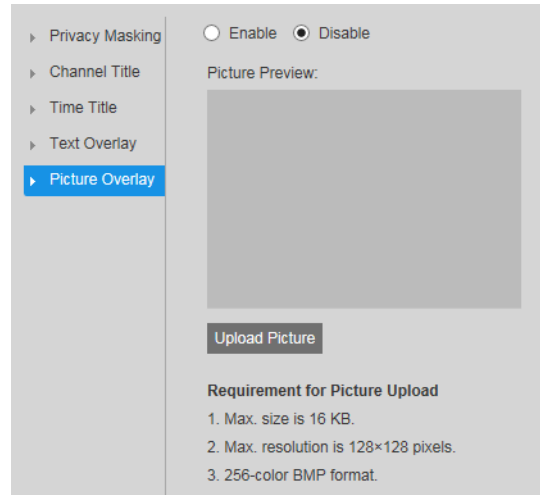

## Configuring Regions of Interest

You can configure regions of interest (ROI) on the **Setup > Compression Setup > ROI** page.

To enable the ROI function, click **Enable**.

In the preview window, drag your mouse over the portion of the scene that you want to designate as a region of interest, select an **Image Quality** level between **1** (lowest) and **6** (highest), and then click **Save**. You can add up to 4 regions of interest.

To delete a single region of interest, select it, and then click **Delete**. To delete all regions of interest, click **Remove All**.

## Configuring Audio Settings

You can configure audio settings for Main Stream, Sub Stream 1, and Sub Stream 2 profiles on the **Setup > Audio Setup > Audio** page.

The screenshot shows the 'Audio' configuration page. It is divided into two main sections: 'Encoding' and 'Properties'.  
 In the 'Encoding' section, there are two sub-sections: 'Main Stream' and 'Sub Stream'.  
 - 'Main Stream': The 'Enable' checkbox is checked. The 'Format' dropdown is set to 'G.711Mu' and the 'Sampling Frequency' dropdown is set to '8k'.  
 - 'Sub Stream': The 'Enable' checkbox is unchecked. The 'Format' dropdown is set to 'G.711Mu' and the 'Sampling Frequency' dropdown is set to '8k'.  
 In the 'Properties' section, the 'Audio In Type' dropdown is set to 'Mic', and the 'Noise Filter' dropdown is set to 'Enable'. Below these are two sliders: 'Microphone Volume' and 'Speaker Volume', both with a range from - to + 50 and a slider knob positioned in the middle.  
 At the bottom of the page are three buttons: 'Default', 'Refresh', and 'Save'.

To enable audio for the stream, select the **Enable** check box, select the format (**G.711A**, **G.711Mu**, **G.726**, **AAC**), and then select a sampling frequency (**8–64 kHz**).

In the **Properties** area, select the audio input type (**LineIn**, **Mic**), enable or disable noise filtering, and adjust the microphone and/or speaker volumes by moving the sliders. Click the + and - signs to make fine adjustments.

Click **Save** to apply the settings.





# 5

## Configuring Network Settings

This chapter contains the following sections:

- [Configuring TCP/IP, page 42](#)
- [Configuring Network Connections, page 44](#)
- [Configuring ONVIF, page 45](#)
- [Configuring PPPoE Settings, page 45](#)
- [Configuring DDNS Settings, page 46](#)
- [Filtering IP/MAC Addresses, page 47](#)
- [Configuring Email Settings, page 49](#)
- [Configuring UPnP Port Mapping, page 50](#)
- [Configuring SNMP Settings, page 51](#)
- [Configuring Bonjour, page 52](#)
- [Configuring Multicast Settings, page 52](#)
- [Configuring 802.1X Settings, page 53](#)
- [Configuring QoS Settings, page 53](#)
- [Working with Certificates, page 54](#)

## Configuring TCP/IP

You can configure TCP/IP settings, including IPv4/IPv6 and ARP/Ping settings, on the **Setup > Network Setup > TCP/IP** page.

### IPv4 Address Configuration

By default, the camera uses IPv4 and obtains IP settings automatically via DHCP.

In the **Hostname** field, enter a nickname for the camera that can be mapped to the IP address and used to identify the camera.

To manually assign IP address settings, set **Mode** to **Static**, and then replace the values in the **IP Address**, **Subnet Mask**, and **Default Gateway** fields.

To manually assign DNS server addresses, replace the values in the **Preferred DNS Server** and **Alternate DNS Server** fields.

Click **Save** to apply the settings.

## IPv6 Address Configuration

To enable IPv6, set **IP Version** to **IPv6**. Verify that the IP address and default gateway (router) address are in the same network segment. Click **Save** to apply the settings.

The screenshot shows the TCP/IP configuration interface. The 'IP Version' dropdown menu is highlighted with a red box and is set to 'IPv6'. Below it, the 'Link Address' is 'fe80::021f:55ff:fe2d:0716/64'. The 'IP Address' field contains '2001:250:3000:1::1:2' and the 'Default Gateway' is '2001:250:3000:1::1:1'. Other fields include Hostname (HCD8G), Ethernet Card (Wire(Default)), Mode (Static selected), MAC Address (00 . 1f . 55 . 2d . 07 . 16), Preferred DNS Server (2001:da8:2000:2017::33), and Alternate DNS Server (2001:da8:2000:2193::33). The 'Enable ARP/Ping' checkbox is checked. Buttons for Default, Refresh, and Save are at the bottom.

## ARP/Ping

You can assign an IP address to the camera using the ARP/Ping service.

**To enable ARP/Ping to set the IP address:**

1. Obtain an unused IP address in the same LAN as your PC.
2. Write down the MAC address of the camera (it is listed on the label).
3. Select the **Enable ARP/Ping** check box, and then click **Save**.

The screenshot shows the TCP/IP configuration interface. The 'IP Version' dropdown menu is set to 'IPv4'. The 'Enable ARP/Ping' checkbox is checked and highlighted with a red box. The 'IP Address' field contains '159 . 99 . 251 . 86' and the 'Default Gateway' is '159 . 99 . 251 . 1'. Other fields include Hostname (HCD8G), Ethernet Card (Wire(Default)), Mode (DHCP selected), MAC Address (00 . 1f . 55 . 2d . 07 . 16), Preferred DNS Server (199 . 63 . 219 . 166), and Alternate DNS Server (165 . 195 . 30 . 99). Buttons for Default, Refresh, and Save are at the bottom.

- Open the **Command Prompt** window on your PC (in Windows 7, click **Start > All Programs > Accessories > Command Prompt**) and type the appropriate commands for your operating system:

Windows syntax
<pre>arp -s &lt;IP Address&gt; &lt;MAC&gt; ping -l 480 -t &lt;IP Address&gt;</pre>
Windows example
<pre>arp -s 192.168.0.125 11-40-8c-18-10-11 ping -l 480 -t 192.168.0.125</pre>

UNIX/Linux/Mac syntax
<pre>arp -s &lt;IP Address&gt; &lt;MAC&gt; ping -s 480 &lt;IP Address&gt;</pre>
UNIX/Linux/Mac example
<pre>arp -s 192.168.0.125 11:40:8c:18:10:11 ping -s 480 192.168.0.125</pre>

- Reboot the camera. If the setup was successful, the Command Prompt window will display "Reply from" and the IP address (for example, "Reply from 192.168.0.125 ..."). To verify that the IP address works, open your browser and type in the address bar **http://** followed by the IP address (for example, <http://192.168.0.125>), then press Enter.

## Configuring Network Connections

You can configure network connections and port settings on the **Setup > Network Setup > Connection > Connection** page.

Connection	ONVIF
Max Connections	<input type="text" value="10"/> (1-20)
TCP Port	<input type="text" value="37777"/> (1025-65534)
UDP Port	<input type="text" value="37778"/> (1025-65534)
HTTP Port	<input type="text" value="80"/>
RTSP Port	<input type="text" value="554"/>
HTTPS Port	<input type="text" value="443"/>
<input type="button" value="Default"/> <input type="button" value="Refresh"/> <input type="button" value="Save"/>	

By default, the maximum number of simultaneous connections the camera will support is set to **10**. To change this setting, in the **Max Connections** field, enter a value between **1** and **20**.

If you want, you can change the TCP, UDP, HTTP, RTSP, and HTTPS port numbers from their defaults.

Click **Save** to apply the settings.

## Configuring ONVIF

ONVIF (Open Network Video Interface Forum) is a global standard for the interoperability of IP-based physical security products.

You can enable or disable ONVIF authentication on the **Setup > Network Setup > Connection > ONVIF** page.

ONVIF login authentication is enabled by default. To disable it, select **OFF**, and then click **Save**.

---

**Note** HTTPS is enabled by default. If your headend only supports ONVIF HTTP, you can disable HTTPS by clearing the **HTTPS Setting** check box and then clicking **Save**. A warning message will appear indicating that your connection is no longer secure.

---

## Configuring PPPoE Settings

You can configure Point-to-Point Protocol over Ethernet (PPPoE) settings on the **Setup > Network Setup > PPPoE** page.

### To enable PPPoE:

1. Select the **Enable** check box.
2. In the **User Name** and **Password** fields, enter the user name and password that you received from your Internet service provider (ISP).
3. Click **Save** to apply the settings. The camera will connect to the Internet via PPPoE after rebooting.

## Configuring DDNS Settings

You can configure Dynamic DNS (DDNS) settings on the **Setup > Network Setup > DDNS** page.

You can use a DDNS service to track and update your camera's dynamic IP address, so that even when the numeric IP address changes the DDNS address always remains the same.

### To access your camera using a DDNS service:

1. Register an account with a supported DDNS service, such as DynDNS or Honeywell's free DDNS service ([www.hennvr-ddns.com](http://www.hennvr-ddns.com)).
2. Select the **Server Type** check box.
3. Select your DDNS service from the **Server Type** drop-down list.
4. In the **Domain Name** field, enter the domain name (hostname) that you registered with the DDNS service (for example, *mycamera.dyndns.org*).
5. In the **User Name** and **Password** fields, enter the user name and password of the account that you registered in step 1.
6. In the **Update Period** field, enter the interval in minutes between address updates sent to the DDNS server.

---


**Note** If you selected Honeywell DDNS as your DDNS service, the domain name is set to the camera's MAC address by default and no user name or password are required. Set **Mode** to **Auto** or **Manual**. If you configure the domain name manually, click **Test** to verify that the domain name is registered.

---

7. Click **Save** to apply the settings. You can now access the camera by entering the domain name in your browser's address bar.

## Filtering IP/MAC Addresses

You can configure IP filter settings on the **Setup > Network Setup > IP Filter** page.

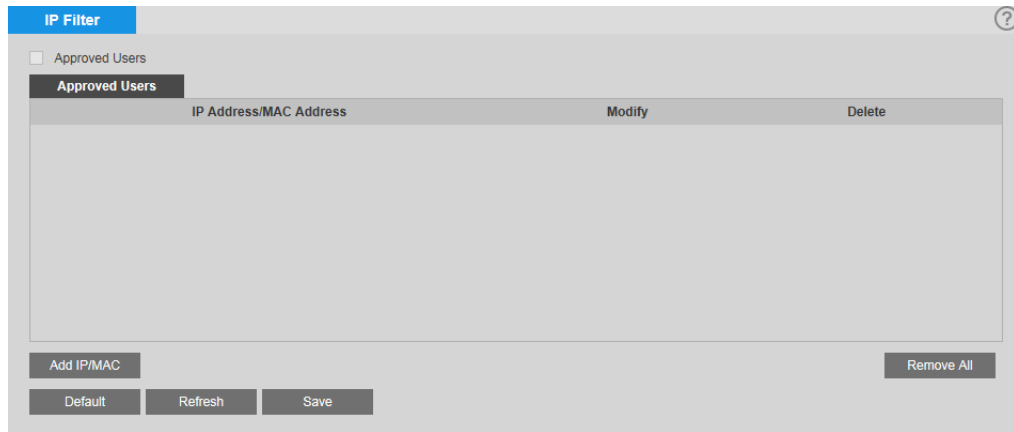


When the IP filter is enabled, remote access to the camera is restricted to specific IP or MAC addresses. You can add or remove addresses from the list at any time. If a user is accessing the camera over a WAN, enter the MAC address of the user's router instead of an IP address.


## Adding IP/Mac Addresses to the List of Approved Users

To add an IP/MAC address:

1. Click **Add IP/MAC**.
2. In the **Add IP/MAC** window, select **IP Address**, **IP Segment**, or **MAC** from the drop-down list, enter the relevant address, and then click **Save**.

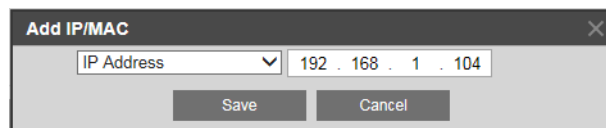

The address is added to the list of approved users.

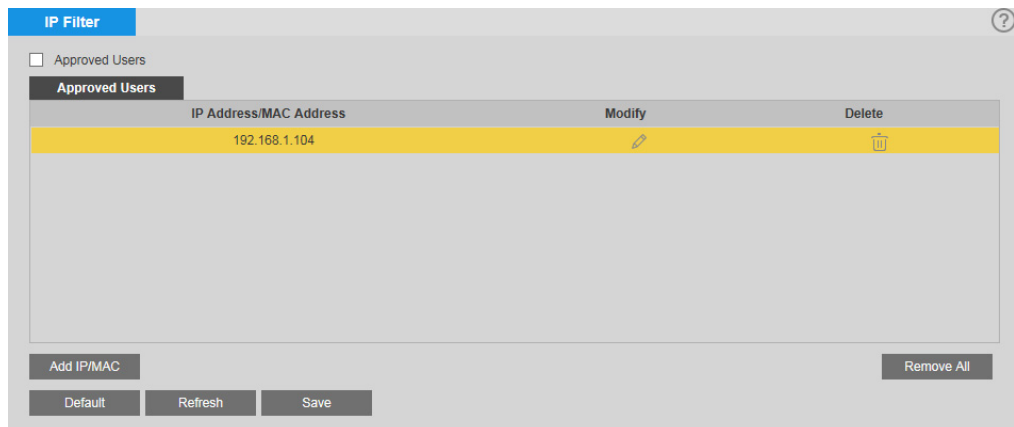


3. Select the **Approved Users** check box, and then click **Save** to apply the settings.

## Editing IP/Mac Addresses

To edit an IP/MAC address:


1. In **Address List**, click the **Modify** icon  of the address that you want to edit.
2. In the **Modify IP/MAC** window, edit the address as needed, and then click **Save**.

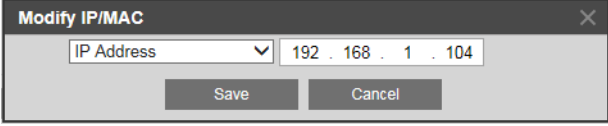

The screenshot shows a dialog box titled "Modify IP/MAC". It features a dropdown menu labeled "IP Address" and a text input field containing the IP address "192 . 168 . 1 . 104". Below the input field are two buttons: "Save" and "Cancel".

## Deleting IP/Mac Addresses from the List of Approved Users

To delete a single IP/MAC address:

1. In the **Address List**, click the **Delete** icon  of the address that you want to delete.
2. A confirmation message appears. Click **OK** to continue, and then click **Save** to apply the settings. The address is removed from the list of approved users.

To delete multiple IP/MAC addresses:

1. Click **Remove All**.
2. A confirmation message appears. Click **OK** to continue, and then click **Save** to apply the settings. All addresses are removed from the list of approved users.



## Configuring Email Settings

You can configure email notification settings on the **Setup > Network Setup > SMTP** page.

### To set up email notifications:

1. In the **SMTP Server** and **Port** fields, enter the SMTP server and port information.
2. In the **User Name** and **Password** fields, enter the sender's email user name and password. Alternatively, if the server supports anonymous login, you can select the **Anonymous** check box to log in without a user name and password.
3. In the **Sender** field, enter the sender's email address.
4. From the **Authentication** list, select an encryption mode (**SSL** or **TLS**) or select **None**.
5. In the **Title** field, enter the text that you want to appear in the subject line of the email.
6. Select the **Attachment** check box if you want to enable snapshot attachments.
7. In the **Mail Receiver** field, enter the recipient's email address, and then click the **+** sign to add it to the list. You can enter up to three email addresses. To remove an address from the list, select it, and then click the **-** sign.
8. In the **Interval** field, specify the interval between email notification messages. Enter a value between **0** (no interval) and **3600** seconds (60 minutes).

---

**Note** Setting an interval between email notifications reduces the load on the email server if multiple notifications are triggered simultaneously.

---

9. To have the system periodically verify that the email notification settings are working, select the **Send Health Messages** check box, and specify the **Interval**.
10. Click **Save** to apply the settings.
11. Click **Email Test** to send a test email to verify that the settings are configured properly.

## Configuring UPnP Port Mapping

You can configure Universal Plug and Play (UPnP) settings on the **Setup > Network Setup > UPnP** page.

UPnP ?

Enable    Mode: Manual    Router State Mapping Failed

Port Mapping List						
	Service Name	Protocol	Internal Port	External Port	Status	Modify
<input checked="" type="checkbox"/>	HTTP	WebService.TCP	80	8080	Mapping Failed	
<input checked="" type="checkbox"/>	TCP	PrivService.TCP	37777	37777	Mapping Failed	
<input checked="" type="checkbox"/>	UDP	PrivService.UDP	37778	37778	Mapping Failed	
<input checked="" type="checkbox"/>	RTSP	RTSPService.TCP	554	554	Mapping Failed	
<input checked="" type="checkbox"/>	HTTPS	HTTPSService.TCP	443	443	Mapping Failed	

Default    Refresh    Save

The UPnP protocol is used to detect network devices with clients running Windows.

To enable UPnP, select the **Enable** check box. The camera can now be detected by Windows' built-in network browser (My Network Places in Windows XP; Network in Windows 7).

### To enable UPnP in Windows XP:

1. Go to **Start > Control Panel > Add or remove programs**.
2. Click **Add or remove programs**, then select **Networking Services** in the Windows Components Wizard.
3. Click **Details**, then select **Internet Gateway Device Discovery** and **Control Client and UPnP User Interface**.
4. Click **OK** to begin the installation.

### To enable UPnP in Windows 7:

1. Go to **Start > Control Panel > Network and Internet > Network and Sharing Center**.
2. On the left pane, click **Change advanced sharing settings**.
3. On your current network profile, in the **Network discovery** area, click **Turn on network discovery**, and then click **Save changes**.

## Configuring SNMP Settings

You can configure Simple Network Management Protocol (SNMP) settings on the **Setup > Network Setup > SNMP** page.

SNMP is a protocol for collecting, organizing, and exchanging management information between managed devices on a network.

### To enable SNMP:

1. Next to **SNMP Version**, select the SNMP version(s) that you want to use. For best security, use SNMPv3. You can select SNMPv1 only, SNMPv2 only, both SNMPv1 and SNMPv2, or SNMPv3 only.

---

**Note** If you select SNMPv1 or SNMPv2, a warning message will appear.

---

2. By default, the **SNMP Port** is **161**. To change the port, enter a number in the range 1–65535.
3. In the **Trap Address** field, enter the IP address of the SNMP server where trap notifications will be sent.
4. By default, the **Trap Port** is **162**. To change the port, enter a number in the range 1–65535.
5. If SNMPv3 is selected, for both read-only and read-write, enter a user name, select an authentication method (MD5 or SHA), and create authentication and encryption passwords (must be at least 8 characters long).
6. Click **Save** to apply the settings.

## Configuring Bonjour

You can configure Bonjour settings on the **Setup > Network Setup > Bonjour** page.

Bonjour is a zero configuration networking application that allows you to create a network in which devices can discover each other without requiring any user configuration.

When this function is enabled, you can discover the camera on a Mac OS computer by opening Safari and going to **Display All Bookmarks > Bonjour**.

Bonjour is enabled by default. To disable it, clear the **Enable** check box, and then click **Save**.

## Configuring Multicast Settings

You can configure multicast settings on the **Setup > Network Setup > Multicast** page.

Multicast is a transmission mode for data packets that minimizes bandwidth use and CPU load when multiple computers are receiving the same data packet simultaneously. You can configure multicast for Main Stream, Sub Stream 1, and Sub Stream 2 profiles.

### To enable multicast:

1. For each stream that you want to enable multicast in, select the **Enable** check box, and then enter a multicast address and port, using the suggested ranges as a guide.
2. Click **Save** to apply the settings.

### To view video in multicast mode:

- In **Live** view, select **Multicast** from the **Protocol** drop-down list.

## Configuring 802.1X Settings

You can configure 802.1X settings on the **Setup > Network Setup > 802.1X** page.

802.1X is a port-based network access control protocol for preventing unauthorized devices from accessing the LAN. You can set up user name and password credentials for the camera so that it is not blocked by the network switch.

### To enable 802.1X:

1. Select the **Enable** check box.
2. In the **User Name** field, enter the user name that will be used to authenticate the camera.
3. In the **Password** field, enter the password that will be used to authenticate the camera.
4. Click **Save** to apply the settings.

## Configuring QoS Settings

You can configure Quality of Service (QoS) settings on the **Setup > Network Setup > QoS** page.


QoS settings control bandwidth use by prioritizing certain data packets over others.

### To enable QoS:

1. In the **Realtime Monitor** field, enter a DSCP (Differentiated Services Codepoint) value for live video packets. Select a value between 0 (lowest priority) and 63 (highest priority).
2. In the **Command** field, enter a DSCP (Differentiated Services Codepoint) value for non-video packets. Select a value between 0 (lowest priority) and 63 (highest priority).
3. Click **Save** to apply the settings.

## Working with Certificates

You can configure certificate settings on the **Setup > Network Setup > Certificate** page.

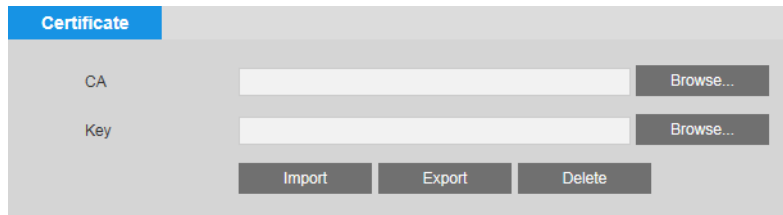

The screenshot shows the 'Certificate' configuration page. It features a blue header with the word 'Certificate'. Below the header, there are two rows of input fields. The first row is labeled 'CA' and has a text input field followed by a 'Browse...' button. The second row is labeled 'Key' and has a text input field followed by a 'Browse...' button. At the bottom of the page, there are three buttons: 'Import', 'Export', and 'Delete'.

### To install a Honeywell-signed root certificate:

1. Click **Export**, navigate to the directory where you want to save the certificate (**ca.crt**) on your PC, and then click **Save**.
2. Go to the directory where you saved the certificate and double-click the certificate. The **Certificate** window opens.
3. In the **Certificate** window, on the **General** tab, click **Install Certificate** to open the Certificate Import Wizard.
4. Click **Next** to continue.
5. Click **Place all certificates in the following store**, click **Browse**, click **Trusted Root Certification Authorities**, and then click **OK**.
6. Click **Next**, and then click **Finish** to close the Certificate Import Wizard. A confirmation dialog box appears with the message "The import was successful."
7. Click **OK**, and then click **OK** to close the **Certificate** window.

### To import a certificate or private key:

- Next to **CA** or **Key**, click **Browse**, navigate to the location of the certificate or key on your PC, and then click **Import**.

# 6

## Configuring Event Settings

This chapter contains the following sections:

- [Configuring Alarm Events, page 55](#)
- [Configuring System Events, page 57](#)
- [Configuring Motion Detection Events, page 59](#)
- [Configuring Camera Tampering Events, page 61](#)
- [Configuring Scene Change Events, page 62](#)
- [Configuring Audio Events, page 63](#)
- [Accessing Extensional Video Analytics, page 64](#)

## Configuring Alarm Events

You can configure alarm event settings on the **Setup > Alarm Setup > Alarm Setup** page.

The screenshot shows the 'Alarm Activation' configuration page. It features a blue header with the text 'Alarm Activation'. Below the header, there are several configuration options:

- Enable
- Alarm Input: A dropdown menu currently showing 'Alarm1'.
- Alarm Period: A button labeled 'Setup'.
- Anti-Dither: A text input field with '0' and the label 'seconds (0-100)'. To its right is a 'Sensor Type' dropdown menu showing 'NO'.
- Record
- Record Delay: A text input field with '10' and the label 'seconds (10-300)'. To its right is a 'Sensor Type' dropdown menu showing 'NO'.
- Alarm Output: A text input field with '1' and '2' buttons.
- Alarm Delay: A text input field with '10' and the label 'seconds (10-300)'. To its right is a 'Sensor Type' dropdown menu showing 'NO'.
- Send Email
- Snapshot

At the bottom of the form, there are three buttons: 'Default', 'Refresh', and 'Save'.

**To enable the alarm function:**

1. Select the **Enable** check box.
2. From the **Alarm Input** list, select the alarm input that you want to configure (**Alarm1** or **Alarm2**).

- Next to **Alarm Period**, click **Setup**. The **Alarm Period** window opens.

- Set the days and times when you want the alarm function to be active, and then click **Save**.
- In the **Anti-Dither** field, enter the anti-dither time in seconds. Enter a value between **0** and **100** seconds. The system will only allow one alarm event within this period.
- Set **Sensor Type** to **NO** (normally open) or **NC** (normally closed), depending on the alarm input type.
- To start recording video when an alarm event is detected, select the **Record** check box.
- In the **Record Delay** field, enter the number of seconds that the system will continue to record video after an alarm event has ended. Enter a value between **10** and **300**.
- To generate an alarm output when an alarm event is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.
- In the **Alarm Delay** field, enter the number of seconds that the system will continue to generate an alarm output after an alarm event has ended. Enter a value between **10** and **300**.
- To send an email notification when an alarm event is detected, select the **Send Email** check box. Email settings must be configured in **Setup > Network Setup > SMTP (Email)**. See [Configuring Email Settings](#) on page 49.
- To take a snapshot when an alarm event is detected, select the **Snapshot** check box.

---

**Note** For the snapshot to be attached to the email notification, the **Attachment** check box must be selected in **Setup > Network Setup > SMTP (Email)**. See [Configuring Email Settings](#) on page 49.

---

- Click **Save** to apply the settings.



## Configuring System Events

You can configure system event settings (for SD card and network errors and illegal login attempts) on the **Setup > Alarm Setup > Event** page.

### Configuring SD Card Event Settings

There are three types of SD card events:

- **No SD Card:** There is no microSD card installed in the camera.
- **SD Card Error:** The installed microSD card is not working.
- **Capacity Warning:** The installed microSD card is full.

You can configure settings for each type of event.

The screenshot shows the configuration page for SD Card events. It has three tabs: 'SD Card' (active), 'Network', and 'Illegal Access'. Under the 'SD Card' tab, there is a dropdown menu for 'Event Type' currently showing 'No SD Card'. Below this are four checkboxes: 'Enable' (unchecked), 'Alarm Output' (checked), 'Alarm Delay' (set to 10 seconds), and 'Send Email' (unchecked). At the bottom of the configuration area are three buttons: 'Default', 'Refresh', and 'Save'.

To enable SD card event detection:

1. On the **SD Card** tab, select the event type that you want to configure from the **Event Type** list (**No SD Card**, **SD Card Error**, or **Capacity Warning**).
2. Select the **Enable** check box.
3. To generate an alarm output when an event is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.
4. In the **Alarm Delay** field, enter the number of seconds that the system will continue to generate an alarm output after the event has ended. Enter a value between **10** and **300**.
5. To send an email notification when the event is detected, select the **Send Email** check box. Email settings must be configured in **Setup > Network Setup > SMTP (Email)**. See [Configuring Email Settings](#) on page 49.
6. Click **Save** to apply the settings.

### Configuring Network Event Settings

There are two types of network events:

- **Network Disconnected:** The camera is offline.
- **IP Conflict:** The camera has the same IP address as another device on the network.

You can configure settings for each type of event.

#### To enable network event detection:

1. On the **Network** tab, select the event type that you want to configure from the **Event Type** list (**Network Disconnected** or **IP Conflict**).
2. Select the **Enable** check box.
3. In the **IP Address** field, enter the IP address of the headend, and in the **Time** field, enter the countdown time. If no connection is established with the IP address within the specified time, the system will detect a network disconnection event.
4. To start recording video when the event is detected, select the **Record** check box.
5. In the **Record Delay** field, enter the number of seconds that the system will continue to record video after the event has ended. Enter a value between **10** and **300**.
6. To generate an alarm output when an event is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.
7. In the **Alarm Delay** field, enter the number of seconds that the system will continue to generate an alarm output after the event has ended. Enter a value between **10** and **300**.
8. Click **Save** to apply the settings.

## Configuring Illegal Access Event Settings

An illegal access event occurs when a specified number of unsuccessful login attempts is exceeded.

**To enable illegal access detection:**

1. On the **Illegal Access** tab, select the **Enable** check box.
2. In the **Failed Login Attempts** field, enter the number of unsuccessful login attempts the system will allow before an illegal access event is detected. Enter a value between **3** and **10**.
3. To generate an alarm output when an event is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.
4. In the **Alarm Delay** field, enter the number of seconds that the system will continue to generate an alarm output after the event has ended. Enter a value between **10** and **300**.
5. To send an email notification when an illegal access event is detected, select the **Send Email** check box. Email settings must be configured in **Setup > Network Setup > SMTP (Email)**. See [Configuring Email Settings](#) on page 49.


## Configuring Motion Detection Events

You can configure motion detection event settings on the **Setup > Video Analytics > Video Detection > Motion Detection** page.

**To enable motion detection:**


1. Select the **Enable** check box.
2. Next to **Alarm Period**, click **Setup**. The **Alarm Period** window opens.
3. Set the days and times when you want the alarm function to be active, and then click **Save**.
4. In the **Anti-Dither** field, enter the anti-dither time in seconds. Enter a value between **0** and **100** seconds. The system will only allow one motion detection event within this period.
5. Set up motion detection areas:

- a. Next to **Area**, click **Setup**. The **Area** window opens.

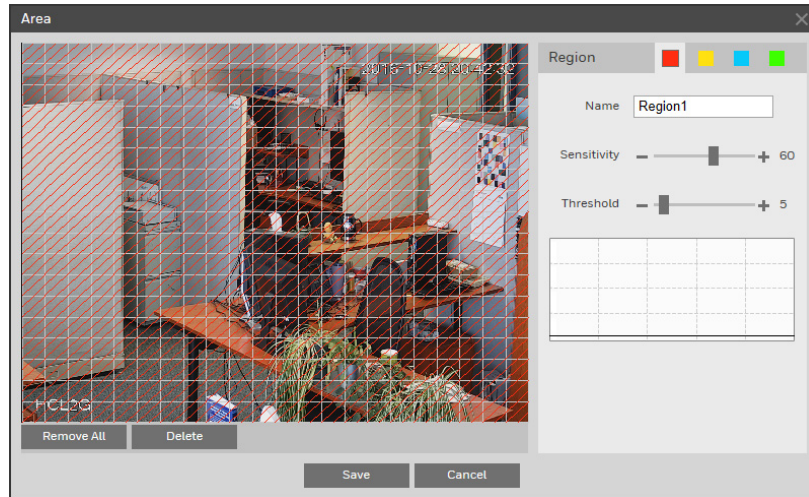

- b. By default, the whole video window is configured as a motion detection area. To define a smaller area, drag your mouse over the area(s) that you want to deselect, or click **Remove All**, and then redraw the area(s) with your mouse.
- c. You can define up to 4 motion detection profiles (regions), each with different sensitivity and threshold settings. Next to **Region**, click one of the solid color tiles to select a region. Drag the **Sensitivity** and **Threshold** sliders to the desired values. Click the – and + signs to make fine adjustments.

Sensitivity measures the amount of change in a scene that qualifies as motion. Threshold measures the amount of motion in a scene required to trigger a motion detection event.

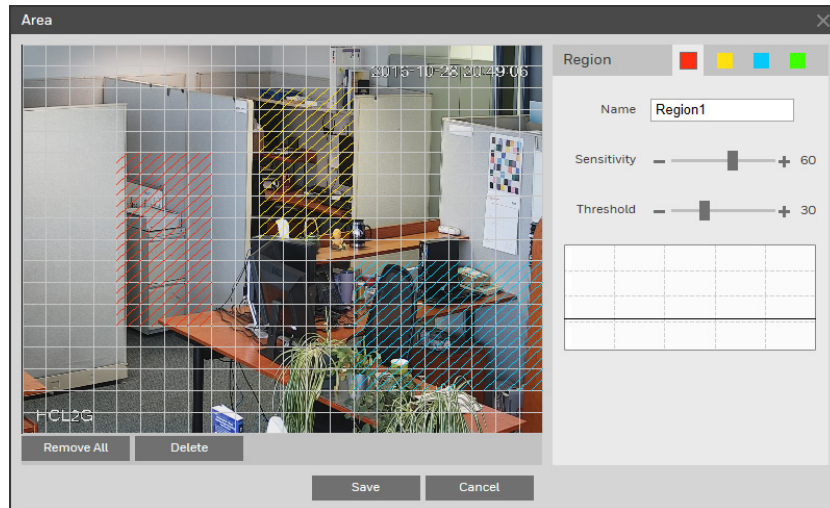

- d. Click **Save** to apply the settings.
6. To start recording video when motion is detected, ensure that the **Record** check box is selected.
  7. In the **Record Delay** field, enter the number of seconds that the system will continue to record video after the event has ended. Enter a value between **10** and **300**.
  8. To generate an alarm output when motion is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.

9. In the **Alarm Delay** field, enter the number of seconds that the system will continue to generate an alarm output after the event has ended. Enter a value between **10** and **300**.
10. To send an email notification when motion is detected, select the **Send Email** check box. Email settings must be configured in **Setup > Network Setup > SMTP (Email)**. See [Configuring Email Settings](#) on page 49.
11. To take a snapshot when motion is detected, select the **Snapshot** check box.

---

**Note** For the snapshot to be attached to the email notification, the **Attachment** check box must be selected in **Setup > Network Setup > SMTP (Email)**. See [Configuring Email Settings](#) on page 49.

---

12. Click **Save** to apply the settings.

## Configuring Camera Tampering Events

You can configure camera tampering event settings on the **Setup > Video Analytics > Video Detection > Video Tampering** page.

**To enable camera tampering detection:**

1. Select the **Enable Tamper Detect** and/or the **Enable Defocus Detect** check box(es).
2. Next to **Alarm Period**, click **Setup**. The **Alarm Period** window opens.
3. Set the days and times when you want the alarm function to be active, and then click **Save**.
4. To start recording video when a tampering event is detected, ensure that the **Record** check box is selected.
5. In the **Record Delay** field, enter the number of seconds that the system will continue to record video after a tampering event has ended. Enter a value between **10** and **300**.
6. To generate an alarm output when a tampering event is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.
7. In the **Alarm Delay** field, enter the number of seconds that the system will continue to generate an alarm output after a tampering event has ended. Enter a value between **10** and **300**.

8. To send an email notification when a tampering event is detected, select the **Send Email** check box. Email settings must be configured in **Setup > Network Setup > SMTP (Email)**. See [Configuring Email Settings](#) on page 49.
9. To take a snapshot when a tampering event is detected, select the **Snapshot** check box.

---

**Note** For the snapshot to be attached to the email notification, the **Attachment** check box must be selected in **Setup > Network Setup > SMTP (Email)**. See [Configuring Email Settings](#) on page 49.

---

10. Click **Save** to apply the settings.

## Configuring Scene Change Events

You can configure scene change event settings on the **Setup > Video Analytics > Video Detection > Scene Change** page.

### To enable scene change detection:

1. Select the **Enable** check box.
2. Next to **Alarm Period**, click **Setup**. The **Alarm Period** window opens.
3. Set the days and times when you want the alarm function to be active, and then click **Save**.
4. To start recording video when a scene change event is detected, select the **Record** check box.
5. In the **Record Delay** field, enter the number of seconds that the system will continue to record video after a scene change event has ended. Enter a value between **10** and **300**.
6. To generate an alarm output when a scene change event is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.
7. In the **Alarm Delay** field, enter the number of seconds that the system will continue to generate an alarm output after a scene change event has ended. Enter a value between **10** and **300**.

8. To send an email notification when an alarm event is detected, select the **Send Email** check box. Email settings must be configured in **Setup > Network Setup > SMTP (Email)**. See [Configuring Email Settings](#) on page 49.
9. To take a snapshot when an alarm event is detected, ensure that the **Snapshot** check box is selected.

---

**Note** For the snapshot to be attached to the email notification, the **Attachment** check box must be selected in **Setup > Network Setup > SMTP (Email)**. See [Configuring Email Settings](#) on page 49.

---

10. Click **Save** to apply the settings.

## Configuring Audio Events

You can configure audio event settings on the **Setup > Video Analytics > Audio Detection** page.

**Audio Detection**

Enable Input Abnormality

Enable Intensity Change

Sensitivity  + 50

Threshold  + 50


Alarm Period

Anti-Dither  seconds (0-100)

Record

Record Delay  seconds (10-300)

Alarm Output

Alarm Delay  seconds (10-300)

Send Email

Snapshot

### To enable audio event detection:

1. To detect faults in the audio input, select the **Enable Input Abnormality** check box.
2. To detect unusual changes in the audio input:
  - a. Select the **Enable Intensity Change** check box.

- b. Drag the **Sensitivity** and **Threshold** sliders to the desired values. Click the – and + signs to make fine adjustments. **Sensitivity** controls changes to the audio input volume. **Threshold** controls the amount of change allowed in the audio environment before an audio detection event is triggered.
3. Next to **Alarm Period**, click **Setup**. The **Alarm Period** window opens.
4. Set the days and times when you want the alarm function to be active, and then click **Save**.
5. In the **Anti-Dither** field, enter the anti-dither time in seconds. Enter a value between **0** and **100** seconds. The system will only allow one audio event within this period.
6. To start recording video when an audio event is detected, ensure that the **Record** check box is selected.
7. In the **Record Delay** field, enter the number of seconds that the system will continue to record video after an audio event has ended. Enter a value between **10** and **300**.
8. To generate an alarm output when an audio event is detected, select the **Alarm Output** check box and select the alarm output(s) to be activated.
9. In the **Alarm Delay** field, enter the number of seconds that the system will continue to generate an alarm output after an audio event has ended. Enter a value between **10** and **300**.
10. To send an email notification when an audio event is detected, select the **Send Email** check box. Email settings must be configured in **Setup > Network Setup > SMTP (Email)**. See [Configuring Email Settings](#) on page 49.
11. To take a snapshot when an audio event is detected, select the **Snapshot** check box.

---


**Note** For the snapshot to be attached to the email notification, the **Attachment** check box must be selected in **Setup > Network Setup > SMTP (Email)**. See [Configuring Email Settings](#) on page 49.

---

12. Click **Save** to apply the settings.

## Accessing Extensional Video Analytics


You can access extensional video analytics, such as ADPRO® IntrusionTrace™ or ADPRO® LoiterTrace™, from the **Setup > Video Analytics > Smart Plan** page.

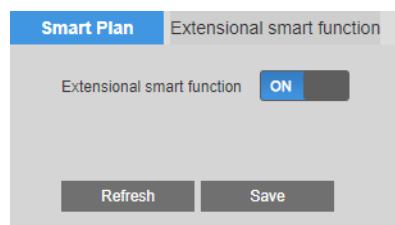



**To access extensional video analytics:**

1. On the **Smart Plan** tab, ensure that **Extensional smart function** is set to **ON**.
2. Click the **Extensional smart function** tab and select the features that you want to use. For example:
  - To access IntrusionTrace, select the **IntrusionTrace** check box, and then click **Open**.
  - To access LoiterTrace, select the **LoiterTrace** check box, and then click **Open**.

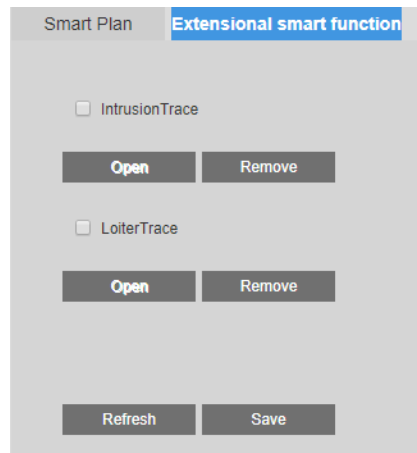



# 7

## Configuring Recording Settings

This chapter contains the following sections:

- [Configuring Recording Schedules, page 67](#)
- [Configuring Storage Settings, page 68](#)
- [Configuring Recording Settings, page 71](#)

## Configuring Recording Schedules

You can set up both regular and holiday schedules for recording video and saving snapshots on the **Setup > Storage Setup > Schedule** page.

The screenshot shows the 'Record Schedule' configuration interface. It features three tabs: 'Record Schedule' (active), 'Snapshot Schedule', and 'Holiday Schedule'. A legend at the top right indicates that 'General' is checked (green), 'Motion' is checked (yellow), and 'Alarm' is checked (red). The main area is a 24-hour grid for each day of the week (Sunday through Saturday) and a 'Holiday' row. The grid shows recording schedules with yellow bars for Motion and red bars for Alarm. Each day has a 'Setup' button to its right. At the bottom, there are 'Default', 'Refresh', and 'Save' buttons.

On the **Record Schedule** tab, click the **Setup** buttons to configure weekend, weekday, and holiday settings, for general video recording as well as motion detection and alarm recording.

The screenshot shows a 'Setup' dialog box with a close button (X) in the top right corner. It contains a list of days: All, Sunday, Monday (checked), Tuesday, Wednesday, Thursday, Friday, Saturday, and Holiday. Below this are six recording periods, each with a start and end time and checkboxes for General, Motion, and Alarm recording. The settings for Monday are as follows:

Period	Start Time	End Time	General	Motion	Alarm
Period 1:	00 : 00 : 00	09 : 59 : 59	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Period 2:	21 : 00 : 00	23 : 59 : 59	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Period 3:	10 : 00 : 00	20 : 59 : 59	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Period 4:	00 : 00 : 00	23 : 59 : 59	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Period 5:	00 : 00 : 00	23 : 59 : 59	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Period 6:	00 : 00 : 00	23 : 59 : 59	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

At the bottom of the dialog are 'Save' and 'Cancel' buttons.

You can configure up to 6 different recording periods per day. Click **Save** to apply the settings.

Follow the same procedure to configure the settings on the **Snapshot Schedule** tab.

On the **Holiday Schedule** tab, you can designate holidays by clicking dates on the calendar.

The screenshot shows a 'Holiday Schedule' interface. At the top, there are checkboxes for 'Record' and 'Snapshot', both of which are checked. Below this is a calendar for the month of 'Jan'. The calendar grid shows days from 1 to 31. At the bottom of the calendar are 'Refresh' and 'Save' buttons.

On the selected dates, the video recording/snapshot schedule will follow the holiday settings you configured in the **Record Schedule** and **Snapshot Schedule** tabs. Click **Save** to apply the settings.

## Configuring Storage Settings

You can configure recording storage settings on the **Setup > Storage Setup > Destination** page.

## Configuring Storage Paths

On the **Path** tab, you can specify where you want recorded video and snapshots—whether scheduled or triggered by a motion detection or alarm event—to be saved: to a local SD card, to an FTP server, or to an NAS disk.

Record				Snapshot			
Event Type	Scheduled	Motion Detect	Alarm	Event Type	Scheduled	Motion Detect	Alarm
Local	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Local	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
FTP	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	FTP	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
NAS	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	NAS	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Buttons: Default, Refresh, Save

Select which recorded events you want to save and where you want to save them, then click **Save** to apply the settings.

---

**Note** Only one network storage option can be used at a time. FTP and NAS cannot be used together.

---

## Configuring the Local SD Card for Storage

If the camera has a microSD card installed, the **Local** tab displays the microSD card details.

Device Name	Status	Properties	Used Capacity/Total Capacity
Local Disk1	Normal	Read & Write	4551.8M/30592M

Buttons: Read-Only, Read & Write, Hot Swap, Refresh, Format

You can set up the installed microSD card for read-only, read-and-write, or hot swap operation by clicking the corresponding button.

- **Read Only:** Data on card can be displayed but not modified.
- **Read & Write:** Data on card can be displayed and modified.
- **Hot Swap:** Card can be inserted or removed without turning off the camera.

If you want to erase all of the data on the microSD card, click **Format**. A confirmation message appears. Click **OK** to continue. The card is formatted and the camera reboots.

## Configuring an FTP Server for Storage

On the **FTP** tab, you can enable FTP storage and configure storage settings.

The screenshot shows the configuration page for FTP storage. At the top, there are four tabs: Path, Local, FTP (selected), and NAS. Below the tabs, there is a section for enabling FTP storage. An 'Enable' checkbox is checked. Below it are several input fields: 'Server Address' with '0.0.0.0', 'Port' with '21' (with a range '(0-65535)' to its right), 'User Name' with 'anonymity', 'Password' (empty), and 'Remote Directory' with 'share'. At the bottom left, there is a 'Panic Save (Local)' checkbox which is unchecked. At the bottom right, there are three buttons: 'Default', 'Refresh', and 'Save'.

### To enable FTP storage:

1. Select the **Enable** check box.
2. In the **Server Address** and **Port** fields, enter the address and port number of the FTP server.
3. In the **User Name** and **Password** fields, enter the user name and password of the server.
4. In the **Remote Directory** field, enter the directory on the server where the recorded video/snapshot files will be stored.
5. Click **Save** to apply the settings.

### Panic Save

To save recorded video/snapshots to the camera's microSD card when the network connection to the FTP is offline or unavailable, select the **Panic Save (Local)** check box, and then click **Save** to apply the setting.

## Configuring an NAS Disk for Storage

On the **NAS** tab, you can enable network attached storage and configure storage settings.

The screenshot shows the configuration page for NAS storage. At the top, there are four tabs: Path, Local, FTP, and NAS (selected). Below the tabs, there is a section for enabling NAS storage. An 'Enable' checkbox is checked. Below it are two input fields: 'Server Address' with '0.0.0.0' and 'Remote Directory' (empty). At the bottom right, there are three buttons: 'Default', 'Refresh', and 'Save'.

### To enable network attached (NAS) storage:

1. Select the **Enable** check box.
2. In the **Server Address** field, enter the address of the NAS server.
3. In the **Remote Directory** field, enter the directory on the server where the recorded video/snapshot files will be stored.
4. Click **Save** to apply the settings.

## Configuring Recording Settings

You can configure recording settings on the **Setup > Storage Setup > Record Control** page.

By default, recorded video files are 8 minutes or 30 minutes long (depending on your camera model). To change this setting, enter a time between **1** and **120** minutes in the **Record Length** field.

By default, the pre-event record time (the number of seconds the system stores in a buffer) is 5 seconds. To change this setting, enter a time between **0** and **5** seconds in the **Pre-Event Record** field.

From the **Disk Full** list, select **Overwrite** or **Stop**.

- **Overwrite:** Recording continues when disk capacity is reached and overwrites previously saved video.
- **Stop:** Recording stops when disk capacity is reached. Nothing is overwritten and no further video is recorded.

Set **Record Mode** to **Auto**, **Manual**, or **Off**.

- **Auto:** Video records continuously.
- **Manual:** Video recording must be initiated by user.
- **Off:** Video recording is disabled.

From the **Record Stream** list, select the stream profile that you want to use for recording video: **Main Stream** or **Sub Stream**.

Click **Save** to apply the settings.





# 8


## Configuring System Settings

This chapter contains the following sections:

- [Configuring General System Settings, page 73](#)
- [Configuring Date and Time Settings, page 74](#)
- [Configuring Account Settings, page 75](#)
- [Resetting the Camera, page 80](#)
- [Backing Up/Restoring a Configuration, page 80](#)
- [Configuring Maintenance Settings, page 81](#)
- [Upgrading the Firmware, page 81](#)
- [Viewing Version Information, page 82](#)
- [Managing Logs, page 82](#)
- [Viewing Online Users, page 84](#)

## Configuring General System Settings

You can configure the device name, user interface language, video standard, analog output, and status LED settings on the **Setup > System Setup > General** page.

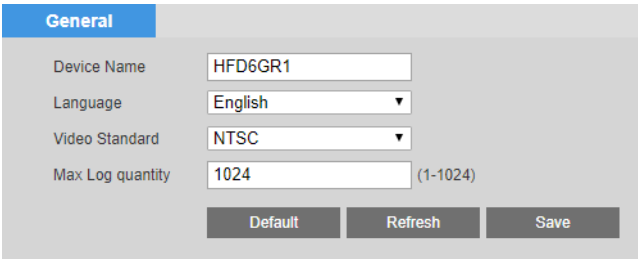

The screenshot shows the 'General' configuration page with the following fields and controls:

General	
Device Name	<input type="text" value="HFD6GR1"/>
Language	<input type="text" value="English"/> ▼
Video Standard	<input type="text" value="NTSC"/> ▼
Max Log quantity	<input type="text" value="1024"/> (1-1024)
<input type="button" value="Default"/> <input type="button" value="Refresh"/> <input type="button" value="Save"/>	

To change the device name, in the **Device Name** field, enter a new name, and then click **Save**.

To change the interface language, select a language from the **Language** list, and then click **Save**.

To change the video standard, select **NTSC** or **PAL** from the **Video Standard** list, and then click **Save**.

To change the **Max Log Quantity**, enter a value between **1** and **1024**, and then click **Save**.

## Configuring Date and Time Settings

You can configure the date and time settings on the **Setup > System Setup > Date & Time** page.

### Changing the Date and Time Format

You can change the format of the date and time that appear in the text overlay on the video.

To change the date format, select one of the following formats from the **Date Format** list: **Year-Month-Day**, **Month-Day-Year**, or **Day-Month-Year**. Click **Save** to apply the settings.

To change the time format, select **24\_Hour\_Standard** or **12\_Hour\_Standard** from the **Time Format** list.

### Setting the Date and Time

There are three ways you can set the camera's date and time. You can manually enter the date and time, synchronize with your PC's internal clock, or set up the camera to synchronize automatically with a Network Time Protocol (NTP) server at regular intervals.

To manually set the date and time, enter the date and time in the **Current Time** fields, and then click **Save**.

To synchronize the date and time with your PC, click **Sync PC**. If the synchronization is successful, the message "Save succeeded" appears. You must manually click **Sync PC** each time you want the date and time to synchronize with the PC.

#### To synchronize the time with an NTP server:

1. From the **Time Zone** list, select your time zone.
2. If you are in an area that observes Daylight Saving Time (DST):
  - a. Select the **Enable DST** check box.
  - b. Set **DST Type** to **Week**.
  - c. Set **Start Time** to **Mar 2nd Sunday 02:00:00 AM**.
  - d. Set **End Time** to **Nov 1st Sunday 02:00:00 AM**.

3. Select the **Synchronize with NTP** check box.
4. If you want, you can change the **NTP Server** from the default (time-a.nist.gov).
5. In **Update Period** field, enter the interval at which you want the camera's date and time to synchronize with the NTP server. You can enter a value between **0** and **30**.
6. Click **Save** to apply the settings.

## Configuring Account Settings

You can manage user accounts and permissions on the **Setup > System Setup > Account** page.

The screenshot shows the 'Account' management page. At the top, there is a blue 'Account' tab and a help icon. Below the tab is a table with columns for 'User Name' and 'Group'. The main table has columns for 'No.', 'User Name', 'Group Name', 'Remark', 'Modify', and 'Delete'. One user is listed: 'admin' in the 'admin' group, with the remark 'admin's account'. Below the table is an 'Authority List' section with a grid of permissions: Live, Playback, Record Control, Backup, PTZ, User Management, Alarm, Log Search, Clear Log, Upgrade, Auto Maintain, General, Video/Audio, Schedule/Destination, Network, Event, Video Detection, PTZ Settings, Restore Defaults, Camera Properties, and IVS. An 'Add User' button is located at the bottom left.

No.	User Name	Group Name	Remark	Modify	Delete
1	admin	admin	admin's account		

**Authority List**

Live	Playback	Record Control	Backup	PTZ
User Management	Alarm	Log Search	Clear Log	Upgrade
Auto Maintain	General	Video/Audio	Schedule/Destination	Network
Event	Video Detection	PTZ Settings	Restore Defaults	Camera Properties
IVS				

**Add User**

## Managing Groups

By default, there are two categories or "groups" of users: **admin** and **user**. If you want, you can create additional custom groups.

### Creating a Group

You can create a new custom group and assign permissions to it.

**To create a group:**

1. On the **Group** tab, click **Add Group** to open the **Add Group** window.

The screenshot shows a dialog box titled "Add Group" with a close button (X) in the top right corner. Inside the dialog, there are three main sections:
 

- Group:** A text input field.
- Remark:** A text input field.
- Authority List:** A list of permissions with checkboxes:
  - All
  - Live
  - Playback
  - Record Control
  - Backup

 At the bottom of the dialog, there are two buttons: "Save" and "Cancel".

2. Enter a name for the group in the **Group** field.
3. If you want, you can enter a brief description in the **Remark** field.
4. From the **Authority List**, select permissions for the group (see [Table 8-1](#)).

**Table 8-1 Permissions**


<b>Name</b>	<b>Description</b>
Live	The user can view live video and access all of the controls in the <b>Live</b> interface.
Playback	The user can play back recorded video and access all of the controls in the <b>Playback</b> interface.
Record Control	The user can access the settings in <b>Setup &gt; Storage Setup &gt; Record Control</b> .
Backup	The user can save and export video clips in the <b>Playback</b> interface.
User Management	The user can access the settings in <b>Setup &gt; System Setup &gt; Account</b> .
Alarm	The user can access the settings in <b>Setup &gt; Alarm Setup &gt; Alarm</b> .
Log Search	The user can search logs in <b>Setup &gt; Information &gt; Log</b> .
Clear Log	The user can clear logs in <b>Setup &gt; Information &gt; Log</b> .
Upgrade	The user can upgrade firmware in <b>Setup &gt; System Setup &gt; Upgrade</b> .
Auto Maintain	The user can access the settings in <b>Setup &gt; System Setup &gt; Auto Maintain</b> .
General	The user can access the settings in <b>Setup &gt; System Setup &gt; General</b> .
Video/Audio	The user can access the settings in <b>Setup &gt; Compression Setup &gt; Video</b> and in <b>Setup &gt; Audio Setup</b> .
Schedule/Destination	The user can access the settings in <b>Setup &gt; Storage Setup &gt; Schedule</b> and in <b>Setup &gt; Storage Setup &gt; Destination</b> .
Network	The user can access the settings in <b>Setup &gt; Network Setup</b> .
Event	The user can access the settings in <b>Setup &gt; Alarm Setup &gt; Event</b> .
Video Detection	The user can access the settings in <b>Setup &gt; Video Analytics &gt; Video Detect</b> .
Restore Defaults	The user can access the settings in <b>Setup &gt; System Setup &gt; Default</b> .
Camera Properties	The user can access the settings in <b>Setup &gt; Camera Setup &gt; Properties</b> .
IVS	The user can access the settings in <b>Setup &gt; Video Analytics</b> .


5. Click **Save** to apply the settings. The group is added to the list.

## Modifying a Group

You can modify the permissions of the administrator group, user group, and any custom groups that you have created.

### To modify a group:

1. On the **Group** tab, select the group that you want to modify (your selection will be highlighted yellow), and then click the **Modify** icon  to open the **Modify Group** window.

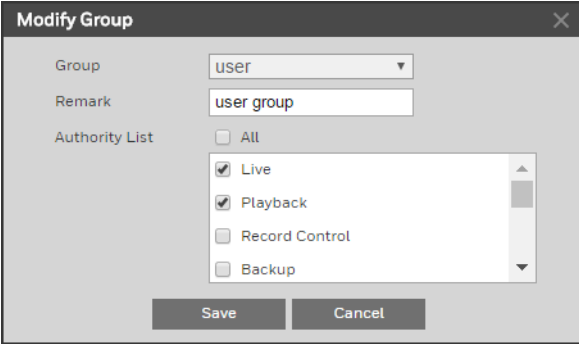


2. If you want, you can edit the description in the **Remark** field.
3. From the **Authority List**, select or deselect specific permissions for the group (see [Table 8-1](#)), or select the **All** check box to select/deselect all of the permissions.
4. Click **Save** to apply the settings.

## Deleting a Group

You can delete any custom group that you have created (you cannot delete the administrator group or the user group).

### To delete a group:

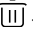1. On the **Group** tab, select the group that you want to delete (your selection will be highlighted yellow), and then click the **Delete** icon .
2. A confirmation message appears. Click **OK** to continue. The group is removed from the list.

## Managing Users

You can create, modify, or delete a user account.

### Creating a User Account

You can create a new user account and assign permissions to it.

**To create a user account:**

1. On the **User Name** tab, click **Add User** to open the **Add User** window.

2. Assign the account a user name and password.
  - a. In the **User Name** field, enter a unique user name.
  - b. In the **Password** field, enter a password. The password must be at least 8 characters in length and contain a combination of uppercase and lowercase letters, at least one number, and at least one special character.
3. Assign the account to a group (**admin**, **user**, or a custom group that you have created) chosen from the **Group** list.
4. If you want, you can enter a brief description in the **Remark** field.
5. From the **Authority List**, select permissions for the account (see [Table 8-1](#)).

---

**Note** Each user is assigned to a group. The individual user's permissions cannot exceed those of the group to which the user belongs. To modify permissions at the group level, see [Modifying a Group](#) on page 77.


---


6. Click **Save** to apply the settings. The user account is added to the list.

## Modifying a User Account

You can modify the user name, password, and permissions of a user account.

### To modify a user account:

1. On the **User Name** tab, select the user account that you want to modify (your selection will be highlighted yellow), and then click the **Modify** icon  to open the **Modify User** window.

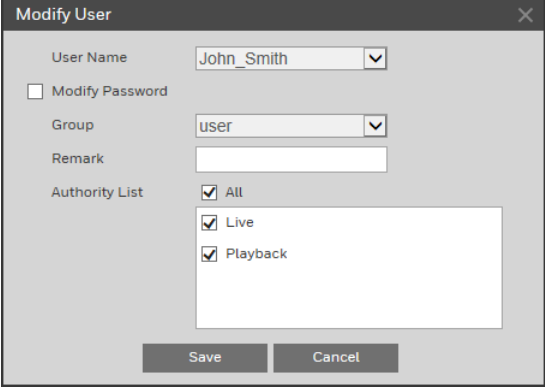

2. To change the password, select the **Modify Password** check box, enter the **Old Password** and the **New Password** in the corresponding fields, and then re-enter the new password in the **Confirm Password** field.
3. To change the group, select a group from the **Group** list.
4. If you want, you can edit the description in the **Remark** field.
5. From the **Authority List**, select or deselect specific permissions for the account (see [Table 8-1](#)), or select **All** to select/deselect all of the available permissions.

---

**Note** Each user is assigned to a group. The individual user's permissions cannot exceed those of the group to which the user belongs. To modify permissions at the group level, see [Modifying a Group](#) on page 77.


---

6. Click **Save** to apply the settings.

## Deleting a User Account


You can delete any user account that you have created (you cannot delete the admin user).

### To delete a user account:

1. On the **User Name** tab, select the user account that you want to delete (your selection will be highlighted yellow), and then click the **Delete** icon .
2. A confirmation message appears. Click **OK** to continue. The user account is removed from the list.

## Resetting the Camera

You can reset the camera to its factory default settings on the **Setup > System Setup > Default** page.



---

**Note** Some configuration information, including the IP address, will be lost when the camera reverts to its factory default settings.


---

**To reset the camera:**

1. Click **Default**.
2. A confirmation message appears. Click **OK** to continue. The camera reboots automatically and reverts to its factory default settings.

## Backing Up/Restoring a Configuration

You can back up or restore configuration settings on the **Setup > System Setup > Import/Export** page.

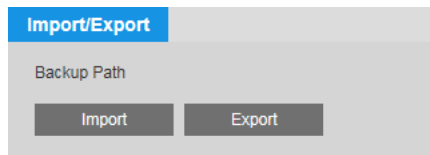

**To back up a configuration:**

1. Click **Export**. The **Save As** window opens.
2. By default, the backup file is named **DeviceConfig.backup**. Rename the file if you want, navigate to the directory where you want to save the file, and then click **Save**. The file path is displayed under **Backup Path**.


**To restore a saved configuration:**

1. Click **Import**. The directory displayed under **Backup Path** opens in a new window.
2. Click the backup file (for example, **DeviceConfig.backup**). The configuration settings are applied immediately.



## Configuring Maintenance Settings

Two automatic maintenance functions are available on the **Setup > System Setup > Auto Maintain** page. You can set up the camera to reboot daily or weekly and delete old files automatically.

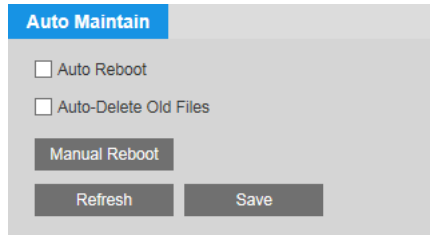

To enable the auto reboot function, select the **Auto Reboot** check box, and then specify the reboot schedule (for example, every Tuesday at 2 a.m.). Click **Save** to apply the settings.

To enable the auto delete function, select the **Auto Delete Old Files** check box, and then specify the age (in days) of the files to be deleted. For example, if you enter **30**, files that are 30 days old and older will be deleted automatically. Click **Save** to apply the settings.

## Upgrading the Firmware

You can upgrade the camera firmware on the **Setup > System Setup > Upgrade** page.




---

**Note** Before you begin, you will need to obtain the new firmware and save it to your PC or to an external drive.

---

### To upgrade the firmware:

1. Click **Import**.
2. Navigate to the location of the firmware file (.bin), select it, and then click **Open**. The file name appears in the **Firmware File** field.
3. Click **Upgrade** to install the firmware.
4. Reboot the camera.

---

**Note** If you attempt to install an older version of the firmware, a warning message will appear.

---

## Viewing Version Information

You can view the camera's firmware version, web client version, ONVIF version, and serial number on the **Setup > Information > Version** page.

## Managing Logs

You can view, back up, and delete log files on the **Setup > Information > Log** page.

The screenshot shows the 'Log' management interface. At the top, there are search filters for 'Start Time' (2017-02-20 10:45:06) and 'End Time' (2017-02-21 10:45:06). Below these is a dropdown for 'All Types' set to 'All' and a 'Search' button. A status message indicates 'found 14 log(s) Time 2017-02-20 19:44:31 -- 2017-02-21 10:00:09'. The main area contains a table with the following data:

No.	Log Time	User Name	Event
1	2017-02-21 10:00:09	admin	Logout
2	2017-02-21 09:55:36	admin	Login
3	2017-02-21 09:54:50	System	Save Configuration
4	2017-02-21 09:54:50	System	Save Configuration
5	2017-02-21 09:54:50	System	Save Configuration
6	2017-02-21 09:54:50	System	Save Configuration
7	2017-02-21 09:54:26	System	Start
8	2017-02-21 09:54:26	System	Abort

Below the table is a 'System Log Information' section with fields for Time, User Name, Type, and Content. At the bottom, there are 'Backup' and 'Clear' buttons, and a pagination control showing '1 / 1'.


## Viewing Logs

There are six log types: System, Setting, Data, Event, Record, and Account.

### To view logs by type:

1. Enter the **Start Time** and **End Time** search parameters.
2. From the **All Types** list, select the log type(s) that you want to retrieve, and then click **Search**. The logs are listed by time, user name, and event (if applicable).

- To view detailed information about a specific log, click the log. The information is displayed in the **System Log Information** box.

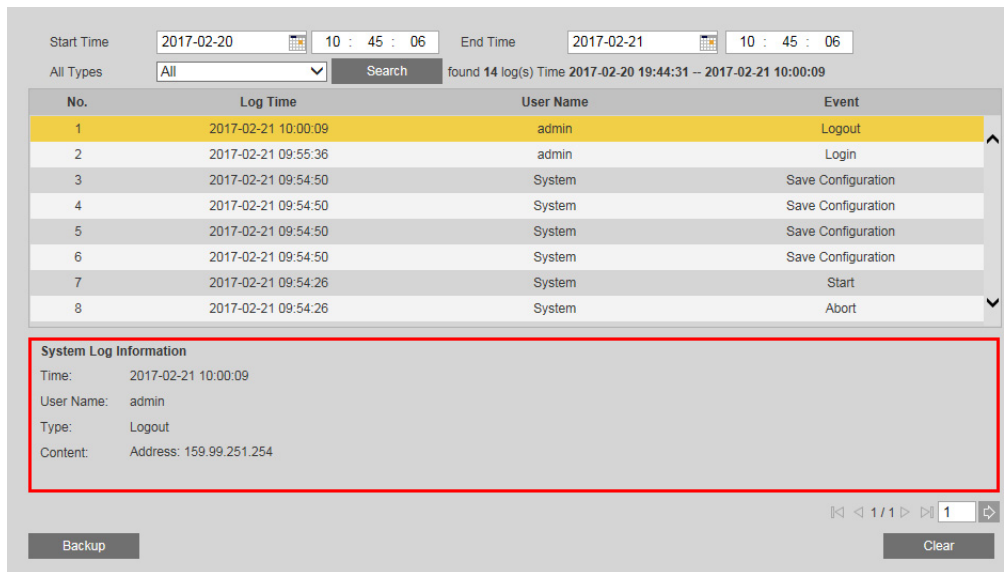

## Backing Up Logs

To back up a log:

- Click **Backup**. The **Save As** window opens.
- By default, the backup file is named **LogBackup[YYYY-MM-DD].txt**. Rename the file if you want, locate the directory where you want to save the file, and then click **Save**.


## Deleting Logs

To delete all logs:

- Click **Clear**.
- A confirmation message appears. Click **OK** to continue. All of the logs that you have not backed up are deleted.

## Viewing Online Users

You can see which users are currently online on the **Setup > Information > Online User** page. The users are listed by user name, IP address, and login time. To refresh the list, click **Refresh**.

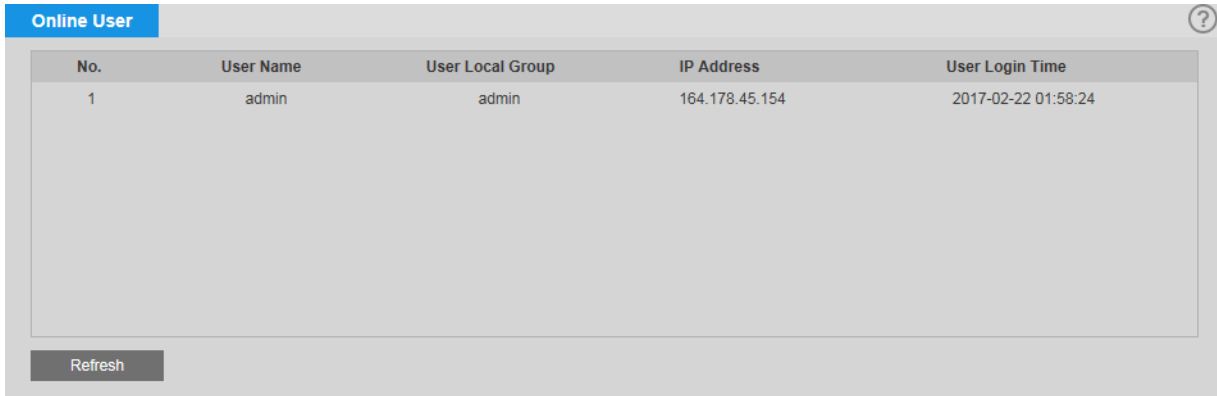

The screenshot shows a web interface titled "Online User" with a help icon in the top right corner. Below the title is a table with the following columns: "No.", "User Name", "User Local Group", "IP Address", and "User Login Time". The table contains one row of data. Below the table is a "Refresh" button.

No.	User Name	User Local Group	IP Address	User Login Time
1	admin	admin	164.178.45.154	2017-02-22 01:58:24

Refresh



# Technical Specifications

## HFD6GR1 Fisheye Camera

Table A-1 HFD6GR1 Specifications

Camera	
Video Standard	NTSC/PAL
Image Sensor	1/1.8" 6 MP progressive scan CMOS
Number of Pixels (H×V)	3072×2048
Minimum Illumination	0.01 lux (color), 0 lux (b/w with IR LEDs on) @ F2.0
Lens	1.7 mm, fixed fisheye lens, F2.0
Horizontal Angle of View	185°
S/N Ratio	50 dB or more
Electronic Shutter Speed	Auto, Manual, 1/3(4)–1/100 000 s
IR Distance	Up to 25 ft (8 m), depending on scene reflectance
Day/Night	Auto(ICR)/Color/BW
Backlight Compensation	BLC/HLC/DWDR
Wide Dynamic Range	Digital WDR
White Balance	Auto/Natural/Street Lamp/Outdoor/Customize Region
Gain Control	Auto/Manual
Noise Reduction	3DNR
Privacy Masking	Up to 4 configurable areas
Corridor Mode	Yes
Audio/Two-Way	Line In/Out, 1 built-in mic
Alarm Input/Output	2/2
Onboard Storage	Up to 128 GB microSD card, Class 10 (not included)

<b>Network</b>		
<b>Video Compression</b>	H.265/H.264/MJPEG	
<b>Resolution</b>	<b>4:3</b>	3 MP (2048×1536) / UXGA (1600×1200) / 1.3 MP (1280×960)
	<b>Other</b>	6 MP (3072×2048) / 4 MP (2048×2048) / D1 (704×576/704×480) / CIF (352×288/352×240)
<b>Frame Rate</b>	<b>Main Stream</b>	6 MP (3072×2048) / 4 MP (2048×2048) / 3 MP (2048×1536) / UXGA (1600×1200) at up to 25/30 fps
	<b>Sub Stream</b>	D1/CIF up to 25/30 fps
	<b>Triple Stream</b>	1.3 MP/D1 up to 25/30 fps
<b>Audio Compression</b>	G.711a/G.711mu/AAC/G.726/MPEG2-Layer 2/G.722.1/G.729	
<b>Audio Stream</b>	Full duplex, simplex	
<b>Ethernet</b>	RJ-45 (10/100/1000Base-T)	
<b>Protocols</b>	IPv4/v6, TCP/IP, UDP, RTP, RTSP, HTTP, HTTPS, SSL, ICMP, FTP, SMTP, DHCP, PPPoE, UPnP, IGMP, SNMP, Bonjour, DNS, DDNS, IEEE 802.1X, QoS, NTP, IP Filter, Multicast, ONVIF	
<b>Compatibility</b>	ONVIF Profile S/G	
<b>Max. Users</b>	20	
<b>Supported Web Browsers</b>	Internet Explorer (11.0+), Firefox, Chrome	
<b>Supported OS</b>	Windows 7, 32-bit/64-bit, Windows 10	
<b>Security</b>	Multiple user access levels with enhanced password policy, IP filtering, IEEE 802.1X, strong digest authentication for access permission, HTTPS, TLS1.2 only, high-strength encrypted algorithm AES-256, SSH/Telnet closed, FTP disabled to reduce surface being attacked, PCI-DSS compliant, built-in cybersecurity hardware chipset	
<b>Languages</b>	English, Arabic, Czech, Dutch, French, German, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Turkish	
<b>General</b>		
<b>Input Voltage</b>	PoE (802.3af) Class 0, 12 VDC	
<b>Power Consumption</b>	10 W max. (IR LEDs on)	
<b>Dimensions</b>	5.9 × 2.2 in. (150.2 × 55.8 mm)	
<b>Weight</b>	1.1 lb (0.5 kg)	
<b>Construction</b>	Die-cast aluminum housing with powder coat	
<b>Color</b>	RAL 9003 (White)	
<b>Temperature</b>	-22°F to 140°F (-30°C to 60°C)	
<b>Relative Humidity</b>	Less than 95%, non-condensing	
<b>Ingress Protection</b>	IP67	
<b>Impact Resistance</b>	IK10	

<b>General</b>		
<b>Regulatory</b>	<b>Emissions</b>	EN 55032, FCC Part 15B, AS/NZ CISPR 22:2009 + A1 (2010)
	<b>Immunity</b>	EN 50130-4
	<b>Safety</b>	EN 60950-1, EN 60950-22, UL Listed to UL/CSA 60950-1, UL/CSA 60950-22
	<b>RoHS</b>	EN 50581
<b>Integration</b>		
<b>MAXPRO NVR Family</b>	Entry to Enterprise Level Network Video Recorders (4.0 and greater)	
<b>MAXPRO VMS Family</b>	Entry to Enterprise Level Network Video VMS (R410 and greater)	
<b>DVM</b>	DVM R600.1 SP1	
<b>HUS</b>	HUS 5.1	
<b>Accessories</b>	HFG-WK Wall Mount Bracket HFG-PK Pendant Mount Bracket HB4G-PM Pole Mount Adapter HB34G-CM Corner Mount Adapter	

## HFD8GR1 Fisheye Camera

Table A-2 HFD8GR1 Specifications

Camera		
Video Standard	NTSC/PAL	
Image Sensor	1/1.7" 12 MP progressive scan CMOS	
Number of Pixels (H×V)	4000×3000	
Minimum Illumination	0.01 lux (color), 0 lux (b/w with IR LEDs on) @ F2.8	
Lens	1.98 mm, fixed fisheye lens, F2.8	
Horizontal Angle of View	185°	
S/N Ratio	50 dB or more	
Electronic Shutter Speed	Auto, Manual, 1/3(4)–1/100 000 s	
IR Distance	Up to 25 ft (8 m), depending on scene reflectance	
Day/Night	Auto(ICR)/Color/BW	
Backlight Compensation	BLC/HLC/DWDR	
Wide Dynamic Range	Digital WDR	
White Balance	Auto/Natural/Street Lamp/Outdoor/Customize Region	
Gain Control	Auto/Manual	
Noise Reduction	3DNR	
Privacy Masking	Up to 4 configurable areas	
Corridor Mode	Yes	
Audio/Two-Way	Line In/Out, 1 built-in mic	
Alarm Input/Output	2/2	
Onboard Storage	Up to 128 GB microSD card, Class 10 (not included)	
Network		
Video Compression	H.265/H.264/MJPEG	
Resolution	4:3	12 MP (4000×3000) / 6 MP (2880×2160) / 3 MP (2048×1536) / 1.3 MP (1280×960)
	Other	8 MP (2880×2880) / D1 (704×576/704×480) / CIF (352×288/352×240)
Frame Rate	Main Stream	12 MP (4000×3000) up to 25 fps / 8 MP (2880×2880) / 6 MP (2880×2160) / 3 MP (2048×1536) up to 25/30 fps
	Sub Stream	D1/CIF up to 25/30 fps
	Triple Stream	1.3 MP/D1 up to 25/30 fps
Audio Compression	G.711a/G.711mu/AAC/G.726/MPEG2-Layer 2/G.722.1/G.729	
Audio Stream	Full duplex, simplex	
Ethernet	RJ-45 (10/100/1000Base-T)	



<b>Network</b>		
<b>Protocols</b>	IPv4/v6, TCP/IP, UDP, RTP, RTSP, HTTP, HTTPS, SSL, ICMP, FTP, SMTP, DHCP, PPPoE, UPnP, IGMP, SNMP, Bonjour, DNS, DDNS, IEEE 802.1X, QoS, NTP, IP Filter, Multicast, ONVIF	
<b>Compatibility</b>	ONVIF Profile S/G	
<b>Max. Users</b>	20	
<b>Supported Web Browsers</b>	Internet Explorer (11.0+), Firefox, Chrome	
<b>Supported OS</b>	Windows 7, 32-bit/64-bit, Windows 10	
<b>Security</b>	Multiple user access levels with enhanced password policy, IP filtering, IEEE 802.1X, strong digest authentication for access permission, HTTPS, TLS1.2 only, high-strength encrypted algorithm AES-256, SSH/Telnet closed, FTP disabled to reduce surface being attacked, PCI-DSS compliant, built-in cybersecurity hardware chipset	
<b>Languages</b>	English, Arabic, Czech, Dutch, French, German, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Turkish	
<b>General</b>		
<b>Input Voltage</b>	PoE (802.3af) Class 0, 12 VDC	
<b>Power Consumption</b>	10 W max. (IR LEDs on)	
<b>Dimensions</b>	5.9 × 2.2 in. (150.2 × 55.8 mm)	
<b>Weight</b>	1.1 lb (0.5 kg)	
<b>Construction</b>	Die-cast aluminum housing with powder coat	
<b>Color</b>	RAL 9003 (White)	
<b>Temperature</b>	-22°F to 140°F (-30°C to 60°C)	
<b>Relative Humidity</b>	Less than 95%, non-condensing	
<b>Ingress Protection</b>	IP67	
<b>Impact Resistance</b>	IK10	
<b>Regulatory</b>	<b>Emissions</b>	EN 55032, FCC Part 15B, AS/NZ CISPR 22:2009 + A1 (2010)
	<b>Immunity</b>	EN 50130-4
	<b>Safety</b>	EN 60950-1, EN 60950-22, UL Listed to UL/CSA 60950-1, UL/CSA 60950-22
	<b>RoHS</b>	EN 50581
<b>Integration</b>		
<b>MAXPRO NVR Family</b>	Entry to Enterprise Level Network Video Recorders (4.0 and greater)	
<b>MAXPRO VMS Family</b>	Entry to Enterprise Level Network Video VMS (R4.10 and greater)	

---

<b>Integration</b>	
<b>DVM</b>	DVM R600.1 SP1
<b>HUS</b>	HUS 5.1
<b>Accessories</b>	HFG-WK Wall Mount Bracket HFG-PK Pendant Mount Bracket HB4G-PM Pole Mount Adapter HB34G-CM Corner Mount Adapter

---

# Index

## Numerics

3DNR (3D digital noise reduction), [30](#)  
802.1X, [53](#)

## A

account settings, [75–79](#)  
adaptive screen mode, [19](#)  
alarm output button, [20](#)  
alarm recording, [25, 68](#)  
alarms  
    manually generating/canceling alarm output, [20](#)  
    settings, [55–56](#)  
anti-flicker, [30](#)  
ARP/ping, [43](#)  
audio  
    enabling/disabling audio input, [20](#)  
    enabling/disabling bidirectional talk, [20](#)  
    event detection, [63–64](#)  
    properties, [39](#)  
audio button, [20](#)  
authority list, [76](#)  
auto delete, [81](#)  
auto reboot, [81](#)

## B

backing up  
    configurations, [80](#)  
    logs, [83](#)  
batch firmware upgrading, [14](#)  
bit rate, [35](#)  
BLC (backlight compensation), [30](#)  
Bonjour, [52](#)  
brightness, [19, 29](#)

## C

camera profile, [29, 33](#)  
camera specifications, [85–90](#)  
camera version information, [82](#)  
CBR (constant bit rate), [35](#)  
certificates, [54](#)

configuration settings  
    backing up, [80](#)  
    restoring, [80](#)  
contrast, [19, 29](#)  
creating  
    user accounts, [78](#)  
    user groups, [76](#)  
creating video clips, [26](#)

## D

date and time settings, [74–75](#)  
day and night settings, [31](#)  
DDNS (Dynamic DNS), [46](#)  
default settings, restoring, [80](#)  
defocus detection, [61](#)  
defog, [31](#)  
deleting  
    logs, [83](#)  
    user accounts, [79](#)  
    user groups, [77](#)  
device name, [73](#)  
digital zoom, [20](#)  
downloading  
    snapshots, [27](#)  
    video clips, [26](#)  
    video files, [26](#)  
DST (daylight saving time), [74](#)

## E

email settings, [49](#)  
events  
    alarm, [55–56](#)  
    audio [63–64](#)  
    camera tampering, [61–62](#)  
    capacity warning, [57](#)  
    illegal access, [58](#)  
    IP conflict, [57](#)  
    motion detection, [59–61](#)  
    network disconnection, [57](#)  
    no SD card, [57](#)  
    scene change, [62–63](#)  
    SD card error, [57](#)  
    system, [57–59](#)

exposure settings, [30](#)

## F

firmware

- upgrading, [14, 81](#)
- version, [82](#)

fluency, [19](#)

frame rate, [35](#)

FTP storage, [70](#)

full screen mode, [19](#)

## G

gamma, [29](#)

general video recording, [25, 68](#)

groups

- assigning permissions, [76](#)
- creating, [76](#)
- deleting, [77](#)
- modifying, [77](#)

## H

H.264 (Main Profile), [34](#)

H.264B (Baseline Profile), [34](#)

H.264H (High Profile), [34](#)

HLC (highlight compensation), [30](#)

holiday schedule, [68](#)

HTTP, [44](#)

hue, [19](#)

## I

I-frame interval, [35](#)

illegal access event settings, [58](#)

image adjustment panel, [19](#)

IP address settings, [42](#)

IP filter settings, [47–48](#)

IPC Tool

- assigning new IP address using, [14](#)
- discovering cameras using, [13](#)
- installing, [13](#)
- upgrading firmware using, [14](#)

IVS (intelligent video surveillance), [19, 59–65, ??–65](#)

## L

language, [73](#)

latency, [21](#)

list of symbols, [8](#)

live interface

- configuring, [19](#)
- controls, [19, 20](#)
- overview, [18](#)

live video streaming setup, [21, 34](#)

local storage, [69](#)

login failure, [58](#)

logs

- backing up, [83](#)
- deleting, [83](#)
- viewing, [82](#)

## M

main stream, [21, 34](#)

maintenance settings, [81](#)

manual recording, [25](#)

microphone. See audio

MJPEG, [34](#)

modifying

- user accounts, [79](#)
- user groups, [77](#)

motion detection recording, [25, 68](#)

motion detection settings, [59–61](#)

multicast, [21, 52](#)

## N

NAS (network attached storage), [70](#)

network

- event settings, [57](#)
- IP settings, [42](#)
- maximum connections, [44](#)
- port settings, [44](#)
- security. See certificates

NTP (network time protocol), [74](#)

## O

online users, [84](#)

ONVIF (Open Network Video Interface Forum), [45](#)

original screen mode, [19](#)

## P

panic save, [70](#)

picture settings

- at camera end, [29](#)
- at client end, [19](#)

playback controls, [24, 25](#)

playback interface, [23](#)

playing back video, [25](#)

PPPoE (Point-to-Point Protocol over Ethernet), [45](#)

privacy masks, [36](#)

profile management, [33](#)

protocols, [21](#)

## Q

QoS (Quality of Service), [53](#)

## R

record button, [20](#)

- recording
  - path, [69](#)
  - periods, [68](#)
  - schedule, [68](#)
  - settings, [71](#)
  - storage, [68–70](#)
  - type, [25](#)
- related documents, [12](#)
- resetting camera to defaults, [80](#)
- resolution, [34](#)
- restoring
  - configuration, [80](#)
  - factory defaults [80](#)
- ROI (regions of interest), [38](#)
- RTSP, [44](#)

## S

- safety instructions, [6](#)
- saturation, [19, 29](#)
- scene change settings, [19, 62–63](#)
- screen modes, [19](#)
- SD card events, [57](#)
- serial number, [82](#)
- sharpness, [29](#)
- smoothing. See fluency
- SMTP. See email settings
- snapshots
  - configuring settings, [35](#)
  - downloading, [27](#)
  - schedule, [68](#)
  - taking snapshots of live video, [20](#)
  - taking snapshots of recorded video, [27](#)
  - viewing, [27](#)
- SNMP (Simple Network Management Protocol), [51](#)
- specifications, [85–90](#)
- stream properties, [34](#)
- stream protocols, [21](#)
- stream type, [21](#)
- sub stream 1, [21, 34](#)
- sub stream 2, [21, 34](#)
- symbols used in document, [8](#)
- system event settings, [57–59](#)

## T

- talk button, [20](#)
- tampering detection settings, [61–62](#)
- TCP, [21, 44](#)
- TCP/IP, [42](#)
- timeline
  - controls, [25](#)
  - zooming in/out, [25](#)
- triple snapshot button, [20](#)

## U

- UDP, [21, 44](#)
- upgrading firmware, [14, 81](#)
- UPnP (Universal Plug and Play), [50](#)
- user permissions, [76](#)
- users
  - assigning permissions, [78](#)
  - creating, [78](#)
  - deleting, [79](#)
  - modifying, [79](#)

## V

- VBR (variable bit rate), [35](#)
- video
  - creating clips, [26](#)
  - day&night, [31](#)
  - defog, [31](#)
  - downloading recorded video, [26](#)
  - exporting clips, [26](#)
  - exposure, [30](#)
  - fluency, [19](#)
  - format, [34](#)
  - holiday schedule, [68](#)
  - lighting compensation, [30](#)
  - manually recording live video, [20](#)
  - playing back recorded video, [25](#)
  - recording properties, [71](#)
  - regular schedule, [68](#)
  - setting stream type, [21](#)
  - snapshot schedule, [68](#)
  - storage, [68–70](#)
  - streaming properties, [34](#)
  - taking snapshots of live video, [20](#)
  - taking snapshots of recorded video, [27](#)
  - watermark, [35](#)
  - white balance, [31](#)
- video clips
  - controls, [24](#)
  - creating, [26](#)
  - exporting, [26](#)
- video standard, [73](#)
- viewing logs, [82](#)

## W

- warranty, [7](#)
- watermark, [35](#)
- WDR (wide dynamic range), [30](#)
- web client
  - logging in, [17](#)
  - logging out, [21](#)
- white balance settings, [31](#)

## Z

- zooming in/out, [20](#)





**Honeywell Security Products Americas (Head Office)**

2700 Blankenbaker Pkwy, Suite 150

Louisville, KY 40299, USA

[www.honeywell.com/security](http://www.honeywell.com/security)

☎ +1 800 323 4576

**Honeywell Security Northern Europe**

Ampèrestraat 41

1446 TR Purmerend, The Netherlands

[www.honeywell.com/security/nl](http://www.honeywell.com/security/nl)

☎ +31 (0) 299 410 200

**Honeywell Security Europe/South Africa**

Aston Fields Road, Whitehouse Industrial Estate

Runcorn, WA7 3DL, United Kingdom

[www.honeywell.com/security/uk](http://www.honeywell.com/security/uk)

☎ +44 (0) 1928 754 028

**Honeywell Security Deutschland**

Johannes-Mauthe-Straße 14

72458 Albstadt, Germany

[www.honeywell.com/security/de](http://www.honeywell.com/security/de)

☎ +49 (0) 7431 801-0

**Honeywell Security France**

Immeuble Lavoisier

Parc de Haute Technologie

3-7 rue Georges Besse

92160 Antony, France

[www.honeywell.com/security/fr](http://www.honeywell.com/security/fr)

☎ +33 (0) 1 40 96 20 50

**Honeywell Security Products Americas  
Caribbean/Latin America**

9315 NW 112th Ave.

Miami, FL 33178, USA

[www.honeywell.com/security/clar](http://www.honeywell.com/security/clar)

☎ +1 305 805 8188

**Honeywell Security Italia SpA**

Via della Resistenza 53/59

20090 Buccinasco

Milan, Italy

[www.honeywell.com/security/it](http://www.honeywell.com/security/it)

☎ +39 (0) 2 4888 051

**Honeywell Security Asia Pacific**

35F Tower A, City Center, 100 Zun Yi Road

Shanghai 200051, China

[www.asia.security.honeywell.com](http://www.asia.security.honeywell.com)

☎ +86 21 2219 6888

**Honeywell Security España**

Avenida de Italia, nº 7, 2ª planta

C.T. Coslada

28821 Coslada, Madrid, Spain

[www.honeywell.com/security/es](http://www.honeywell.com/security/es)

☎ +34 902 667 800

**Honeywell Security Middle East/N. Africa**

Emaar Business Park, Sheikh Zayed Road

Building No. 2, Office No. 301

Post Office Box 232362

Dubai, United Arab Emirates

[www.honeywell.com/security/me](http://www.honeywell.com/security/me)

☎ +971 (0) 4 450 5800

**Honeywell Security Россия и СНГ**

121059 Moscow, Ul, Kiev 7

Russia

[www.honeywell.com/security/ru](http://www.honeywell.com/security/ru)

☎ +7 (495) 797-93-71

# Honeywell

[www.honeywell.com/security](http://www.honeywell.com/security)**+1 800 323 4576 (North America only)**<https://www.honeywellsystems.com/ss/techsupp/index.html>

Document 800-23094V1 – Rev A – 11/2017

© 2017 Honeywell International Inc. All rights reserved. No part of this publication may be reproduced by any means without written permission from Honeywell. The information in this publication is believed to be accurate in all respects. However, Honeywell cannot assume responsibility for any consequences resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.